


SIDE VIEW

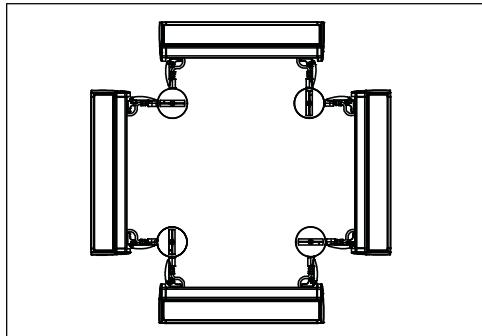

TOP VIEW


ARROWLINEAR INDOOR/OUTDOOR P4 CEILING

Warning: Before starting any work ensure that all sources of power are turned off. All work must meet local/national codes and be performed by a certified electrician. **Do not** mount fixtures vertically. Indoor fixtures cannot be used for outdoor applications.


These installation instructions are valid for the above Arrowlinear mounting option.

Complete Fixture Assembly


(Fixture lengths will vary depending on lamp type; see lamp chart on page 3.)

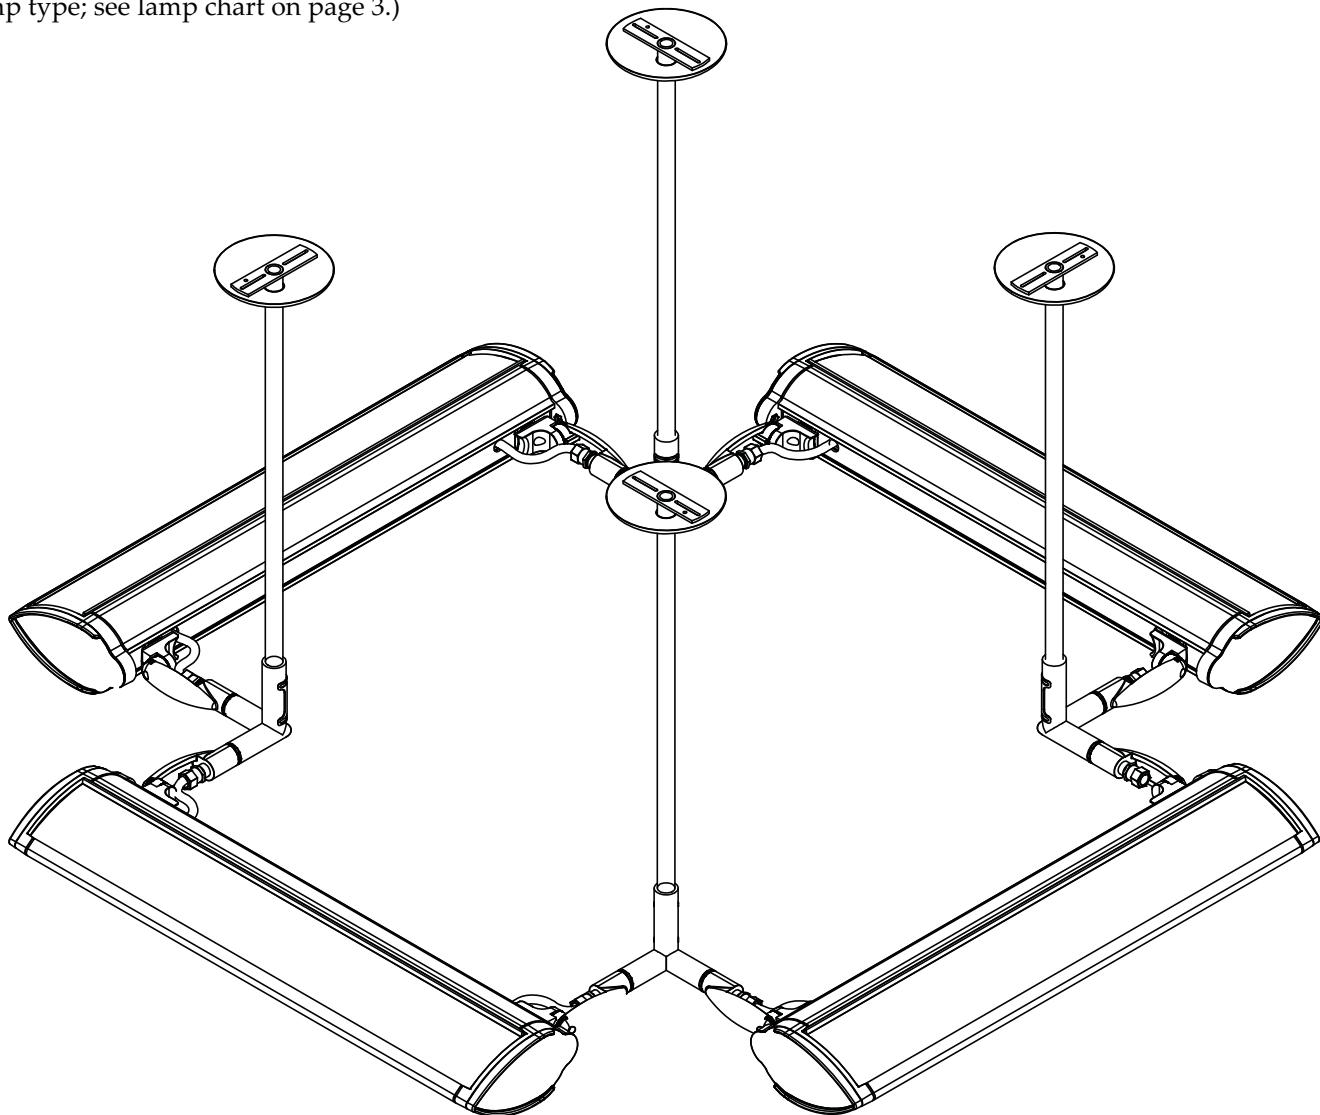

ARROWLINEAR INDOOR/OUTDOOR P4 CEILING

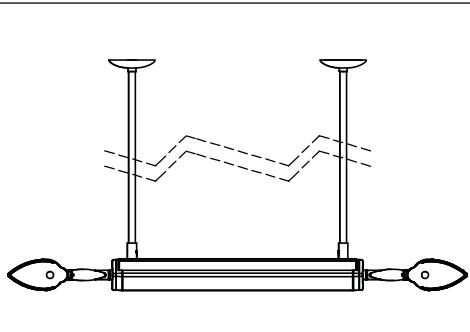

SIDE VIEW

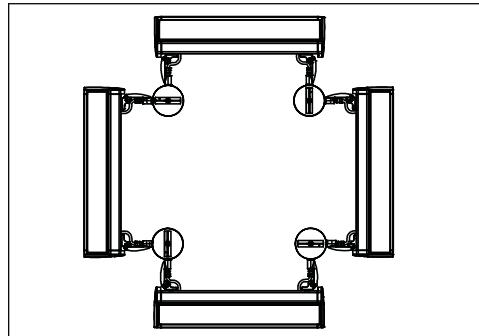


TOP VIEW

Warning: Before starting any work ensure that all sources of power are turned off. All work must meet local/national codes and be performed by a certified electrician. **Do not** mount fixtures vertically. Indoor fixtures cannot be used for outdoor applications.

These installation instructions are valid for the above Arrowlinear mounting option.


Exploded View

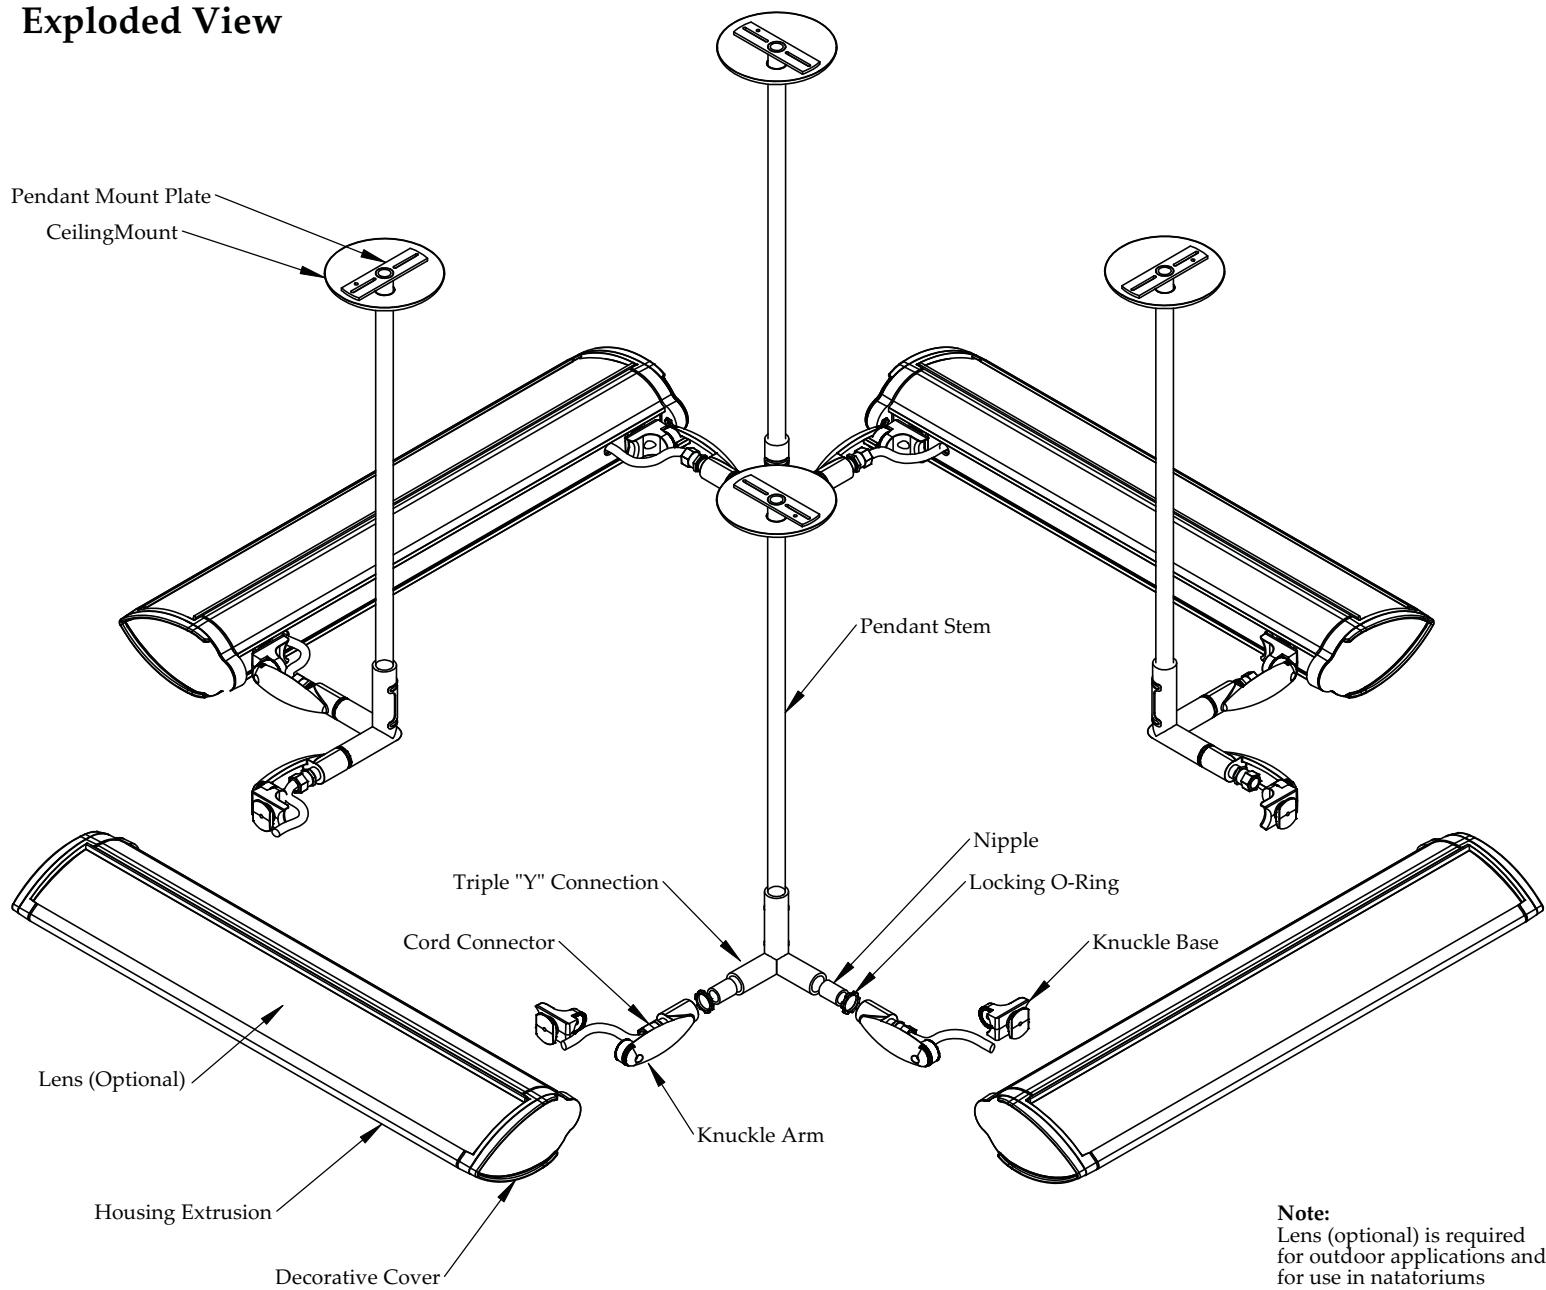

Available Lengths	Available Wattages	Available Lamp Types	Mounting plate centers in(mm)
2FT	14W	(T5)	22 - 13/16IN (580mm)
2FT	17W	(T8)	
2FT	24W	(T5 HO)	
3FT	21W	(T5)	34 - 5/8IN (880mm)
3FT	25W	(T8)	
3FT	39W	(T5 HO)	
4FT	28W	(T5)	46 - 7/16IN (1180mm)
4FT	32W	(T8)	
4FT	54W	(T5 HO)	
4FT	94W	(T5 VHO)	
4FT	84W	(T8 VHO)	
6FT	2 X 21W	(T5)	72 - 29/32IN (1852mm)
6FT	2 X 25W	(T8)	
6FT	2 X 39W	(T5 HO)	
8FT	2 X 28W	(T5)	96 - 17/32IN (2452mm)
8FT	2 X 32W	(T8)	
8FT	2 X 54W	(T5 HO)	
8FT	2 X 95W	(T5 VHO)	
8FT	2 X 84W	(T8 VHO)	
12FT	3 X 28W	(T5)	146 - 27/64IN (379mm)
12FT	3 X 32W	(T8)	
12FT	3 X 54W	(T5 HO)	
12FT	3 X 94W	(T5 VHO)	
12FT	3 X 84W	(T8 VHO)	

ARROWLINEAR INDOOR/OUTDOOR P4 CEILING

Warning: Before starting any work ensure that all sources of power are turned off. All work must meet local/national codes and be performed by a certified electrician. **Do not** mount fixtures vertically. Indoor fixtures cannot be used for outdoor applications.

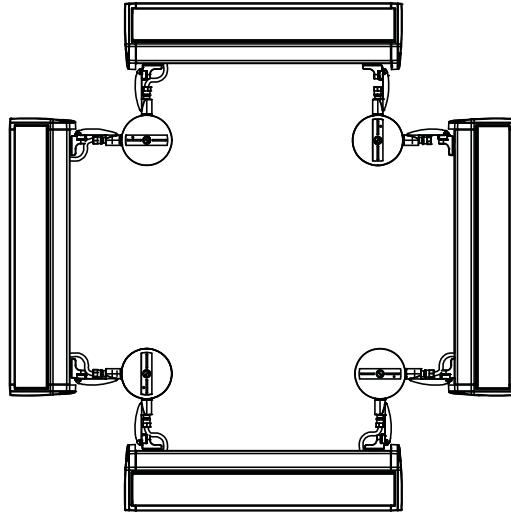


Prior to Roughing in J-Boxes:


1. Determine the location of fixture mounting and verify structure will support the weight of the fixtures. If necessary use additional bracing to support brackets.
2. Install Indoor / Outdoor rated J-Boxes (by others). Refer to **Mounting Power-Side Assembly** for installation details.
3. After assembling the fixture, using the dimensions provided in the lamp table, follow the instructions below.

1. Mounting the Power-Side Assembly

1. After fixture is assembled, using supplied hardware, secure mounting plate over the J-box. If necessary, use additional bracing to support brackets.
2. Remove the reflector by pulling the tabs at each end out of the tracks and rotating the reflector out. Wire the power cord(supplied) to the inside of the fixture.
3. Run the power cord through the cord connector (supplied) and out the back of the fixture. The power cord will go through the knuckle arm and wallplate and into the J-box.
4. Non-power arms will be wired from inside the fixture and run through the knuckle arm and through the other arm into the next fixture, until all fixtures are wired together.
5. Unscrew the set screw to pendant cover to allow you to wire the fixture to the power inside the J-Box (by others), making sure all connections are properly matched.

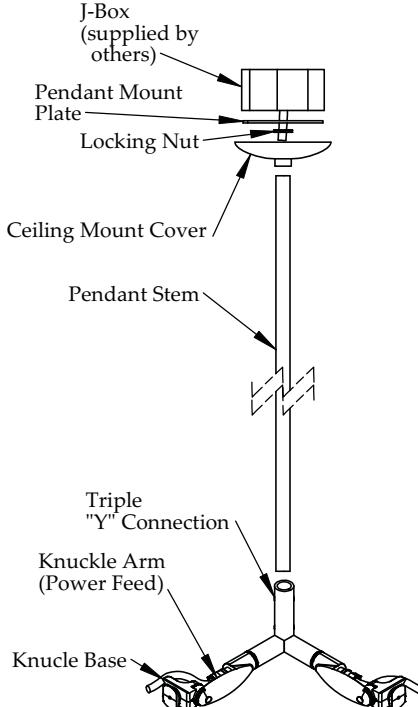

2. Mounting Plate Dimensions: in(mm)

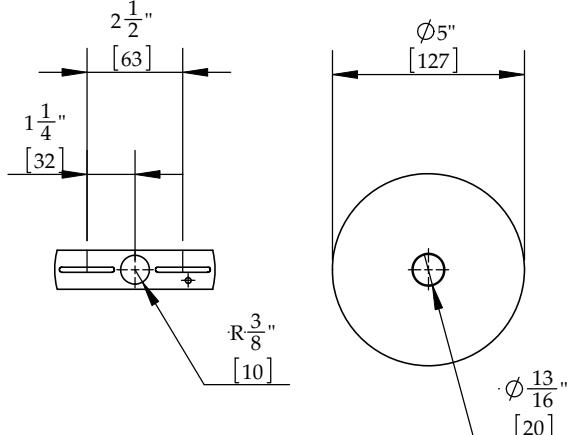

Ensure #8-32 x 1/2 pan head screws are securely fastened to J-box (by others).


ARROLINER INDOOR/OUTDOOR P4 CEILING

Warning: Before starting any work ensure that all sources of power are turned off. All work must meet local/national codes and be performed by a certified electrician. **Do not** mount fixtures vertically. Indoor fixtures cannot be used for outdoor applications.

Fixture to Fixture Power Feed

1. Remove reflectors by pulling tabs at each end out of the tracks and rotating the reflector out. Wire the power cords (supplied) to the inside of the fixtures, running the power cord out the back through the Cord Connector, the arms, the Y connection, and then back in to the next fixture. All connections should be made inside the fixture.

(Top View)

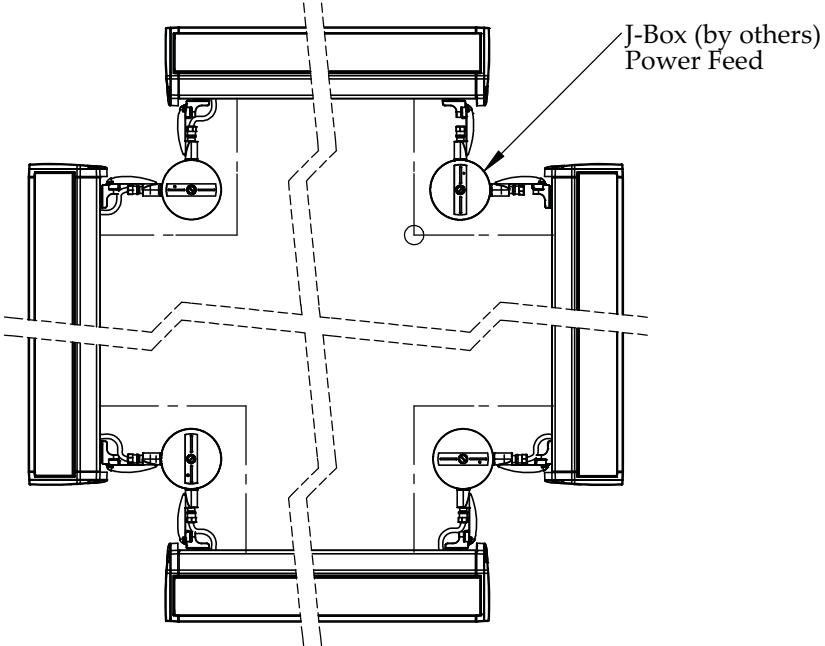

Note:

12' fixtures are not suitable for outdoor use or for use in natatoriums

Note: Fixture lengths will vary depending on lamp type; see lamp chart on page 3.

(Side View)

Standard Pendants
24"
30"
36"
42"
48"

