

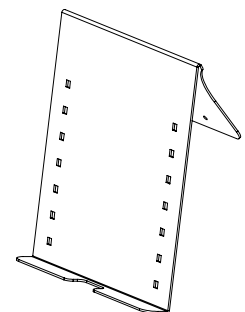
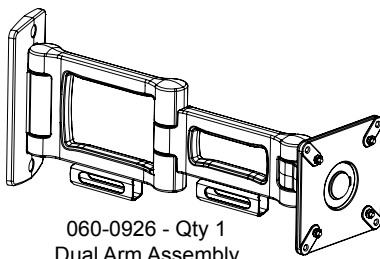
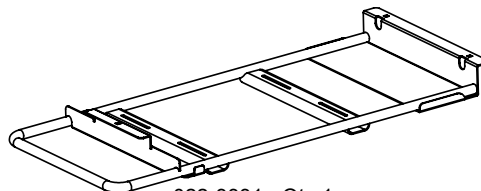
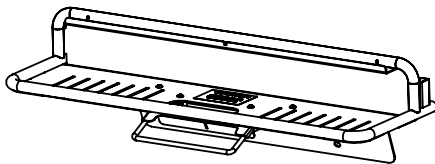
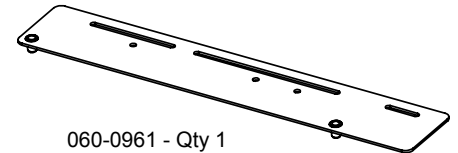

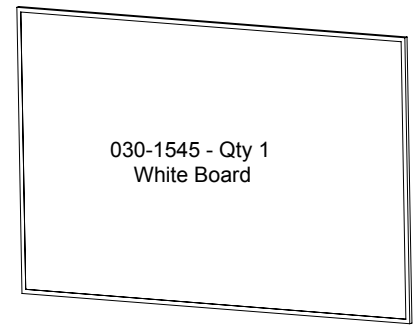
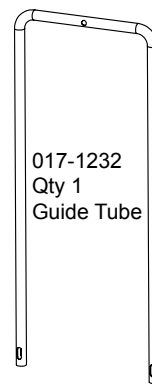
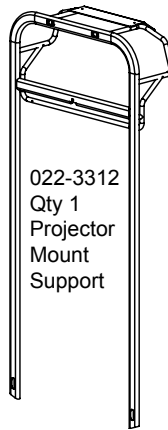
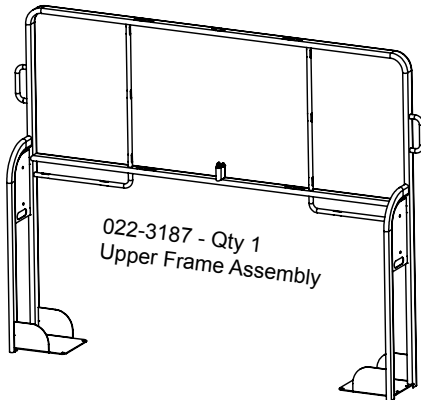
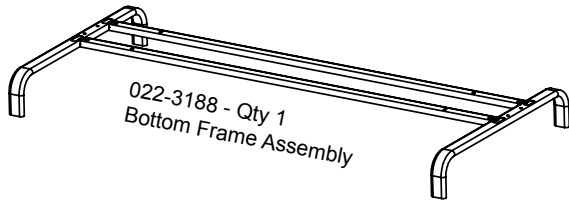
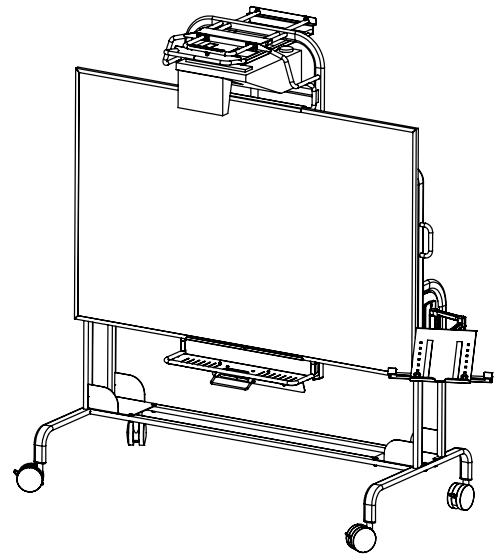
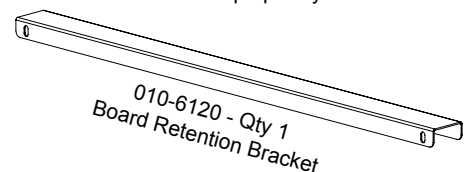



EDUIWB Mobile Interactive White Board

Assembly Instructions




031-9454 - Qty 1
Owners Guide

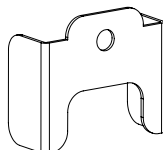


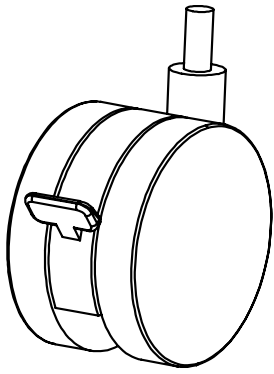


015-0176 - Qty 4
4" Stem Caster w/Brake

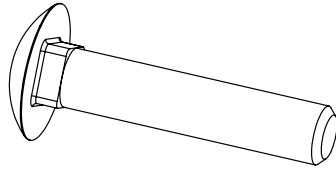


030-0538 - Qty 13
1/4-20 x 1 1/4" Carriage Bolt

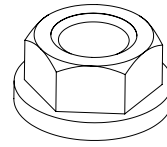


030-0207 - Qty 15
1/4-20 Hex Nut

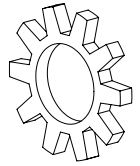


030-0240 - Qty 2
1/4" Lockwasher

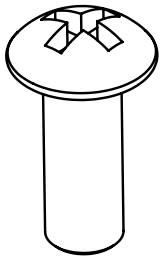


030-0291 - Qty 4
#10-32 x 1/2" Truss Head Screw

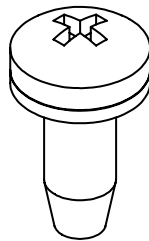


030-0962 - Qty 2
10-32 x 1/2" Pan Hd Screw

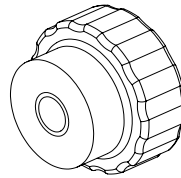


012-0696 - Qty 2
1" Knurled Knob

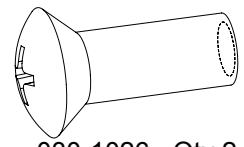


030-1026 - Qty 2
1/4-20 x 3/4" Phillips Screw

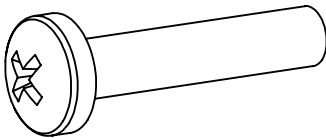


030-0845 - Qty 8
M4 x 0.7 20mm Pan Hd Screw

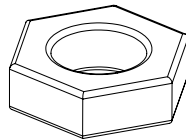


030-1267 - Qty 4
M4 Nut

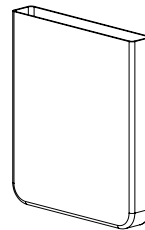


012-0692 - Qty 2
Black Vinyl Cap

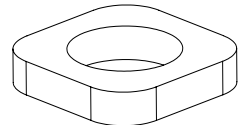


030-1571 - Qty 4
1" Square Black Foam

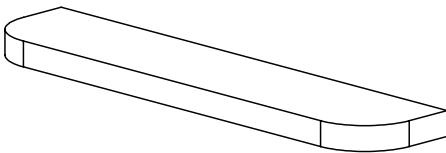


030-1569 - Qty 2
Foam Pad

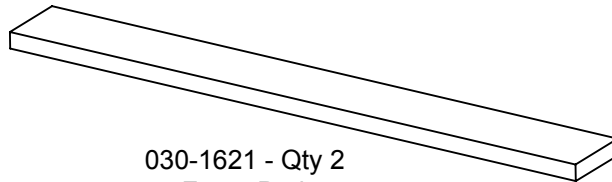


030-1621 - Qty 2
Foam Pad




030-1234 - Qty 8
M4 x 0.7, 12mm Phillips Screw

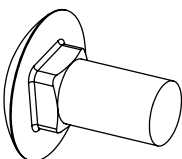


030-0272 - Qty 2
1/4-20 x 1/2" Carriage Bolt

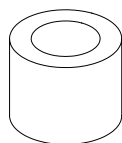

030-1398 - Qty 4
#10 Nylon Spacer




030-1397 - Qty 8
3/16, #10 Nylon Washer

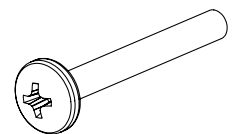





030-1657 - Qty 4
10-32 x 1.25" Button Hd Screw

1




SAFETY WARNING!!
TWO PERSON
ASSEMBLY REQUIRED

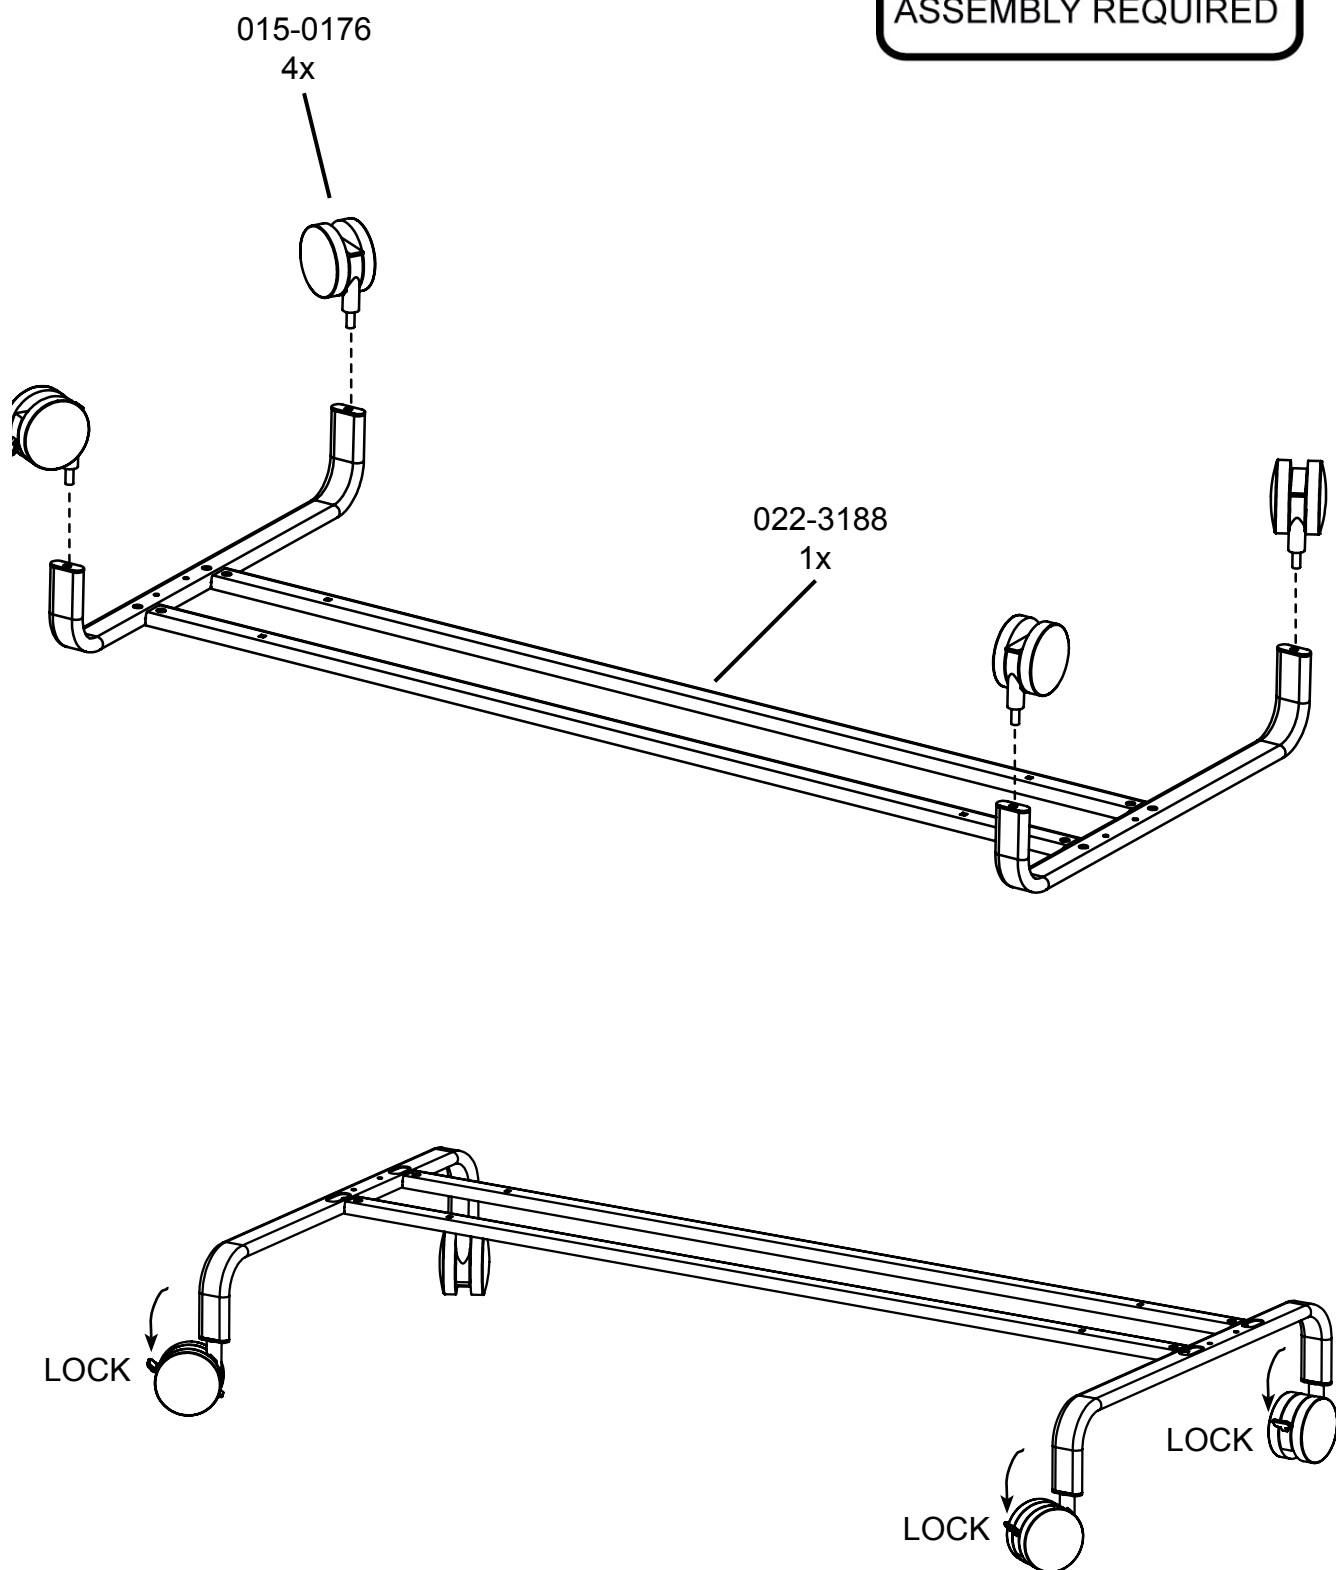

2

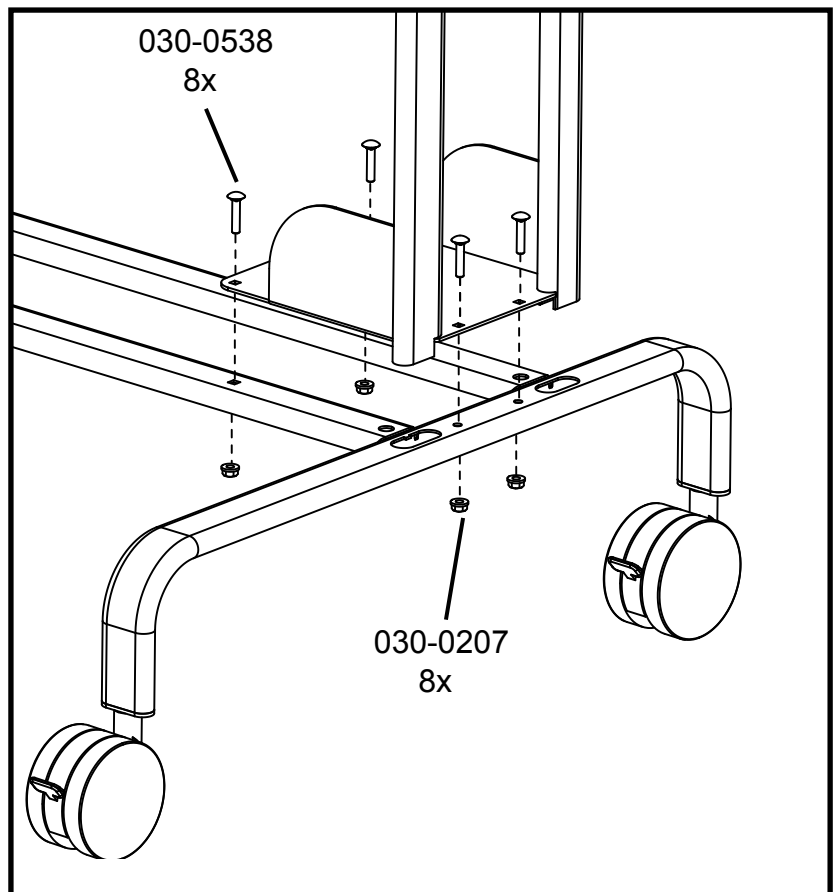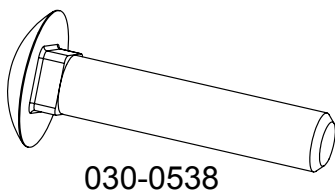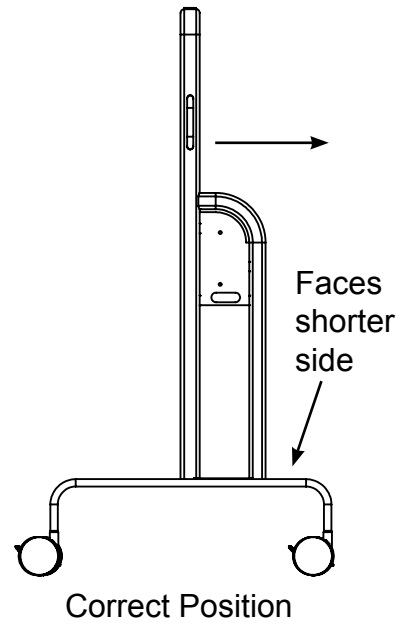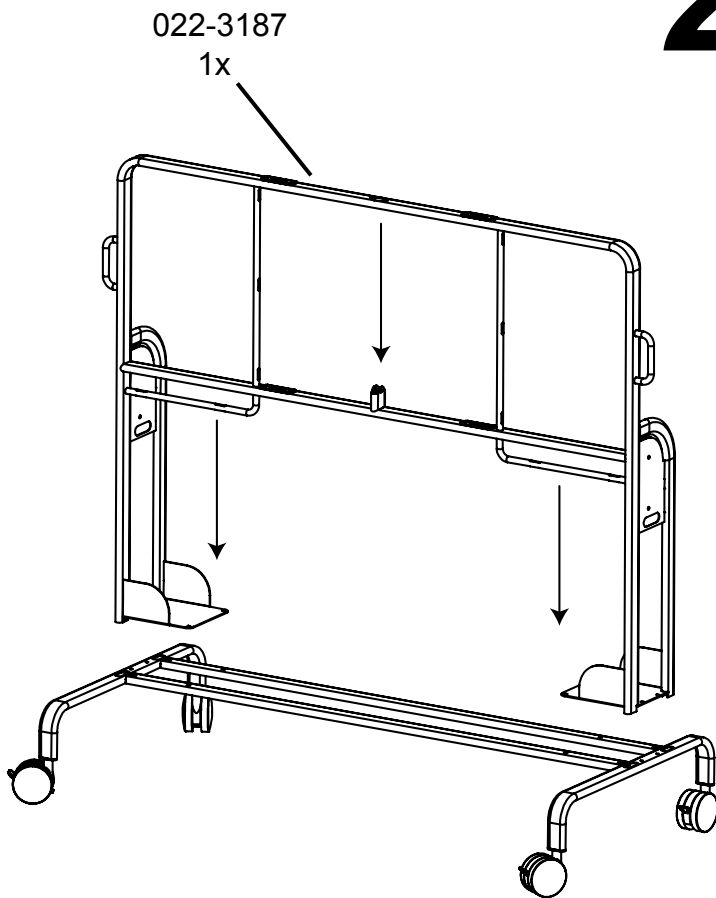



3

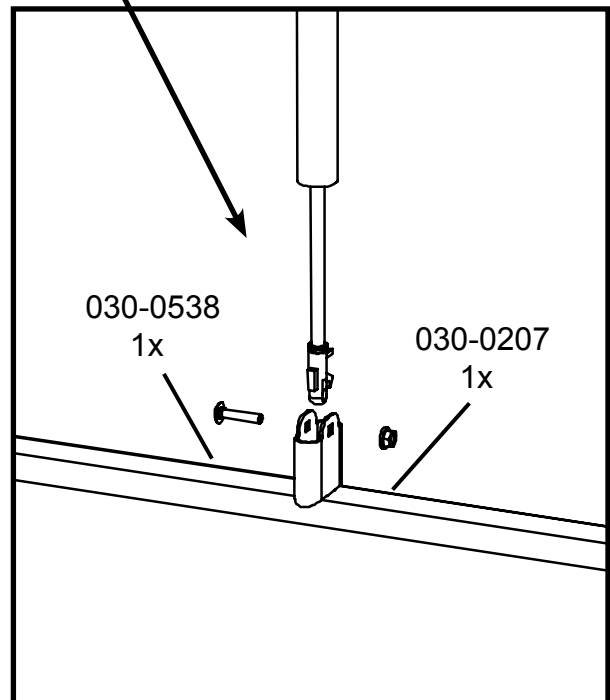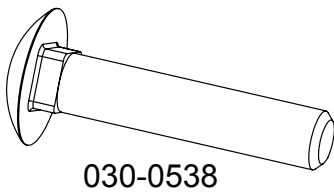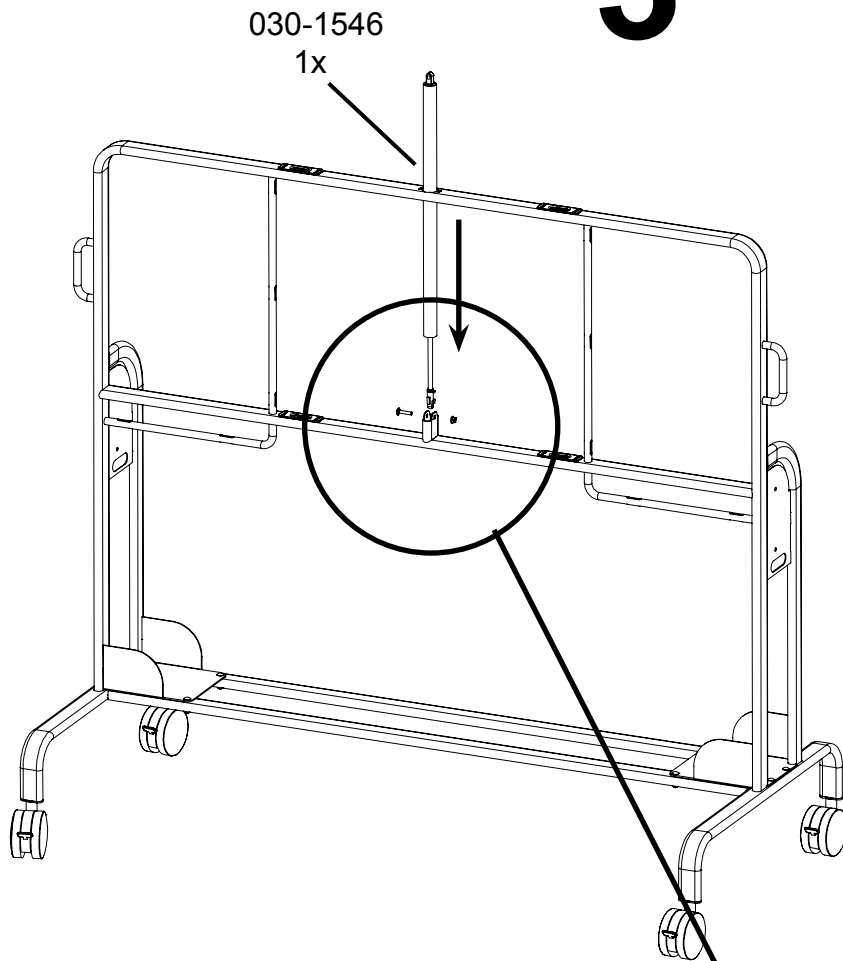


4


022-3312

1x

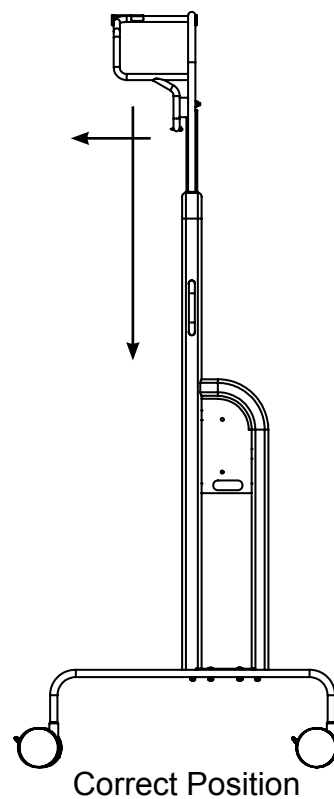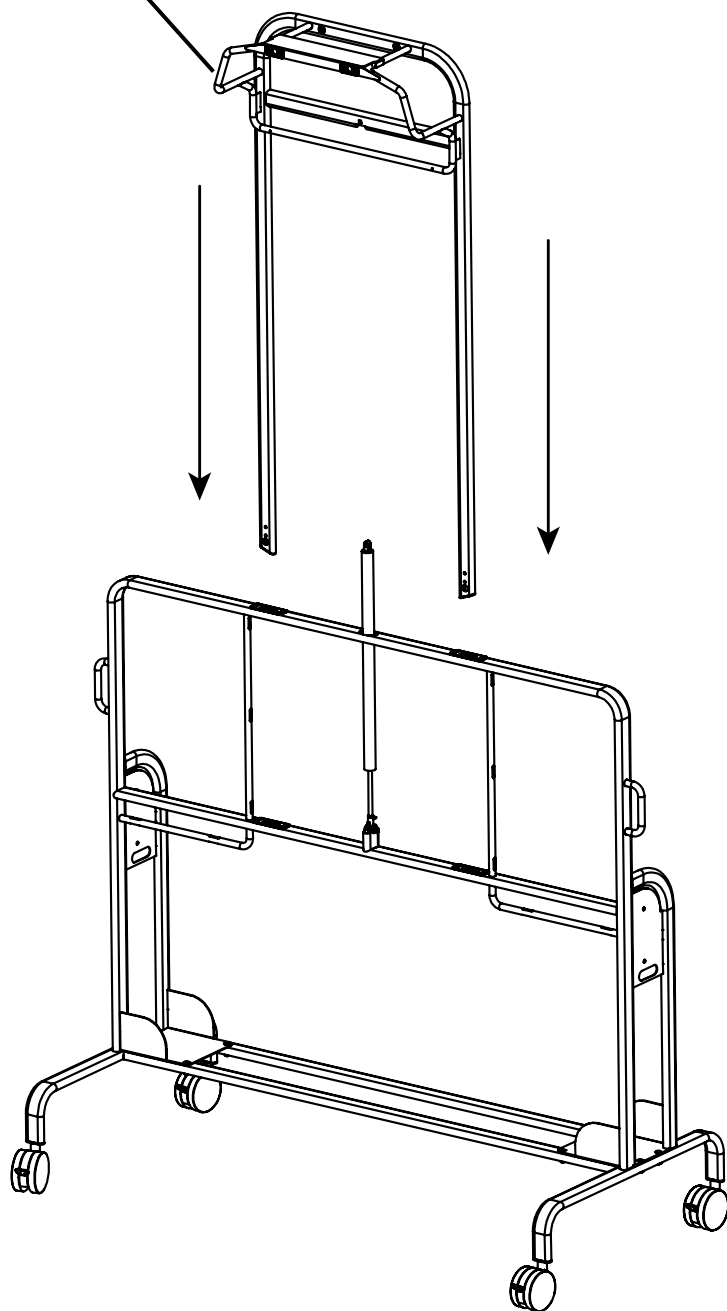


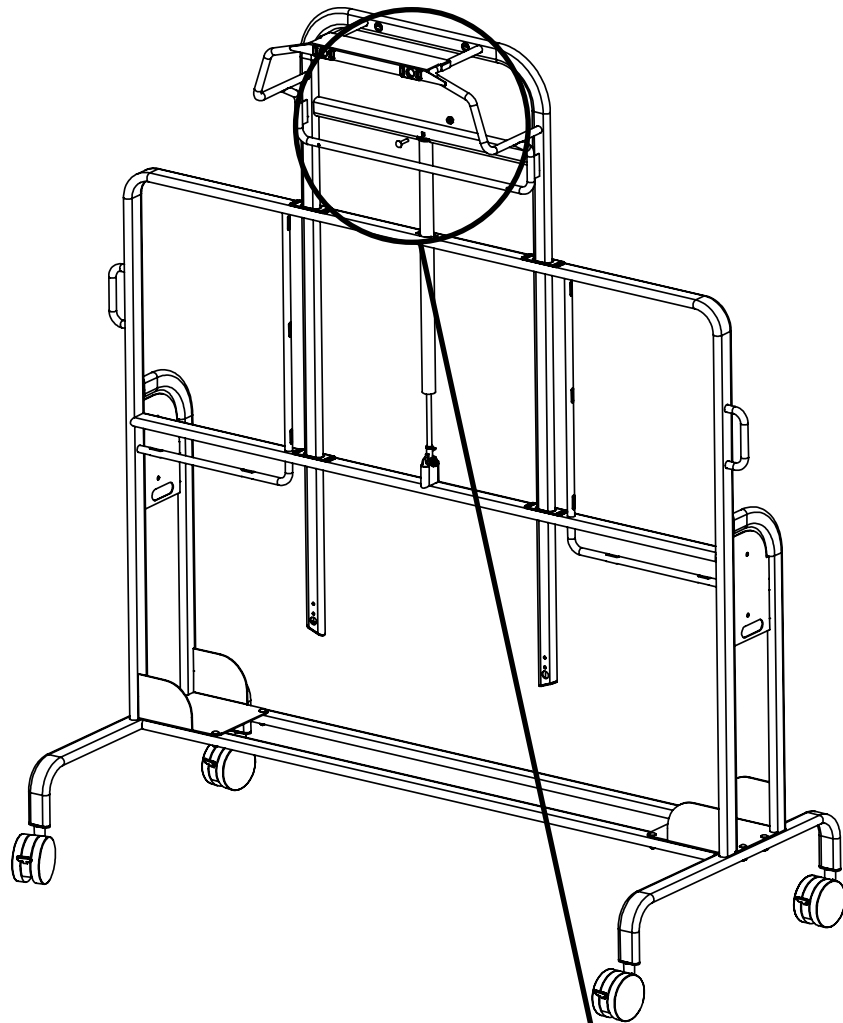

030-0538

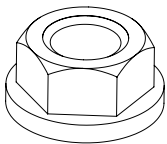


030-0207

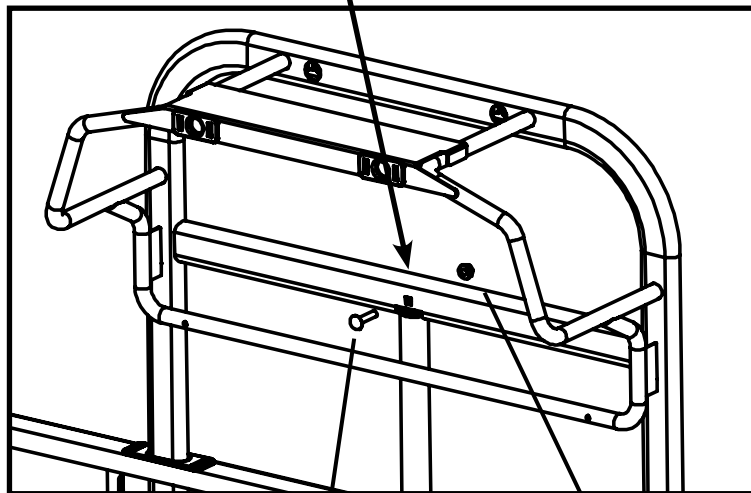



030-0538
1x

030-0207
1x


5

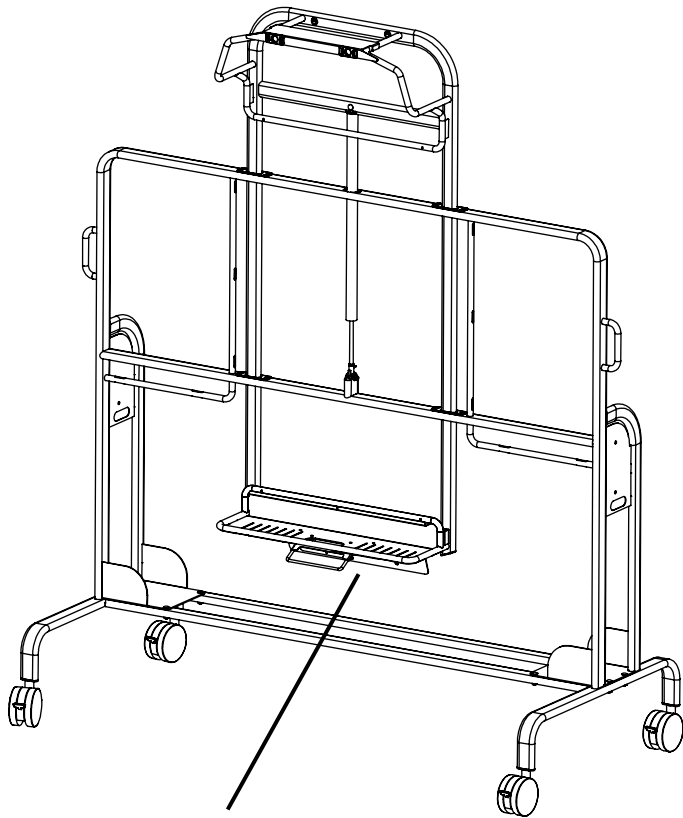

022-3182
1x

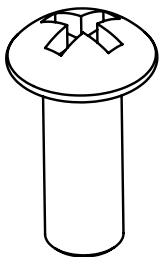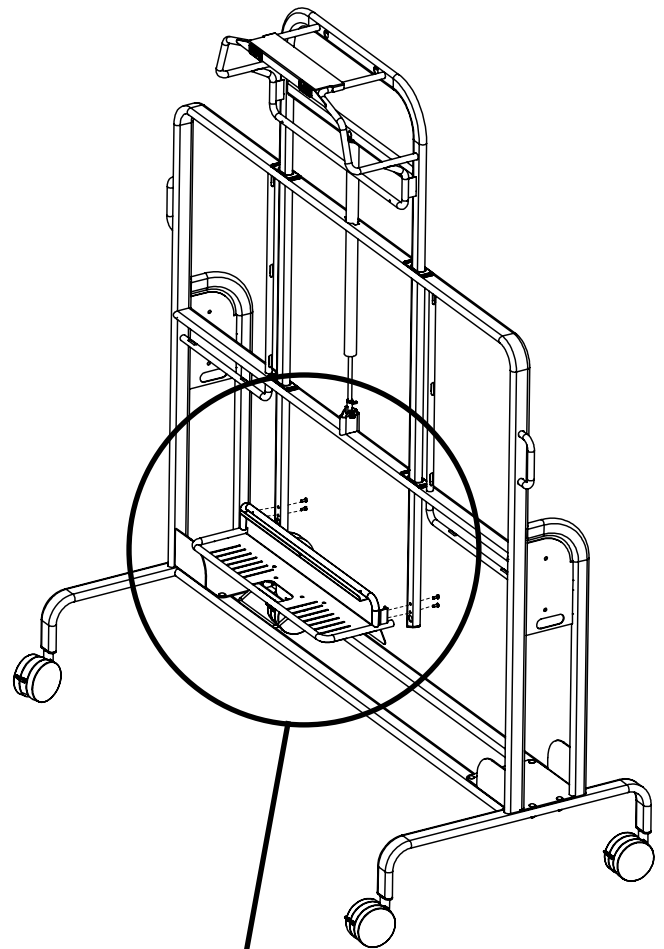


030-0291

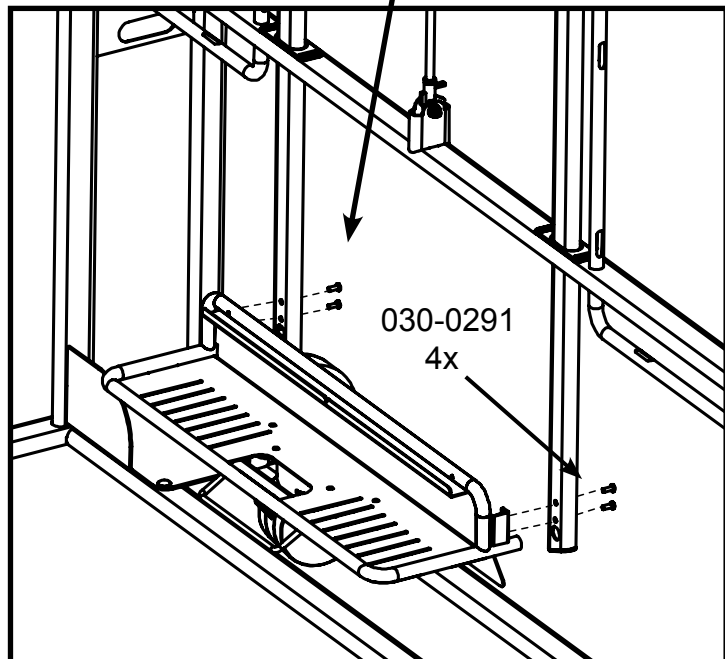


030-0291
4x

6

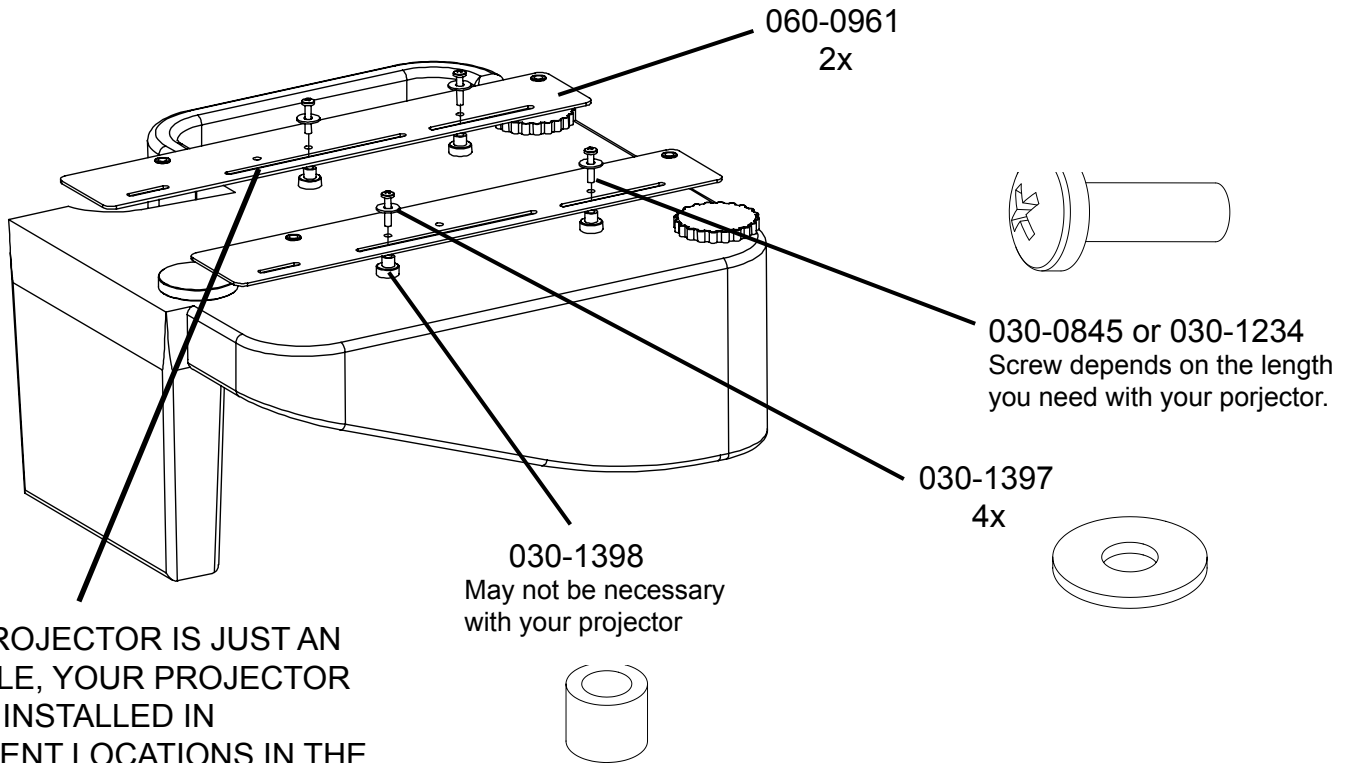

THIS PROJECTOR IS JUST AN
EXAMPLE, YOUR PROJECTOR
MAYBE INSTALLED IN
DIFFERENT LOCATIONS IN THE
SLOTS DUE TO THE MOUNTING
HOLE LOCATIONS.

Install mounting bar assembly to your projector. **NOTE:**
Nylon spacers are included in the hardware pack if you need
them. Keep ALL screws loose for adjustment after projector
is mounted onto the cart.

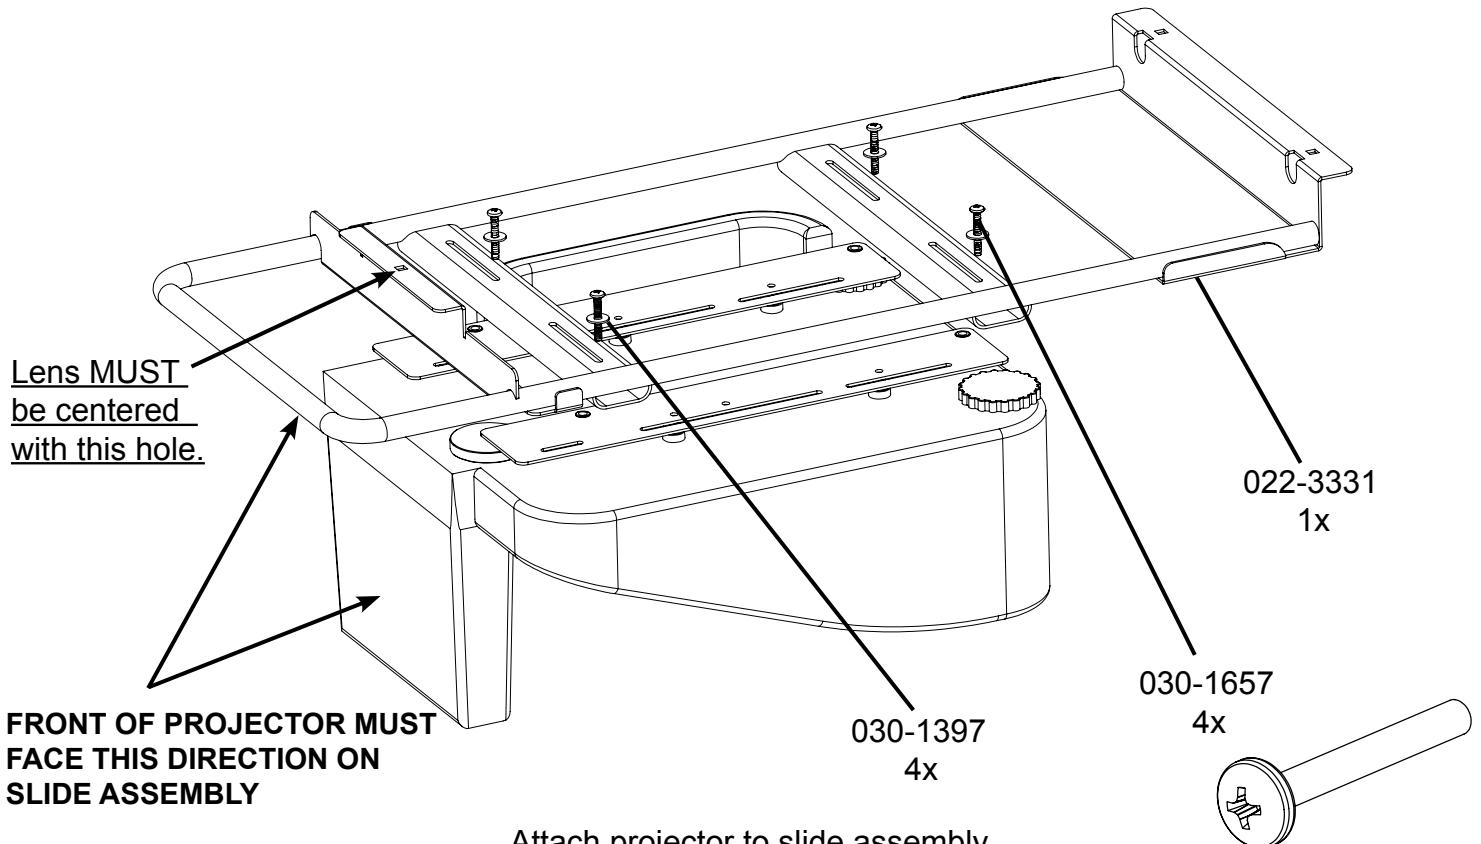

Attach projector to slide assembly.

Keep ALL screws loose for adjustment after projector is mounted onto the cart.

7

017-1232

1x

022-3331


1x

Projector removed for clarity

**INSTALLING THIS ASSEMBLY
REQUIRES 2 PEOPLE!!**

SAFETY WARNING!!
TWO PERSON
ASSEMBLY REQUIRED




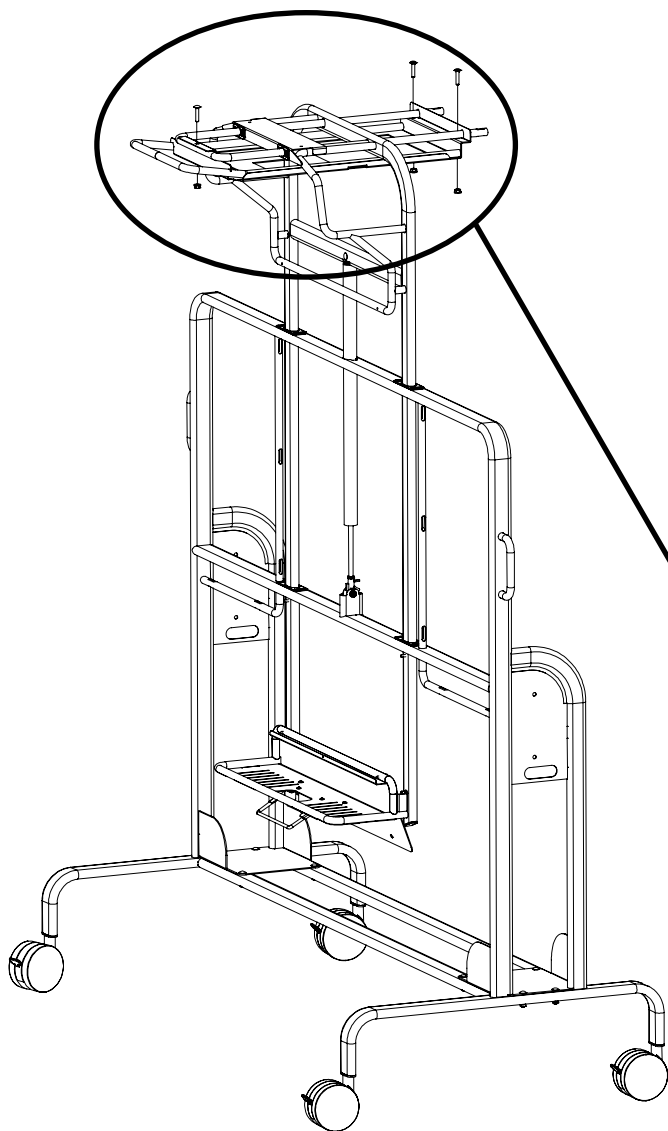


Projector removed for clarity



030-0538

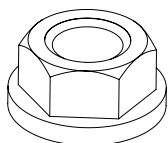

030-0207

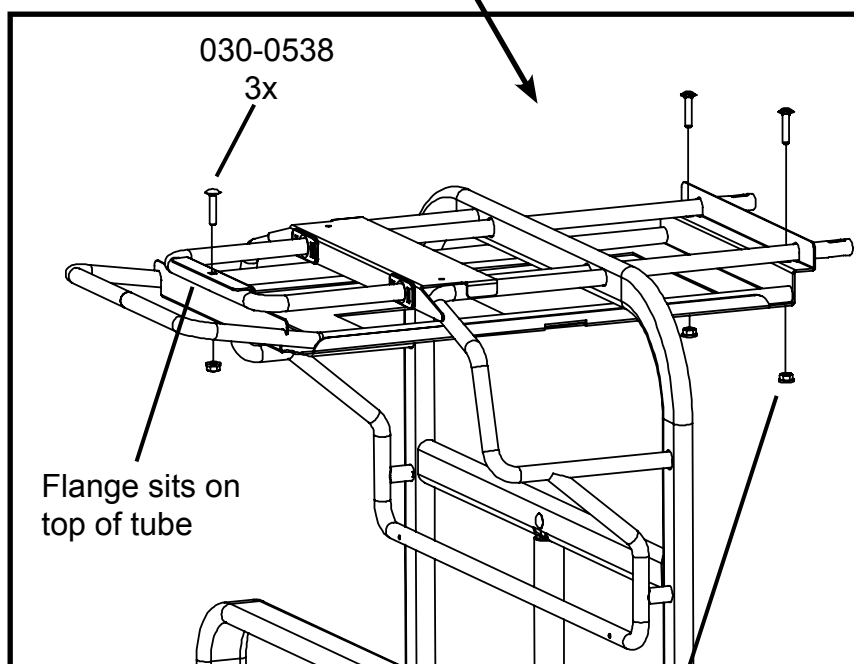

030-0538

3x



Flange sits on
top of tube


030-0207

3x



8

Board
030-1545
1x

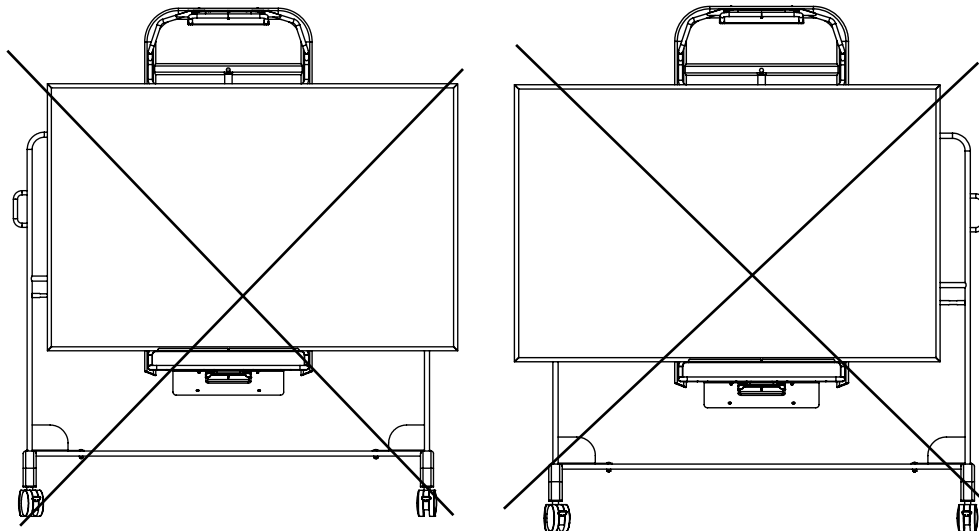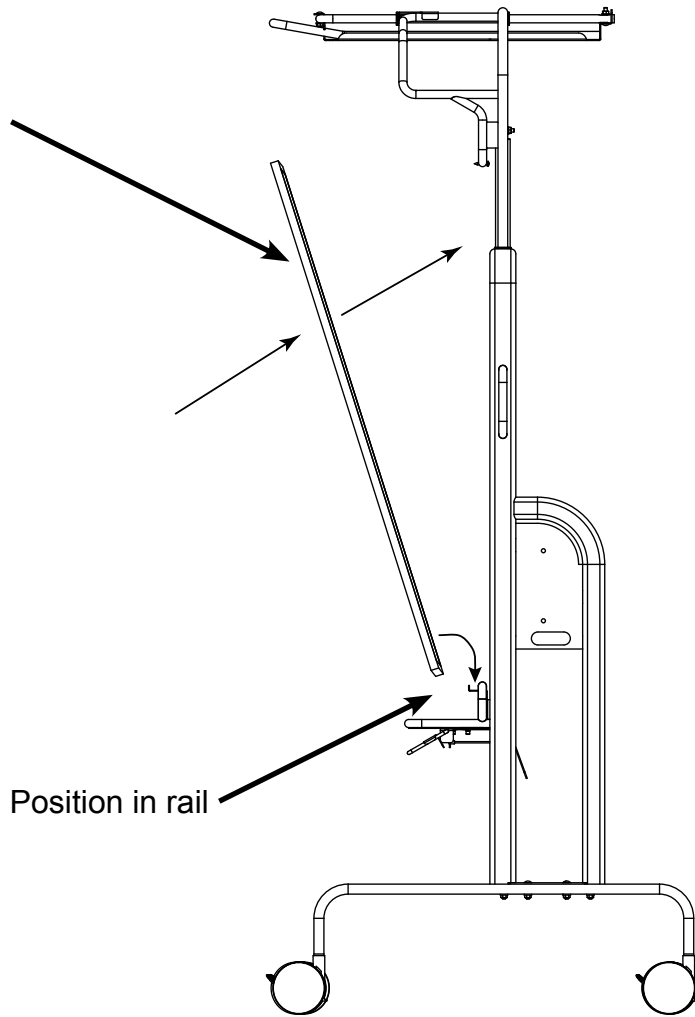


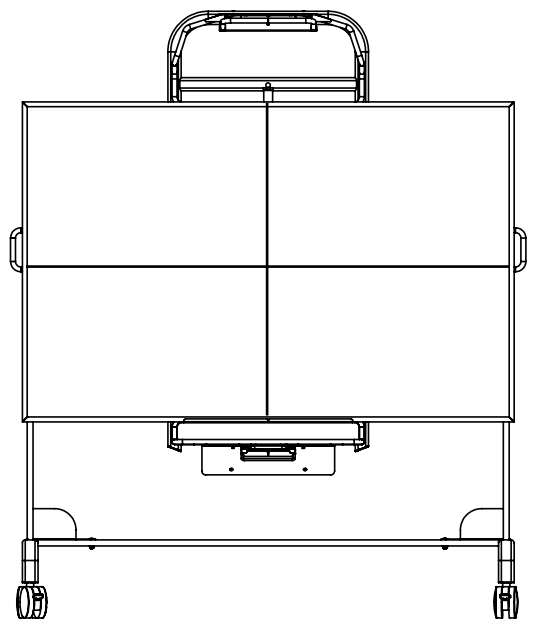

BOARD MUST BE CENTERED

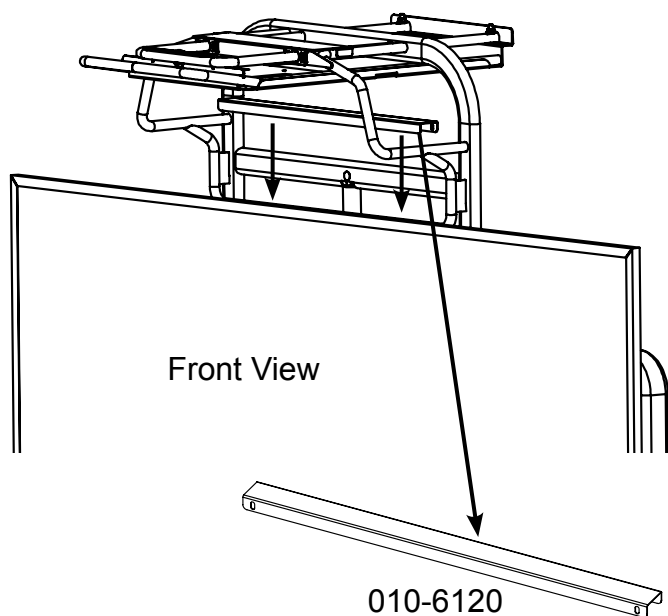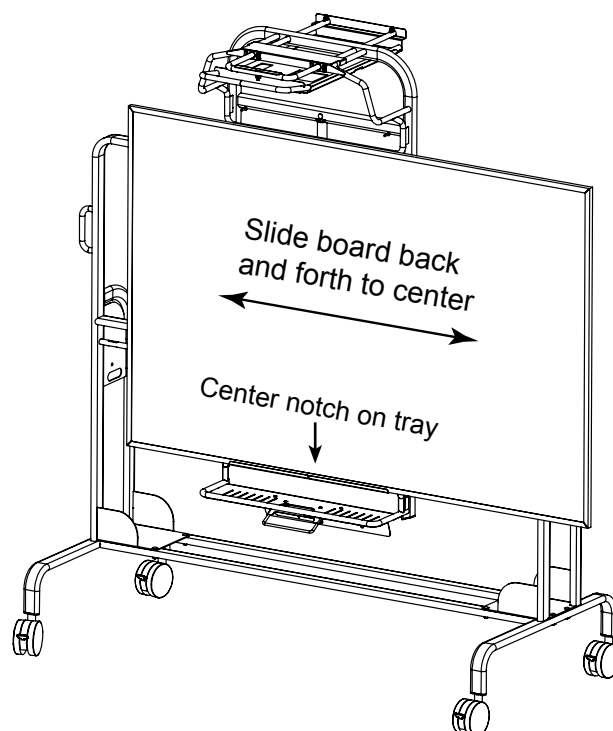


010-6120
1x

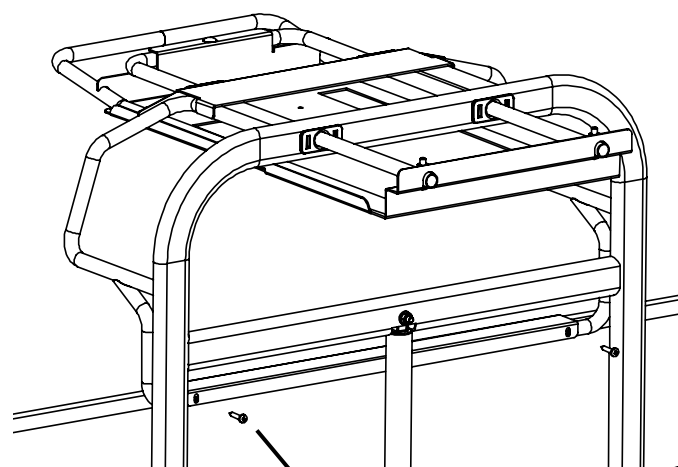


Back View

030-0962
2x

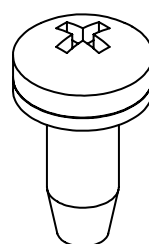

030-0962


9

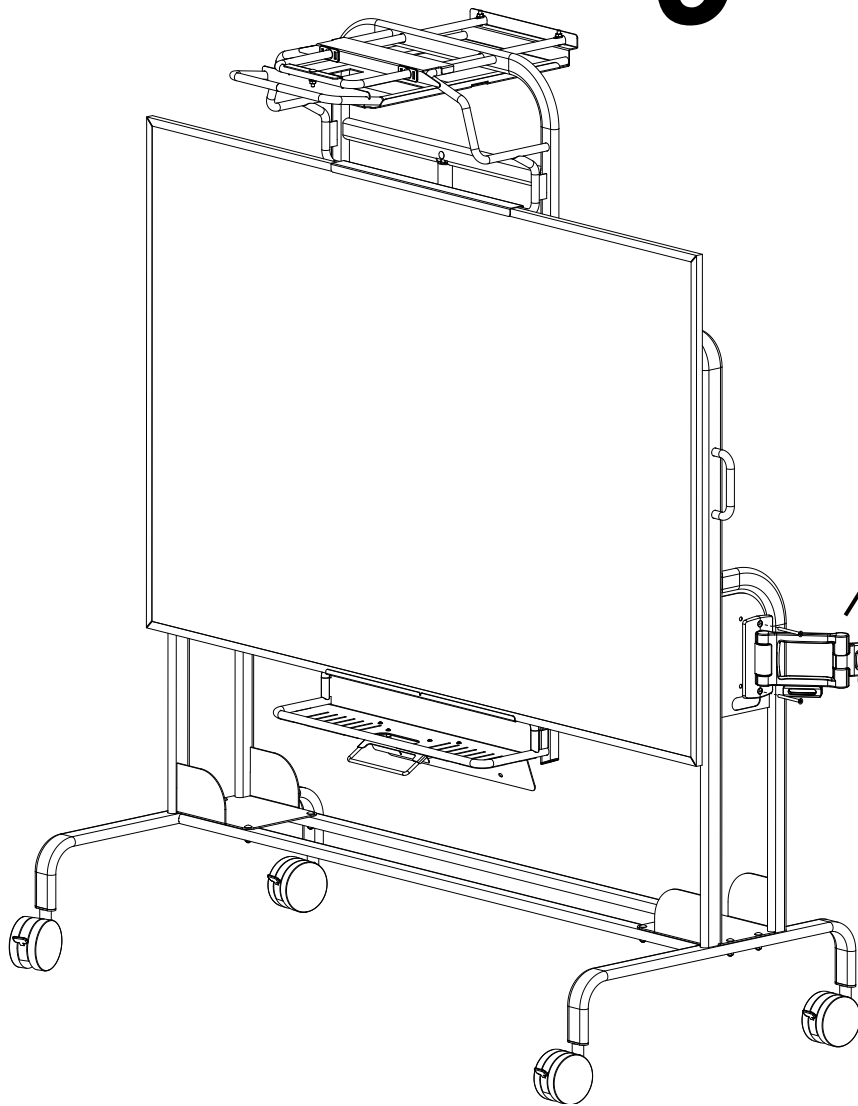


Note: Can be mounted to either side of cart. Best to mount on the same side cables plug into your projector.

060-0926


1x

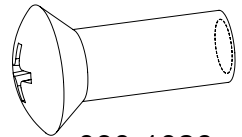

030-1026

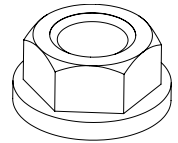


030-0207

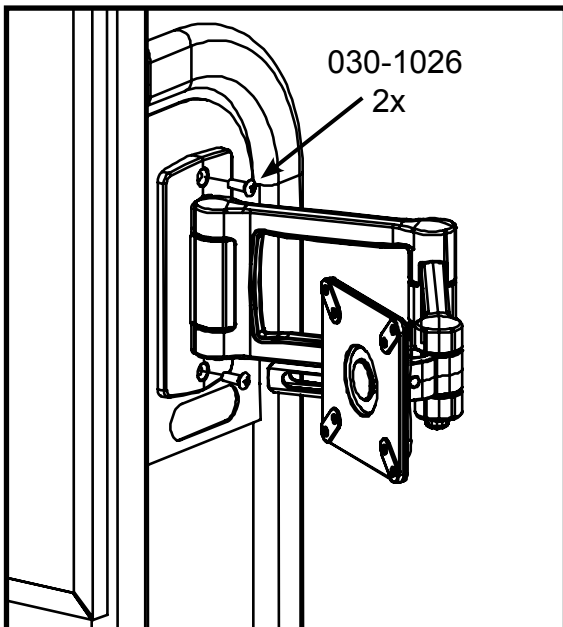

030-1026


2x

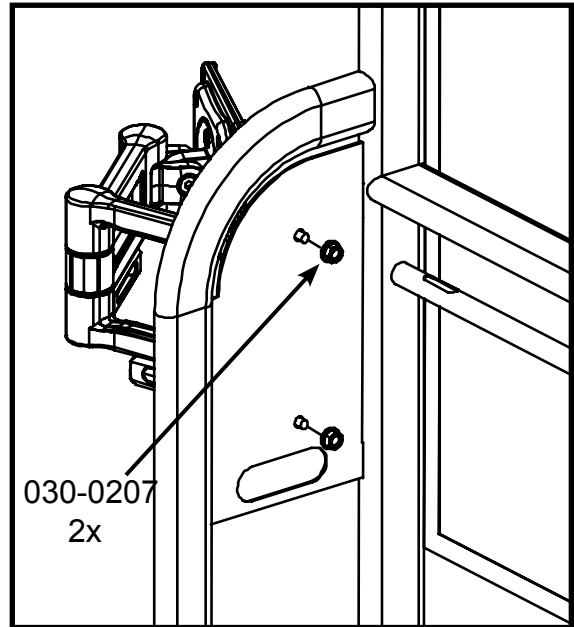

030-0207


2x

10

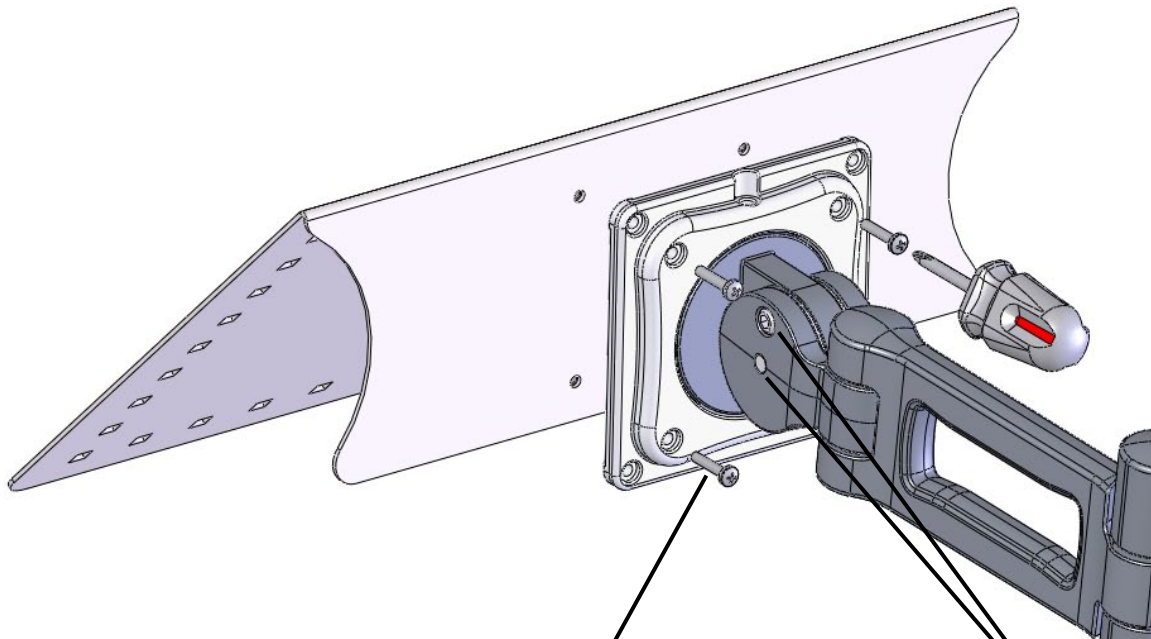


030-0845
4x

These are the main tension screws. They control the pitch movement of the vesa joint. Adjust carefully.

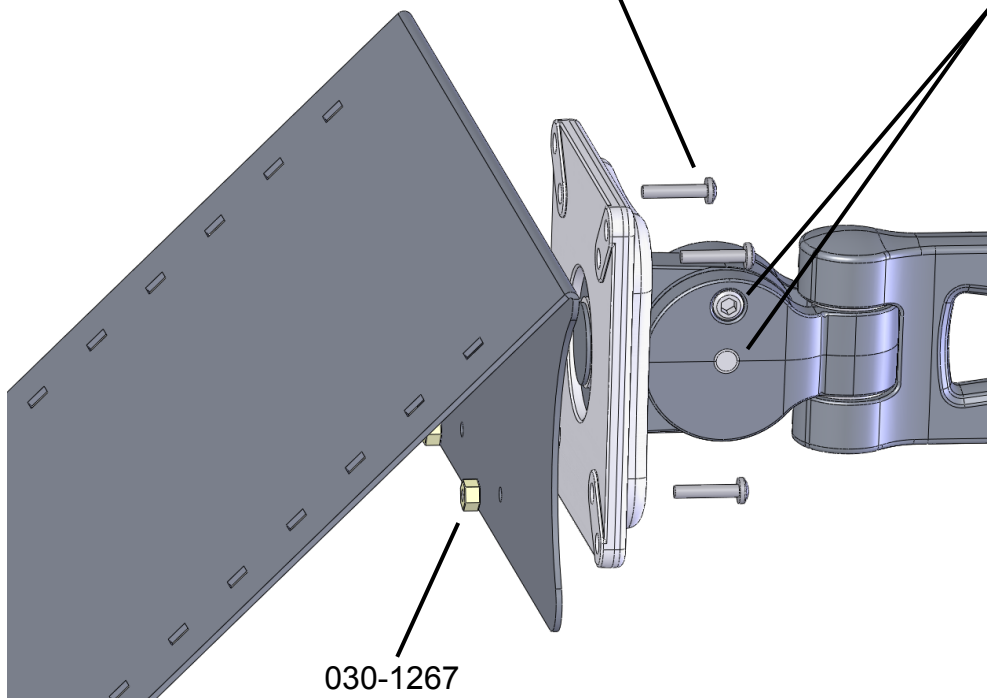


030-1267
4x


11

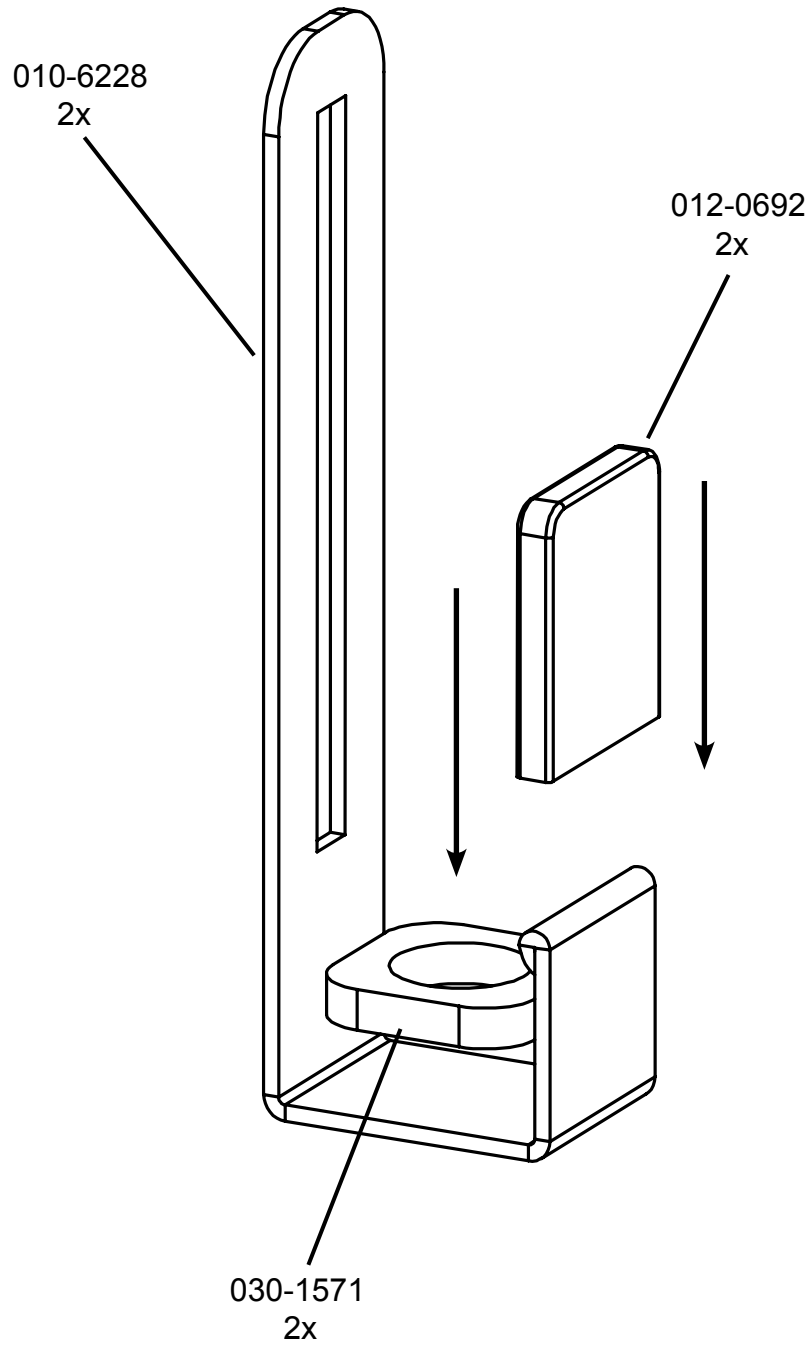


12

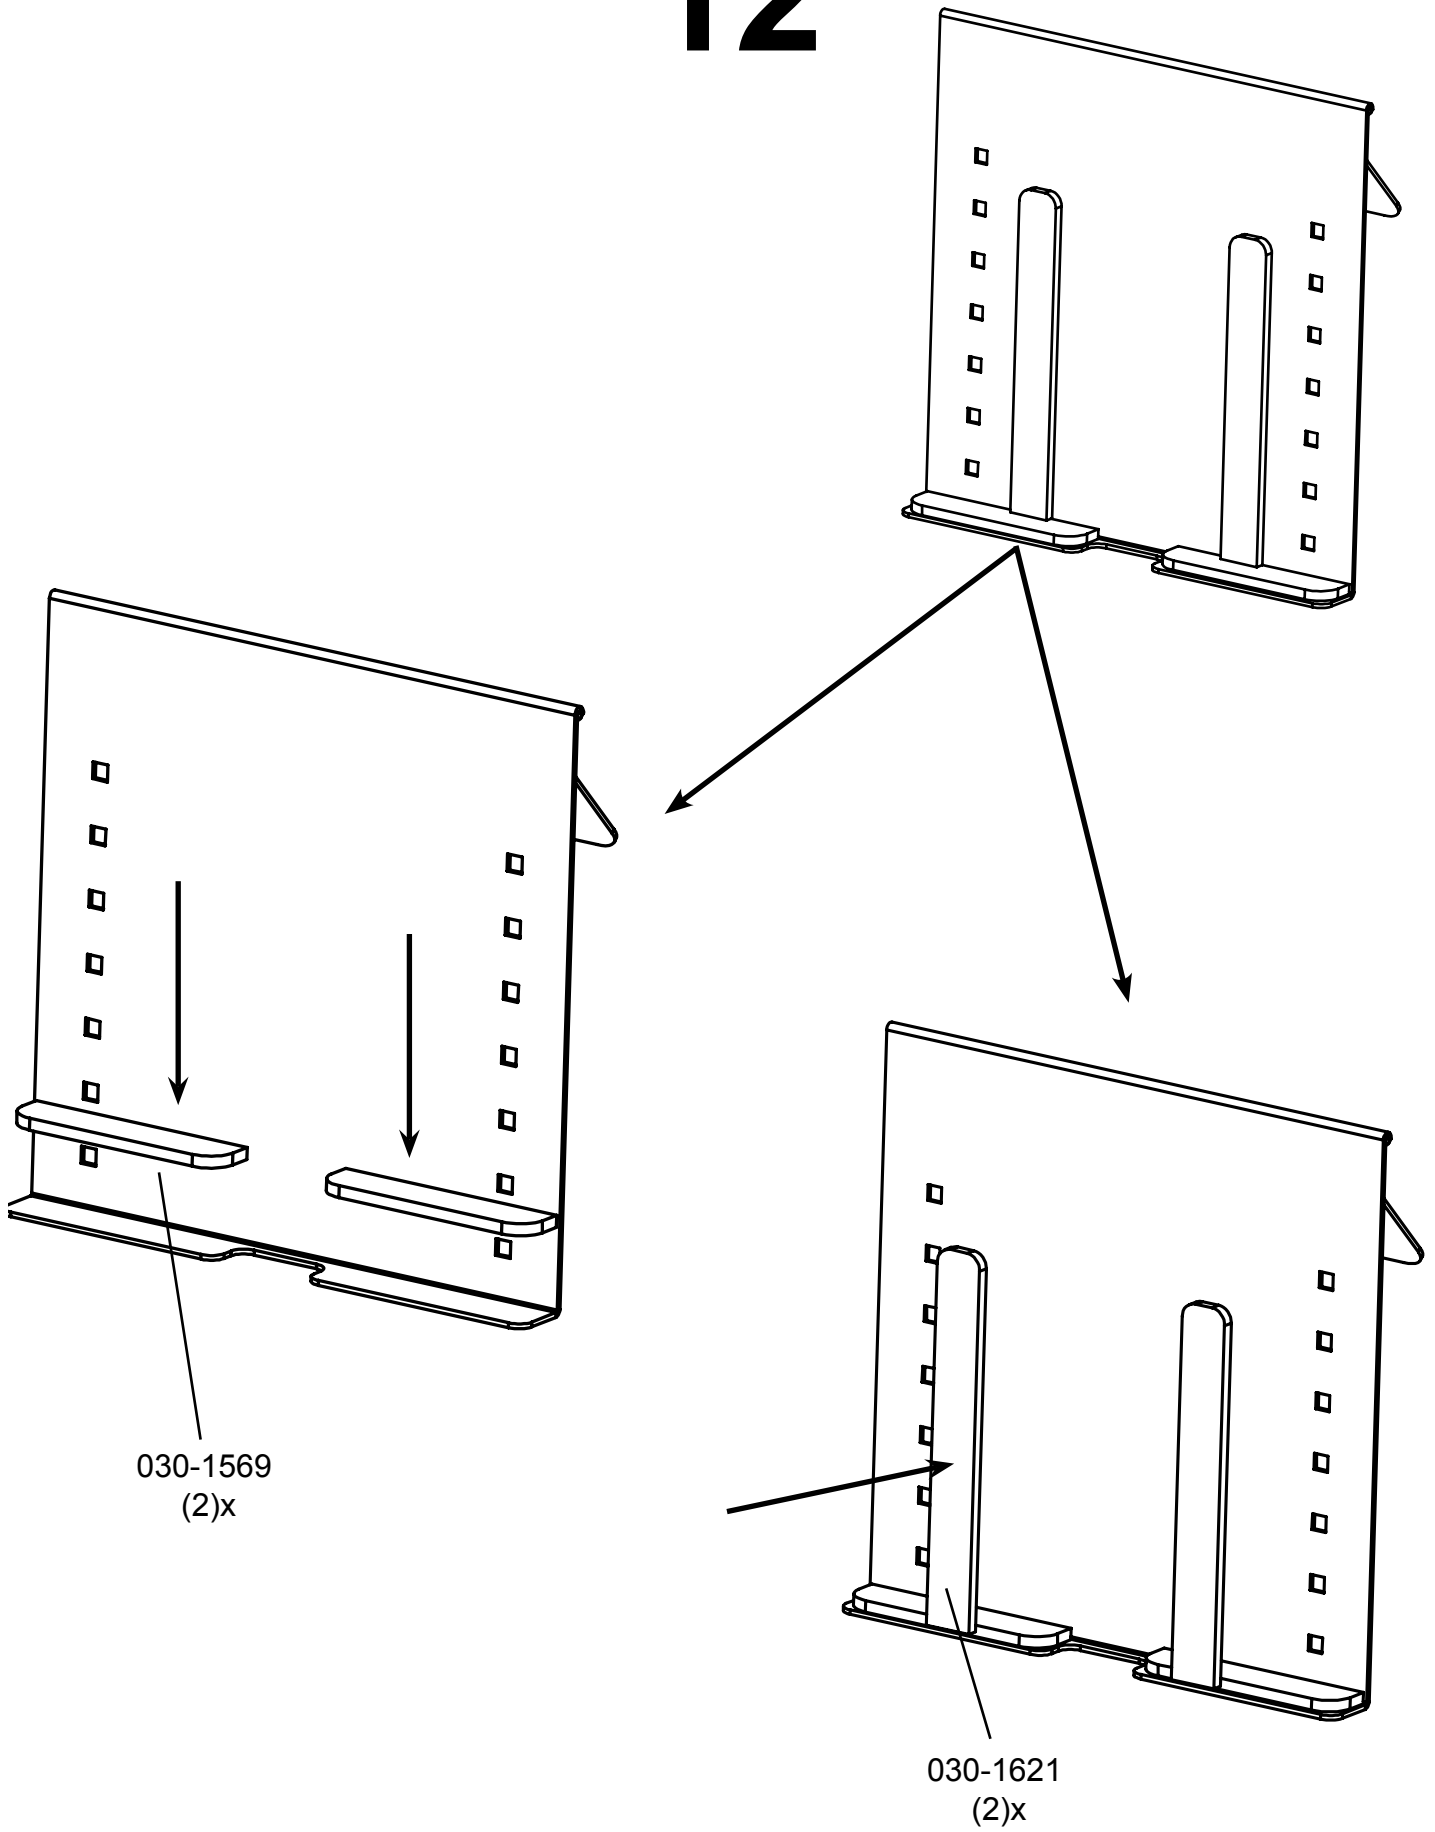

13

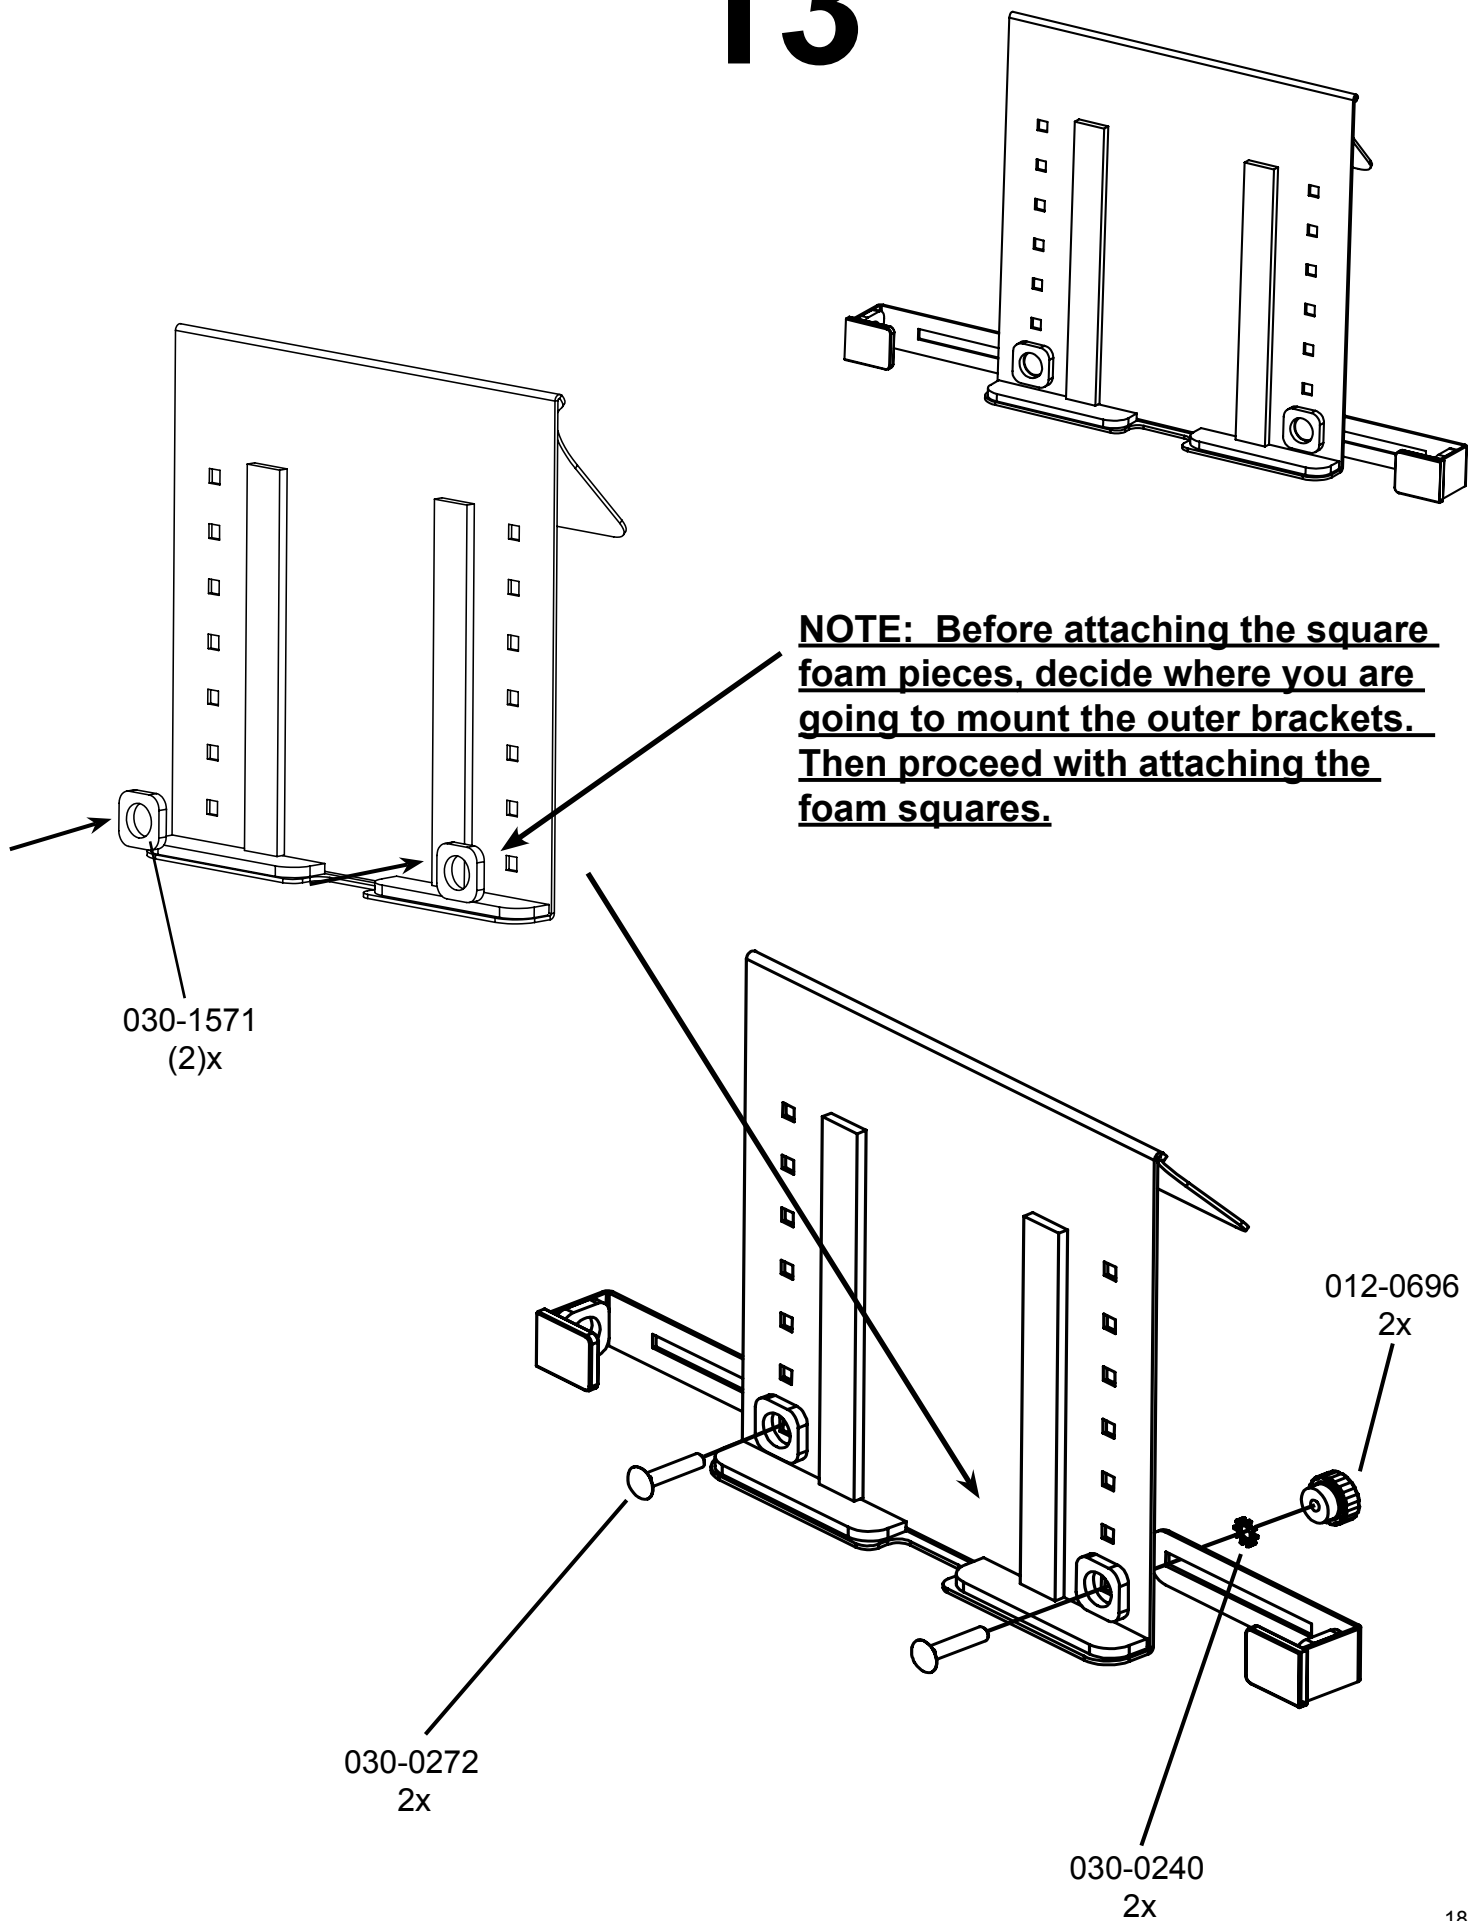


14

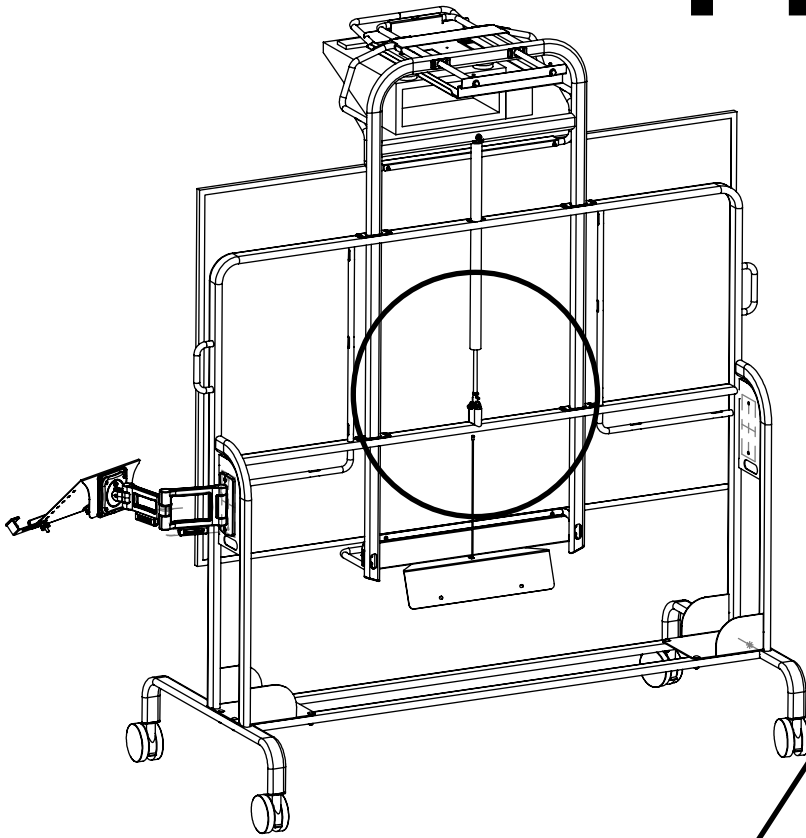

When attaching the cable to the cylinder, be very careful not to pull up on the lever. By doing this it may cause the cylinder to spring up.

030-1611 - Cable
QTY 1


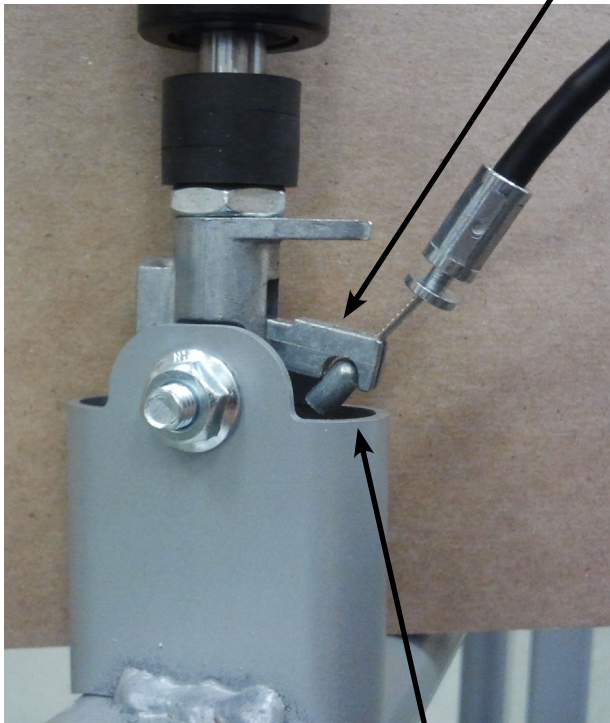


Hook end of cable onto cylinder




Slide in place.


15

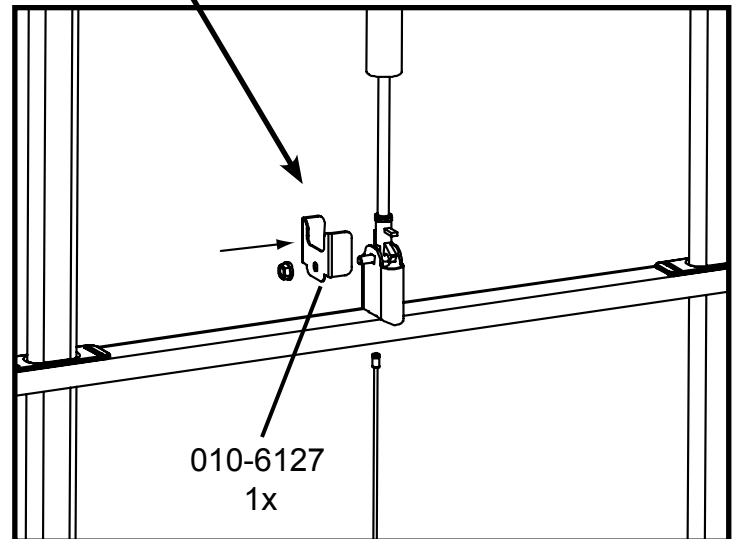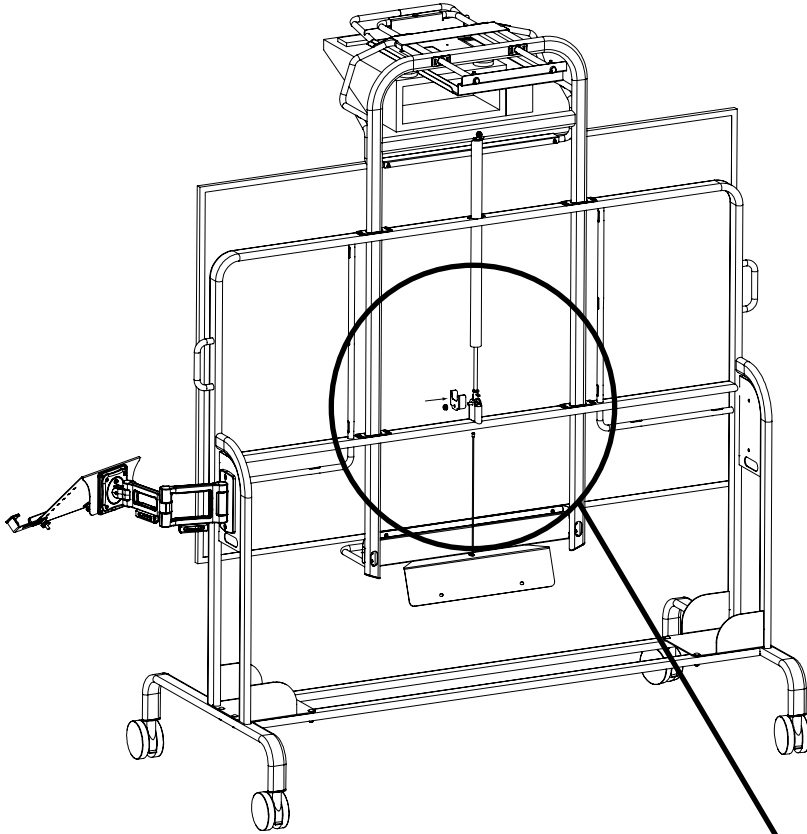



16

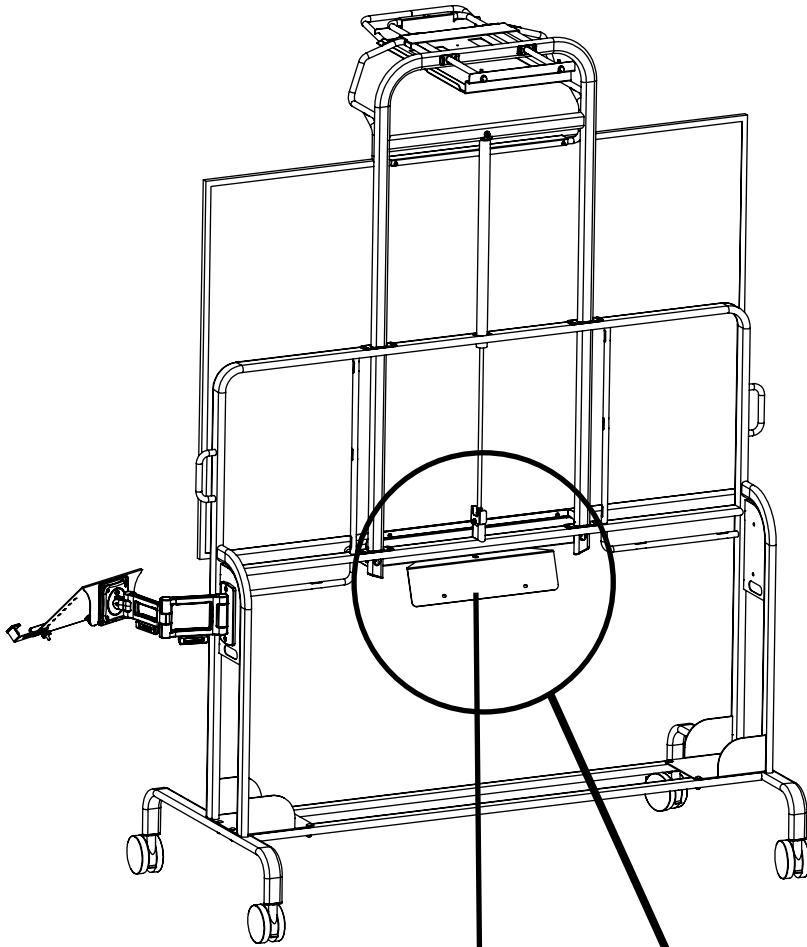


Slide cable through hole in handle assembly.

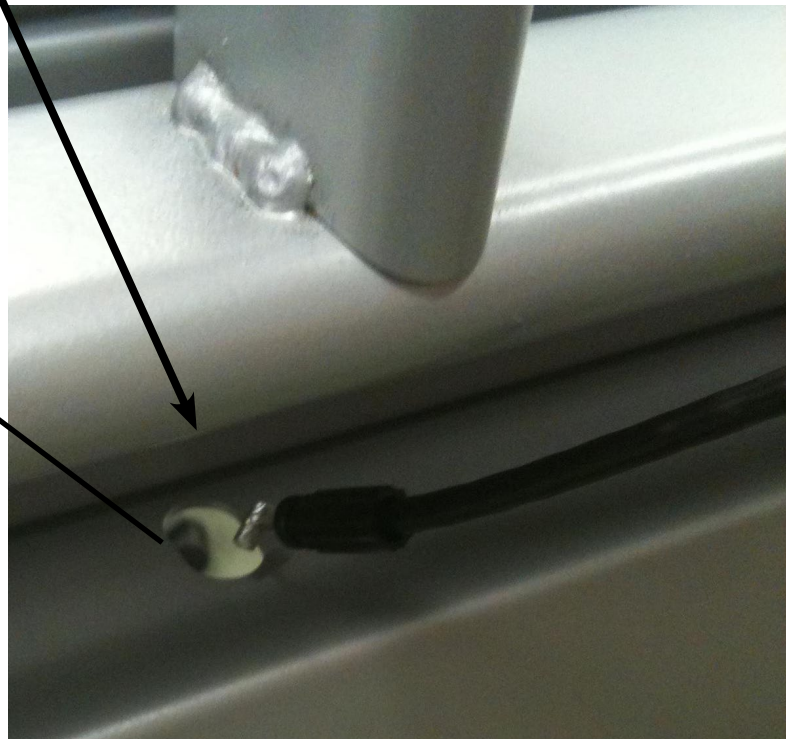




17

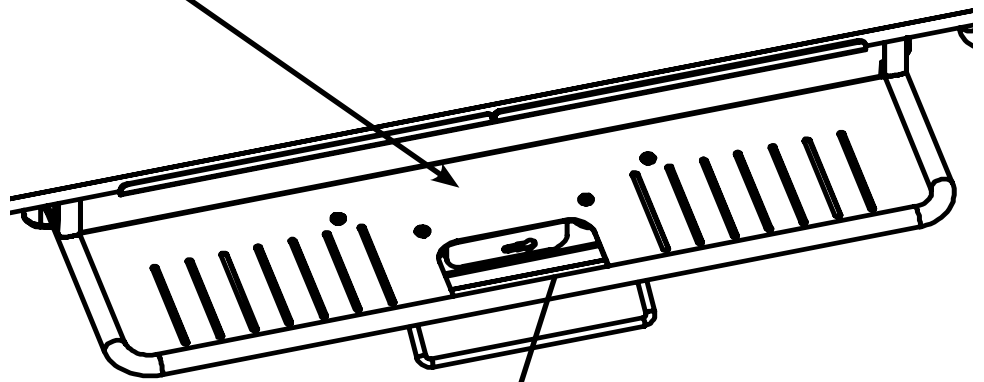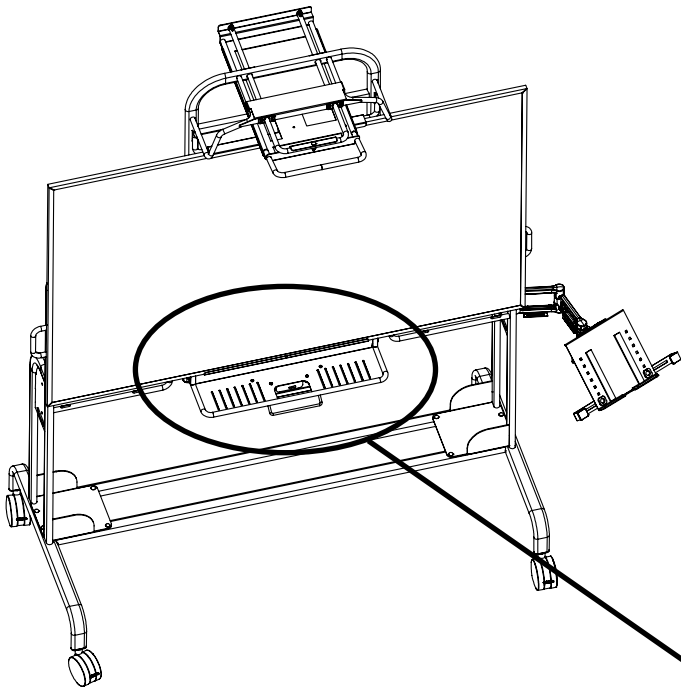

Slide cable through eye lit hole and slide it to the left.


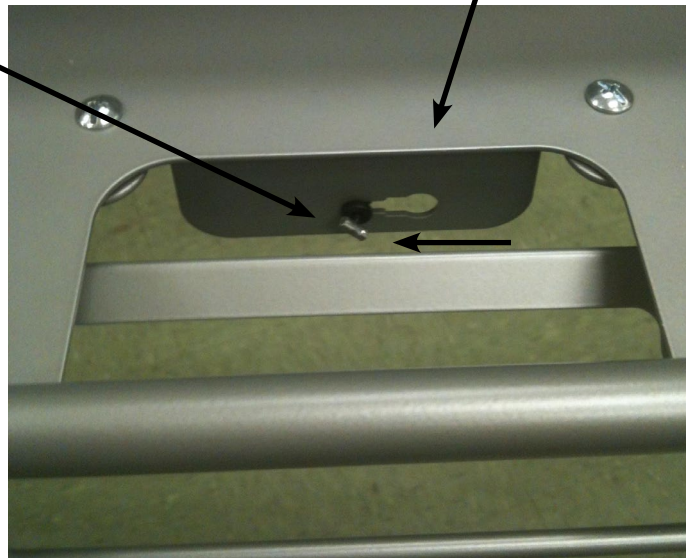


18

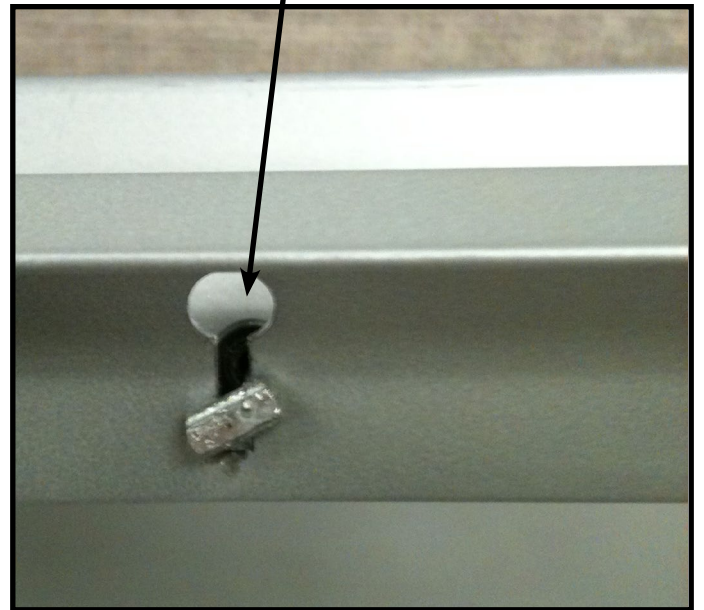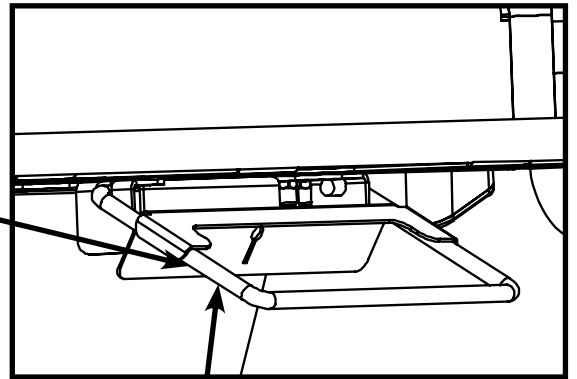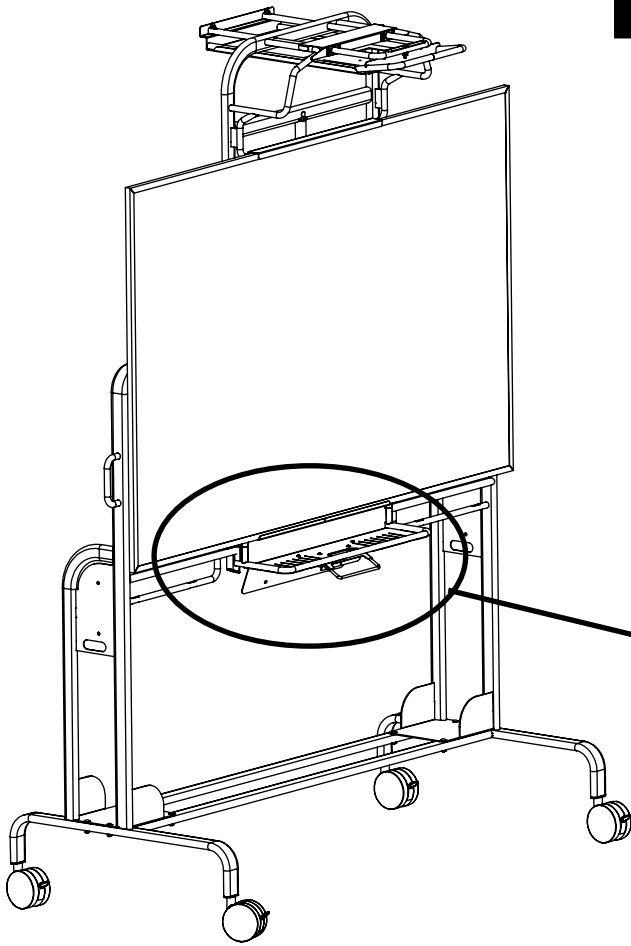

With pliers, pull the cable through the next handle piece so that it sits in the narrow part of the eyelit hole.

19

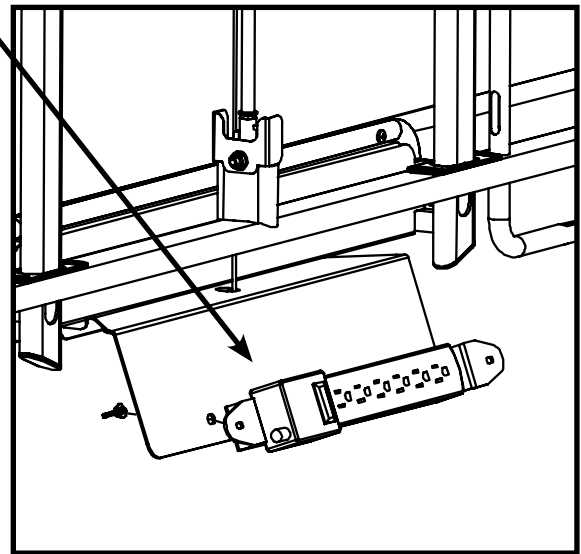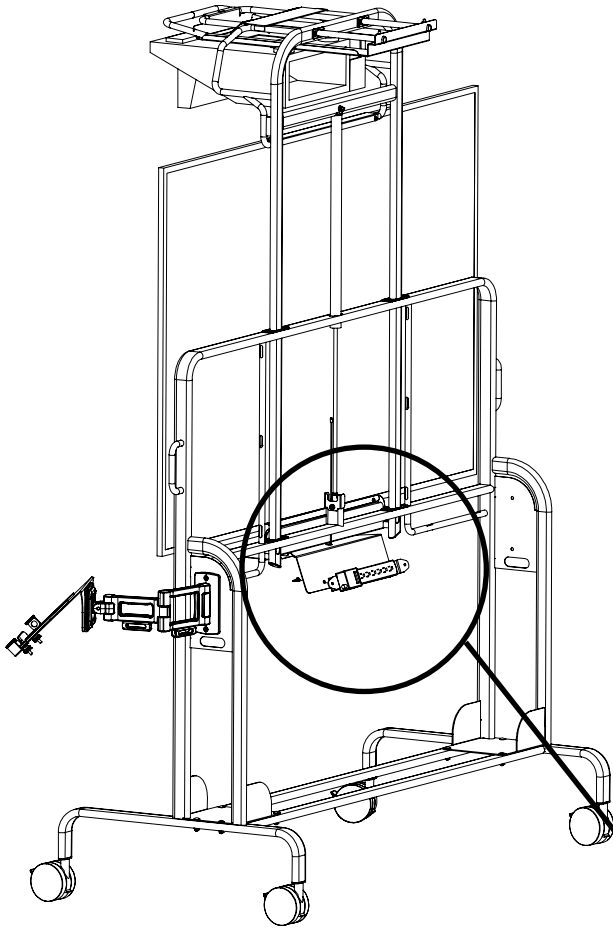

Bretford®
11000 Seymour Avenue
Franklin Park, IL 60131
TEL: 847.678.2545
800.521.9614
FAX: 847.678.0852
800.343.1779

Bretford Ltd.
2 Etongate
110 Windsor Road, Slough
Berkshire SL1 2JA England
TEL: 011 44 17 5353 9955
FAX: 011 44 17 5353 9478

www.bretford.com

Part # 031-9504
11.07.12 CG

24 of 24