


Disassembly Instructions

Piretti Torsion Stack Chair

Material Type: A. Steel B. Aluminum C. Plastic D. Foam E. Fabric

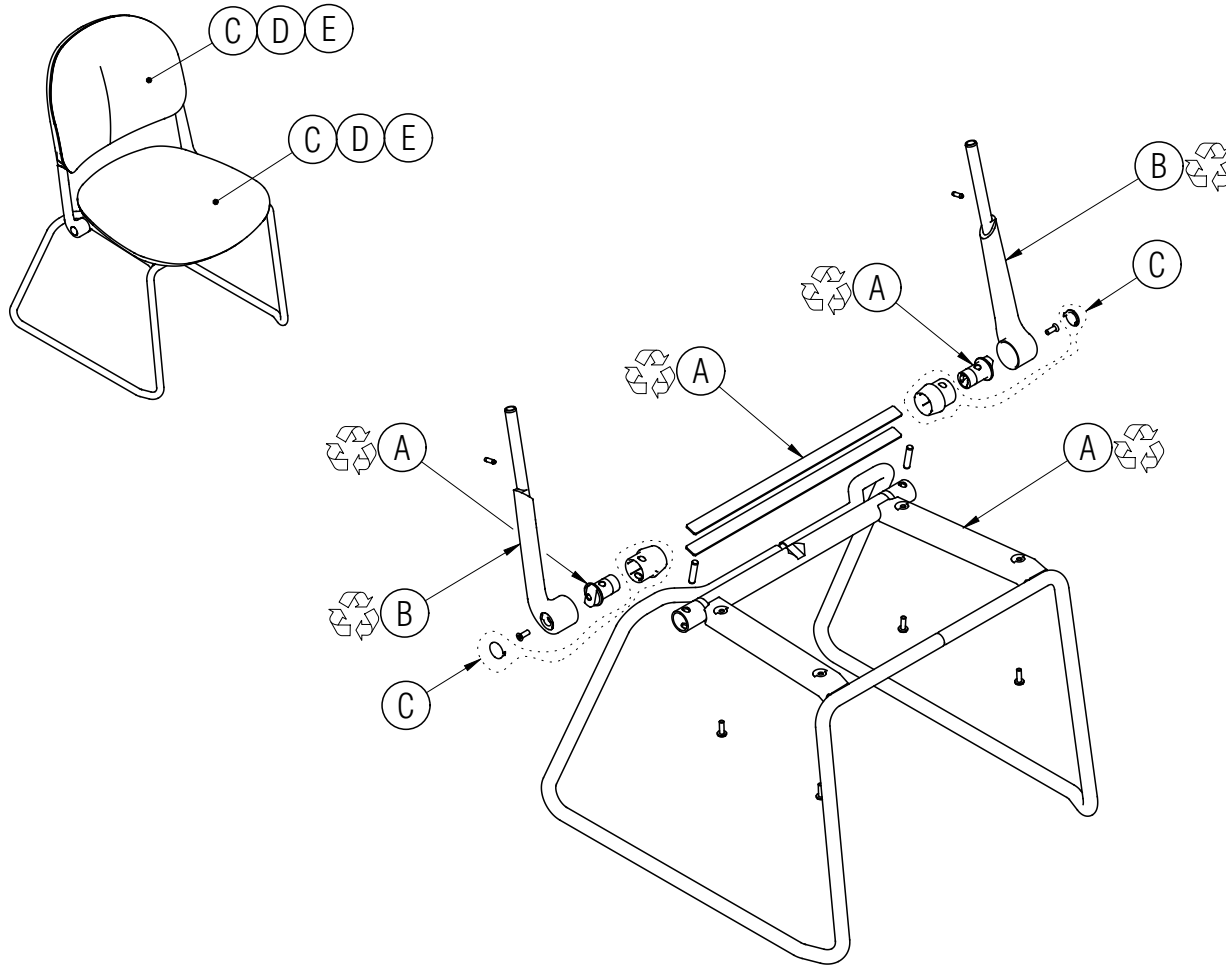

Procedure:

1. Remove the screws behind the backrest and pull the backrest upwards off the back supports.
2. Remove the screws holding the seat to the chair base and remove the seat and stacking bumper.
3. Remove the end caps from the back supports and remove the screws holding the back supports onto the torsion mechanism. Remove the back supports from the bushings.
4. Drive out the pins retaining the bushings in the torsion tube and remove the bushings and torsion springs.
5. Remove the screws holding any glides to the chair base and remove the glides.

General Notes:

1. Disassembly time: 10-15 minutes
2. This procedure assumes basic familiarity with hand tools and furniture terminology: no specialized training is required
3. All materials removed and disassembled shall be sorted and segregated with like materials and disposed of or recycled according to recycling availability or waste acceptance
4. For items to be recycled, refer to KI's End of Life Recycling Matrix and KI's End of Life Recovery Options Matrix, available at www.ki.com

All fasteners not explicitly tagged or shown are Material Type A: Steel


Required Tools




Gloves




Safety Glasses



Phillips Screwdriver



Pry Bar



Flat Screwdriver