KEILHAUER

5/32" Hex Allen Key




Hardware Included

1/4"-20 x 2 3/8" Binder Post


1/4"-20 x 11/16" Binder Post & Cap (x4) Spacer (x12) 1/4" Flat washer (x16)

0


Pact Booth Divider Assembly Instructions Booth

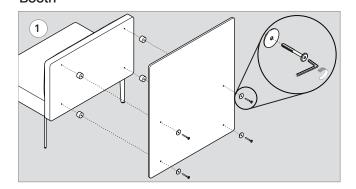


Using the 5/32" hex key, fasten divider to bench back with 1/4"-20 x 2 3/8" binder post (x4), spacer (x4) and 1/4" Flatwasher (x4).

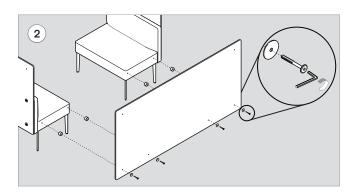


Repeat Step 1. Using the 5/32" hex key, fasten divider to bench seat side (x2) with 1/4"-20 x 2 3/8" binder post (x4), spacer (x4) and 1/4" Flatwasher (x4).

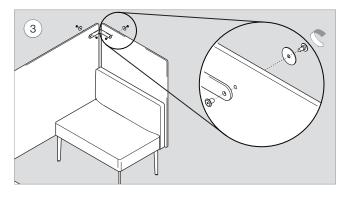


Using the 5/32" hex key, fasten bracket (x1) to divider (x2) with 1/4"- $20 \times 11/16$ " binder post and cap (x2), and 1/4" Flatwasher (x2).

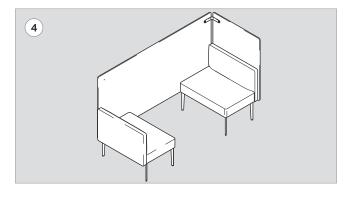

Place the assembled booth into its final position.

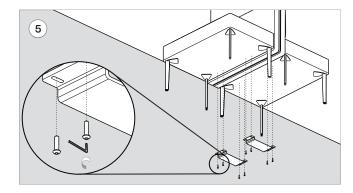

When ganging booths use the 5/32" hex key, fasten ganging plate (x2) to bench (x2) with 1/4"-20 x 1" button head cap screw (x8).

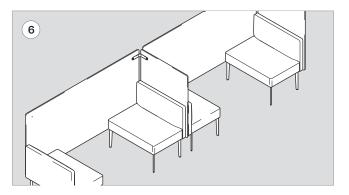

Place the assembled booths into their final position.