

Disassembly Instructions

Calida Swivel Chair

KI

Material Type:


A . Steel

B. Wood

C. Foam/Fabric

D. Plastic/Steel

E. Aluminum/Steel

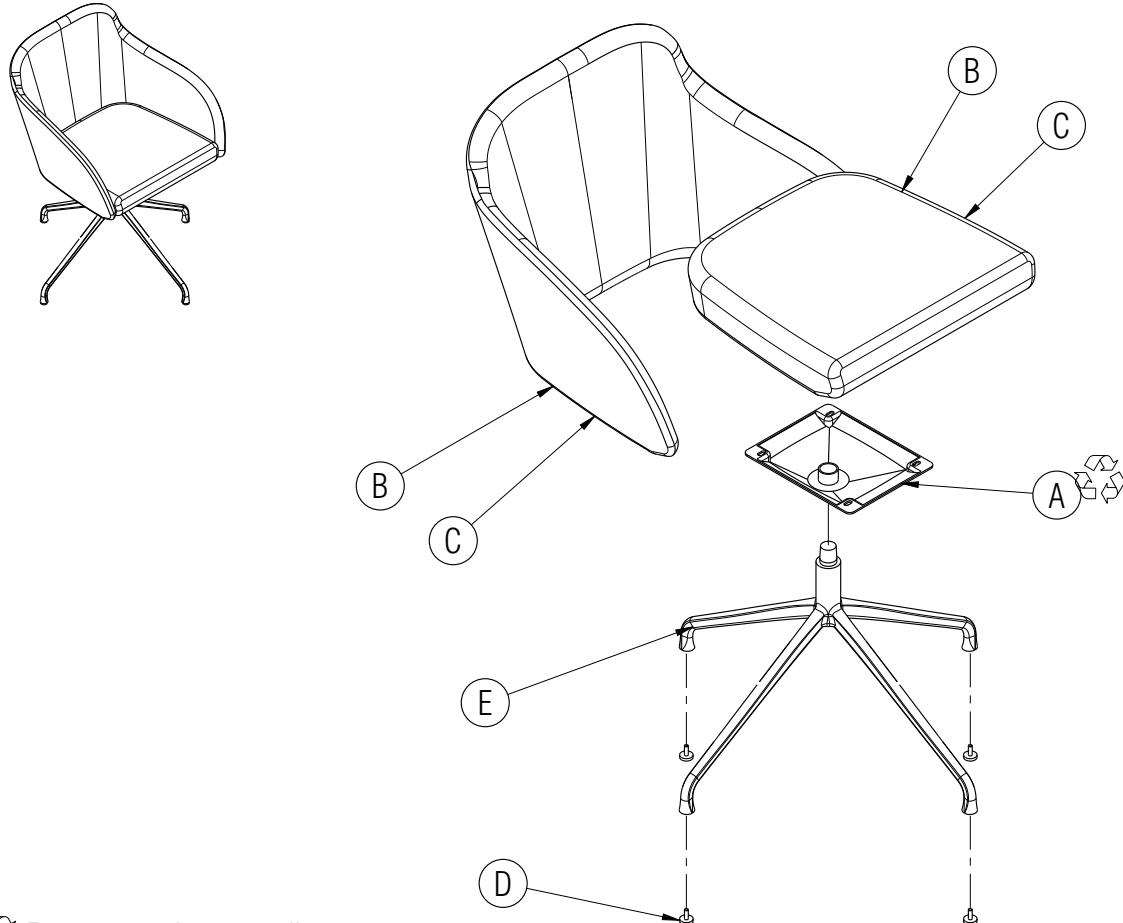

Fasteners not shown are all
Material Type A: Steel.

Procedure:

1. Remove the seat bottom bolts from the X-base assembly using the hex driver.
2. Remove the seat cushion from the seat assembly using the hex driver.
3. Use the mallet to separate the seat mounting plate from the X-base.
4. Unscrew the glides from the X-base.
5. Cut the fabric away and scrape the foam from the seat and backrest wood shells.

General Notes:

1. Disassembly time: 15-20 minutes
2. This procedure assumes basic familiarity with hand tools and furniture terminology: no specialized training is required
3. All materials removed and disassembled shall be sorted and segregated with like materials and disposed of or recycled according to recycling availability or waste acceptance
4. For items to be recycled, refer to KI's End of Life Recycling Matrix and KI's End of Life Recovery Options Matrix, available at www.ki.com


Required Tools



Gloves




Safety Glasses




Utility Knife



Putty Knife



Metric Hex Driver



Rubber Mallet