

Assembly Instructions ■

KD Stool

December 2002

Carton Contents:

leg set with threaded center
leg set with hole in center
stool seat
foot ring
parts bag (five 1" allen head screws,
four 1/2" allen head screws, one allen
wrench)

1. Begin leg assembly by first placing the stool seat, bottom side up, on a flat protective surface (Figure 1).

Note: It is important to install the leg set with threaded insert to bottom of stool seat first. Carefully examine leg sets to determine which leg set has a threaded insert at the center.

2. Position the leg set with the threaded center onto the stool seat and align the mounting holes with two of the threaded posts on the stool seat as illustrated. Hand-tighten the leg set to the stool with two 1" allen head screws. Do not tighten completely at this time (Figure 1).
3. Position the leg set with hole in center over the remaining two threaded posts on the stool seat. Hand-tighten the leg set to the stool with two 1" allen head screws. Do not tighten completely at this time (Figure 1).
4. Insert and hand-tighten a 1" allen head screw into the center hole where the two leg sets intersect (Figure 1).
5. Securely tighten all five 1" allen head screws with the supplied allen wrench (Figure 1).
6. With stool still bottom side up, take the foot ring in hand and orient it with the holes facing up. Position the foot ring inside the legs of the stool, below the leg tabs as illustrated (Figure 2).
7. Insert 1/2" allen head screws into each of the holes in the leg tabs, and hand-tighten into the foot ring. After all screws are in, securely tighten all four 1/2" allen head screws with the supplied allen wrench (Figure 2).

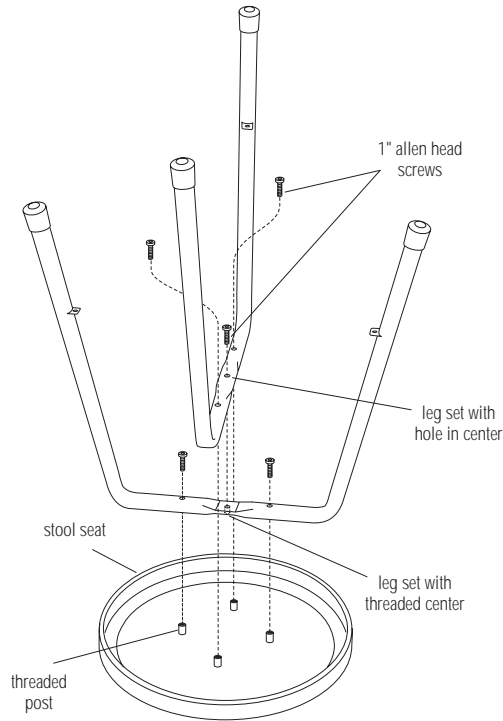


Figure 1

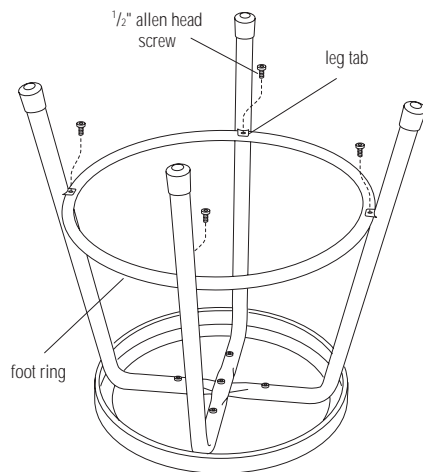


Figure 2

