

PRODUCT SPECIFICATIONS

Zoetry® Collection

January 2025

TECHNICAL SPECIFICATIONS

General

The below specifications cover Zoetry guest seating, lounge seating, guest and lounge in-line tables, freestanding occasional tables, privacy screens and electrical components.

Base Frame with Legs

All seating and freestanding occasional table base frames are constructed of $\frac{1}{8}$ " thick extruded aluminum rails with die cast aluminum legs. The rails and legs are fastened together using concealed $\frac{1}{4}$ -20 steel screws. Frame finish options are powder-coat paint over all components with colors per the KI color addendum, or high gloss hand polished legs coupled with bright anodize dipped (polished look) aluminum rails (aluminum finish only).

Adjustable Glides

Adjustable glides are available in non-marring natural color nylon or grey felt. Glides are 1" diameter and provide $\frac{7}{8}$ " height adjustability with a $\frac{5}{16}$ -18 steel threaded stem. The four glide assemblies are replaceable with no tools required.

Armcaps

Models can be configured with optional armcaps in stained and finished Beech hardwood, molded polyurethane, or upholstered arm only. Polyurethane armcaps are molded (in black only) with a light surface texture and are reinforced internally with a 10-gauge (.135" thick) steel bar, fastened to the arms with $\frac{7}{16}$ " diameter spring steel compression dowels.

Wood armcaps are $\frac{3}{4}$ Beech hardwood, kiln dried to a moisture content of six percent, sanded and finished in stain (color per KI color addendum) and fastened to the arms with $\frac{7}{16}$ " diameter spring steel compression dowels.

The wood armcap's finish include over-coating with a spray stain, then baking in a burn-off oven for one hour. The wood is then sealed to prevent moisture imbalance, and surfaces are lightly sanded using 400 grit paper. The final application of an oven-baked conversion polyacrylic topcoat seals and finishes all surfaces. Both the seal and finish coats contain an anti-microbial protectant. Armcaps are field replaceable.

Swivel Tablet Arms

Tablet writing surface is round, 14" in diameter, has a knife edge (KN) with overall thickness of $1\frac{1}{8}$ " and has a 360-degree swivel mechanism secured with screws to the underside of the writing surface. Swivel tablet is mounted 3" off-center from the pivot of the mechanism and can be ordered as right- or left-facing as well as removable or non-removable. Swivel tablet has a .030" laminate top surface and plain backer undersurface. Top surface is available in all standard KI laminate finishes. Benches can receive swivel tablets on both arms.

Structural Internal Frames (arm, seat, backrest)

Arm, seat and backrest frames can be a unique combination of materials and processes. Some frame components are made of a 100% recycled post-consumer polymeric blend molded with structural design elements that give strength and durability. Steel structural supports and fasteners are added to attach these elements to the base and to each other.



Furnishing Knowledge®

TECHNICAL SPECIFICATIONS

Structural Internal Frames (arm, seat, backrest) (cont.)

Other noted frame materials are $\frac{3}{4}$ " and $\frac{1}{2}$ " hardwood plywood, CNC cut with all joints nailed and glued, using additional interlocking features across all stress points. The following sections below list where these structural materials are applied;

$\frac{3}{4}$ " and $\frac{1}{2}$ " Hardwood Plywood

- All lounge, bench and guest seat frames - standard and heavy occupant widths
- All lounge and bench arms
- Lounge backrests - heavy occupant width
- Guest multi-seat "shared" middle arms

Molded Recycled Material

- Lounge and guest backrests - standard width
- Guest backrests - heavy occupant width
- Guest "outer" arms and models with in-line tables

Upholstery Foam & Suspension

Zoetry guest and guest bariatric seats are constructed of 3.5" thick molded polyurethane foam, 3.5 density, 35 lb compression with stretch webbing suspension underneath, stapled to the frame.

Zoetry guest and guest bariatric backrests are contoured and constructed with a maximum of 2" thick molded polyurethane foam, 3.5 density, 45 lb compression.

Zoetry lounge seats are constructed of 6" thick slab polyurethane foam, 3.5 density, 35 lb compression with stretch webbing suspension underneath, stapled to the frame.

Zoetry lounge and lounge bariatric backrests are constructed of 3" thick molded polyurethane foam, 3.5 density, 35 lb compression with stretch webbing suspension underneath, stapled to the frame.

Lounge bariatric and bench seats use slab polyurethane foam in the same density and compression values as the molded foam components in the seat. Stretch webbing suspension is used underneath.

All models – arms are covered in foam $\frac{3}{4}$ " thick 2.6 density, 80 R compression on the seating sides of the arms. Remaining outer arm surfaces are $\frac{1}{4}$ " soft feel 2.5 density, 45 lb compression.

Upholstery & Sewing

Upholstery features on all models include top stitching at all primary seams for lasting durability. Stitching is available in contrasting color choices per the KI thread finish card.

Tables (in-line and freestanding occasional)

Tables and tops with laminate are constructed using 45 lb density particleboard with .030" thick high-pressure laminate, .030" high-pressure backer and 2 mm pvc edge banding (KI "73P" edge banding in limited complimentary colors). The overall top thickness is $\frac{3}{4}$ ", available in colors per the KI color addendum. In-line "working-height table" and "raised table" have all exposed surfaces laminated and edge banded.

Flat tabletops specified with "solid surface" are constructed of $\frac{1}{2}$ " thick Corian® material with $\frac{1}{4}$ " plywood backer. The edge is a glued and polished Corian® band, 1" wide all around, creating a seamless continuous surface. The solid surface tops are colored "Glacier White" only.

All tables are configurable with optional power modules. See "Electrical System Options" specifications for additional information. Solid surface tabletops are fastened to frames using concealed $\frac{1}{4}$ -20 steel screws into steel T-nuts in the table backer. Laminate tops are fastened to frames using #14 x $\frac{1}{2}$ " wood screws.

CODE COMPLIANCE



Furnishing Knowledge®

TECHNICAL SPECIFICATIONS

Lounge Privacy Screens

Lounge privacy screen corners are pressure-formed, laminated #3 grade Gum veneer plywood, 10 mm nominal thickness. Lounge center extensions (loveseat and larger) are 1/2" nominal thick Birch plywood. Both are covered in 1/4" thick Volara® high-density foam on all surfaces and edges. Fabric is applied over the plywood and foam and sewn with seams along the outside edges. Overall finished thickness is 3/4". Privacy screens are mounted to the lounge using hidden or minimally visible die-cast aluminum hooks and receivers, painted black. The screen hooks are aligned to the lounge receivers and fixed in place using #8 steel screws.

Note: The privacy screen mounting components are permanently attached to the lounge and screen and cannot be repositioned for other uses.

The top screen alignment medallions are machined solid aluminum, and optionally polished to a mirror finish or powder-coated in KI colors. The two halves are fastened using a #8 steel screw. Hidden steel toothed "gripper" features strengthen the medallion retention when fully assembled between screen segments.

Electrical System Options

Byrne Mini-Tap® Power Module with 3-Prong Plug

Zoetry seating can be configured with optional Byrne Mini-Tap power modules (a self-contained, UL listed single relocatable power tap). One 15-amp, 125 volt AC simplex receptacle with one 2.1-amp, 5 volt DC USB Type A and one Type C outlet port (2.0 and 3.0 compatible, no data), provide device charging or direct AC power. The module is standard with a 72" long, 14 AWG, 15-amp NEMA rated 3-conductor black SJT cord with 3-prong grounded plug. Modules are optionally colored black with black outlet ports, or white with white outlet ports. Single modules can be configured to the right side or left side of the model frame. Outlets face the front of the single seat lounge or chair.

Byrne Mini-Tap Power Module for Sequence®

Seating can also be configured with optional 12 amp system rated Byrne Mini-Tap power modules for Sequence, to accommodate two modules per unit (loveseat or larger) with a single corded AC power in-feed. The NEMA rated 3-conductor black SJT infeed cord with 3-prong plug is rated for 15 amps with over-current protection. The Sequence system is ETL Listed. Dual modules are mounted right and left sides of the frame, facing the front of the seating. Single modules can be configured to the right side or left side of the model frame. The module-to-module cord connections are accomplished by a keyed Sequence power jumper, with light indication for proper connection. All modules and cabling are factory installed with cords, discretely dressed and hidden at the underside of the lounge, with the infeed ready to plug into the user location outlets.

Byrne Node® Power Module with 3-Prong Plug

In-line tables can be optionally configured with a Byrne Node power module with 3-prong plug (a self-contained, UL listed single relocatable power tap). One 15-amp, 125 volt AC simplex receptacle with one 2.1-amp, 5 volt DC USB Type A and one Type C connectors (2.0 and 3.0 compatible, no data), provide device charging or direct AC power. The module is standard with a 72" long, 14 AWG, 15-amp NEMA rated 3-conductor black SJT cord with 3-prong grounded plug. Node modules are optionally colored black with black outlet ports, white with white outlet ports or silver with black outlet ports. Node modules are top surface mounted in the tabletop. UL "spill proof" receptacles are standard.

General Construction

A sweep through clean out between the backrest and seat allows debris to be pushed through and to drop to the floor beneath all models.

Arms, armcaps, glides, privacy screens, seats and backrests are field replaceable.

General Upholstery

Contrasting fabric specification is not available.

Available fabrics only in approved Pallas/Ingrades or COM/KOM options.

Contrasting color stitching per KI thread color finish card.

CODE COMPLIANCE



Furnishing Knowledge®

DIMENSIONS

Zoetry Guest Seating

Zoetry Guest Seating Overall Dimensions										
Model/Feature	A Overall Width	B Overall Depth	C Overall Height	D Arm Height	E Back Width	F Seat Depth	G Seat Height	H Arm Width	I Table Height Above Finish Floor	J Table Height Above Seat Frame
Standard Guest	Reference Appropriate Chart Below	23 ³ / ₂ "	31 ¹ / ₂ "	26"	20 ¹ / ₄ "	18 ¹ / ₄ "	18 ¹ / ₂ "	2 ¹ / ₈ "	N/A	N/A
Bariatric Guest	Reference Appropriate Chart Below	23 ³ / ₂ "	31 ¹ / ₂ "	26"	28 ¹ / ₂ "	18 ¹ / ₄ "	18 ¹ / ₂ "	2 ¹ / ₈ "	N/A	N/A
Guest In-Line Flat Tables	20 ¹ / ₄ "	22 ³ / ₈ "	15 ¹ / ₄ "	N/A	N/A	N/A	N/A	N/A	18 ¹ / ₂ "	3 ³ / ₄ "
Guest In-Line Raised Tables	20 ¹ / ₄ "	22 ³ / ₈ "	21 ⁵ / ₈ "	N/A	N/A	N/A	N/A	N/A	21 ⁵ / ₈ "	7 ¹ / ₄ "
Guest In-Line Working-Height Tables	24 ¹ / ₂ "	22 ³ / ₈ "	26"	N/A	N/A	N/A	N/A	N/A	25 ⁷ / ₈ "	11 ¹ / ₂ "


Zoetry Standard Guest Seating Overall Width	
Model	A Overall Width
ZYGNC	24 ¹ / ₂ "
ZYGNCC	44 ³ / ₄ "
ZYGACC	46 ³ / ₄ "
ZYGNCCC	64 ⁷ / ₈ "
ZYGACCC	69 ¹ / ₄ "
ZYGACRC	69 ¹ / ₄ "
ZYGACTC	69 ¹ / ₄ "
ZYGACSC	69 ¹ / ₄ "
ZYGNCWC	69 ¹ / ₄ "
ZYGACTCL	69 ¹ / ₄ "
ZYGACSCL	69 ¹ / ₄ "
ZYGACTCR	69 ¹ / ₄ "
ZYGACSCR	69 ¹ / ₄ "

Zoetry Bariatric Guest Seating Overall Width	
Model	A Overall Width
ZYGNB	33"
ZYGNBB	61 ³ / ₄ "
ZYGABB	63 ⁷ / ₈ "
ZYGABTB	86 ¹ / ₄ "
ZYGABSB	86 ¹ / ₄ "
ZYGABRB	86 ¹ / ₄ "
ZYGNBWB	86 ¹ / ₄ "
ZYGABTBL	86 ¹ / ₄ "
ZYGABSBL	86 ¹ / ₄ "
ZYGABTBR	86 ¹ / ₄ "
ZYGABSBR	86 ¹ / ₄ "


Zoetry Standard/Bariatric Guest Seating Overall Width	
Model	A Overall Width
ZYGNBC	53 ¹ / ₄ "
ZYGNCB	53 ¹ / ₄ "
ZYGABC	55 ³ / ₈ "
ZYGACB	55 ³ / ₈ "
ZYGACBC	77 ³ / ₄ "
ZYGABCB	86 ¹ / ₄ "
ZYGABTC	77 ³ / ₄ "
ZYGABSC	77 ³ / ₄ "
ZYGABRC	78"
ZYGNBWC	77 ³ / ₄ "
ZYGACTB	77 ³ / ₄ "
ZYGACSB	77 ³ / ₄ "
ZYGACRB	77 ³ / ₄ "
ZYGNCWB	77 ³ / ₄ "
ZYGABTCL	77 ³ / ₄ "
ZYGABSCL	77 ³ / ₄ "
ZYGABTCR	77 ³ / ₄ "
ZYGABSCR	77 ³ / ₄ "

DIMENSIONS


Zoetry Guest Seating (cont.)

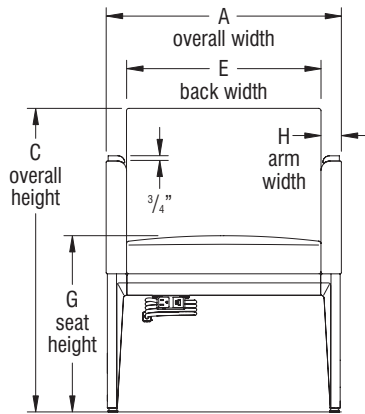


**Standard Guest
(front view)**

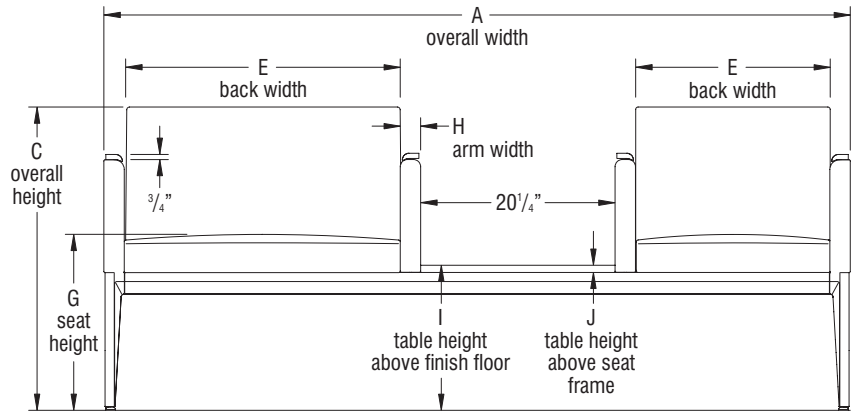


**Standard & Bariatric Guest Seating with
Flat Table (front view)**

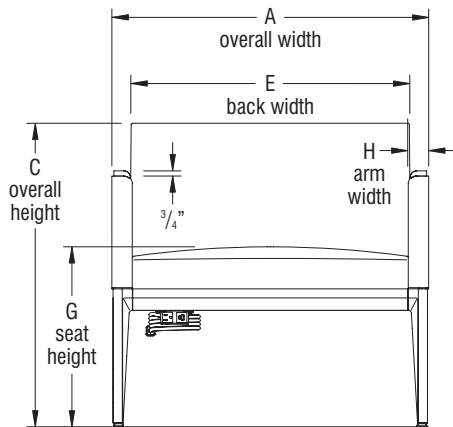


**Bariatric Guest
(front view)**

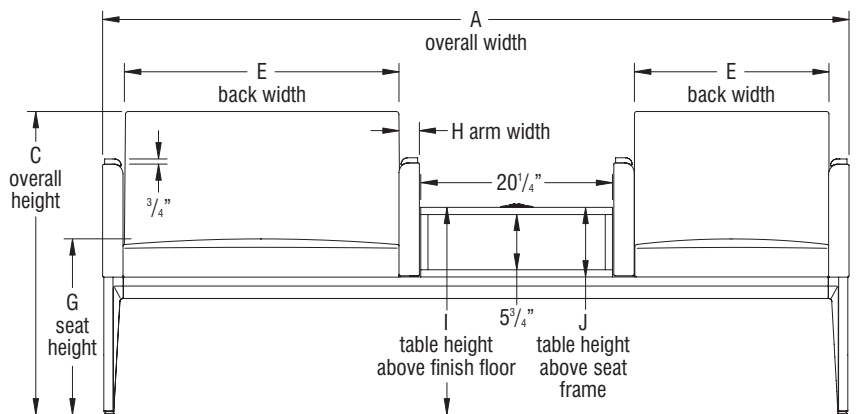


**Standard & Bariatric Guest Seating with
Raised Table (front view)**

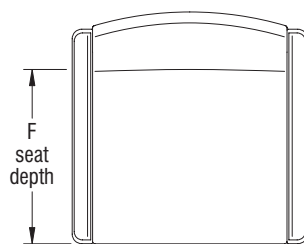

(top view)

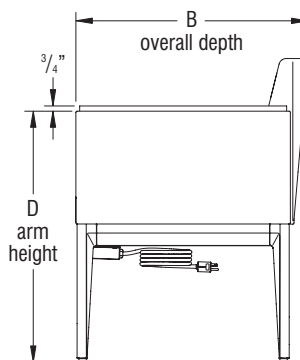

(side view)

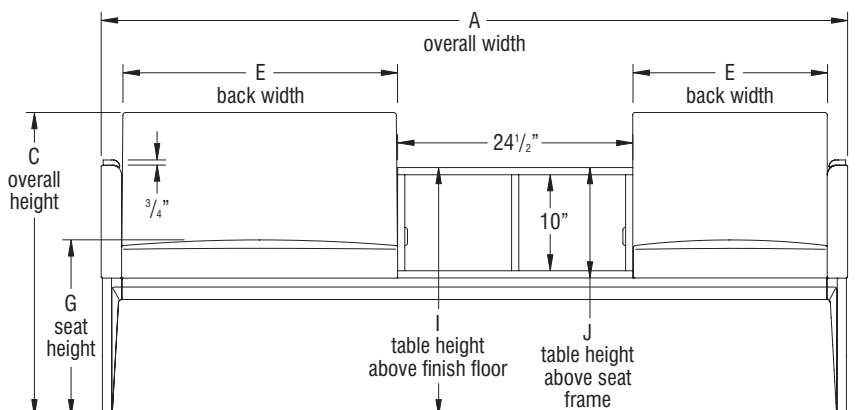

**Standard & Bariatric Guest Seating with
Working-Height Table (front view)**

DIMENSIONS

Zoetry Lounge Seating (without privacy screens)

Zoetry Lounge Overall Dimensions										
Model/Feature	A Overall Width	B Overall Depth	C Overall Height	D Arm Height	E Back Width	F Seat Depth	G Seat Height	H Arm Width	I Table Height Above Finish Floor	J Table Height Above Seat Frame
Standard Lounges	Reference Appropriate Chart Below	28"	32"	25"	22"	20½"	18"	4"	N/A	N/A
Bariatric Lounges	Reference Appropriate Chart Below	28"	32"	25"	30"	20½"	18"	4"	N/A	N/A
Lounge In-Line Flat Tables	22"	27⅞"	14½"	N/A	N/A	N/A	N/A	N/A	9⅝"	¾"
Lounge In-Line Raised Tables	22"	27⅞"	16⅞"	N/A	N/A	N/A	N/A	N/A	16⅞"	7/4"
Lounge In-Line Working-Height Tables	22"	27⅞"	32"	N/A	N/A	N/A	N/A	N/A	24⅞"	16"


Zoetry Standard Lounge Overall Width	
Model	A Overall Width
ZYLNC	30"
ZYLNCC	52"
ZYLACC	56"
ZYLNCCC	74"
ZYLACCC	82"
ZYLACRC	82"
ZYLACTC	82"
ZYLACSC	82"
ZYLNCWC	74"
ZYLACTCL	82"
ZYLACSCL	82"
ZYLACTCR	82"
ZYLACSCR	82"

Zoetry Bariatric Lounge Seating Overall Width	
Model	A Overall Width
ZYLNBB	38"
ZYLABB	68"
ZYLABTB	72"
ZYLABSB	98"
ZYLABRB	98"
ZYLNBBWB	90"
ZYLABTBBL	98"
ZYLABSBL	98"
ZYLABTBR	98"
ZYLABSBR	98"


Zoetry Standard/Bariatric Lounge Overall Width	
Model	A Overall Width
ZYLNBC	60"
ZYLNCB	60"
ZYLABC	64"
ZYLACB	64"
ZYLACBC	90"
ZYLACB	98"
ZYLABTC	90"
ZYLABSC	90"
ZYLABRC	90"
ZYLNBBWC	82"
ZYLACTB	90"
ZYLACSB	90"
ZYLACRB	90"
ZYLNBBWB	82"
ZYLABTCL	90"
ZYLABSCL	90"
ZYLABTCL	90"
ZYLABTCL	90"
ZYLABSCR	90"

DIMENSIONS


Zoetry Lounge Seating (without Privacy Screens) (cont.)

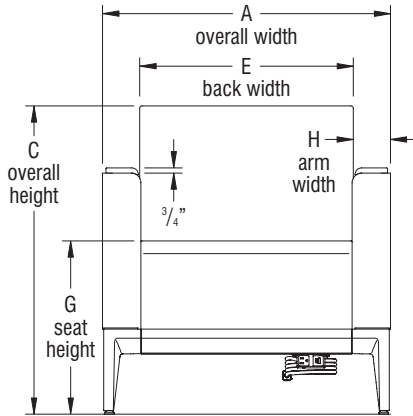


**Standard Lounge
(front view)**

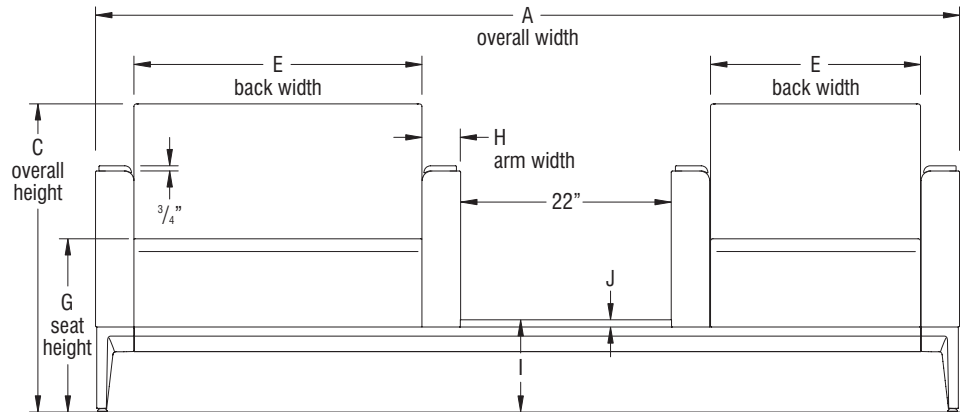


**Standard & Bariatric Lounge with
Flat Table (front view)**

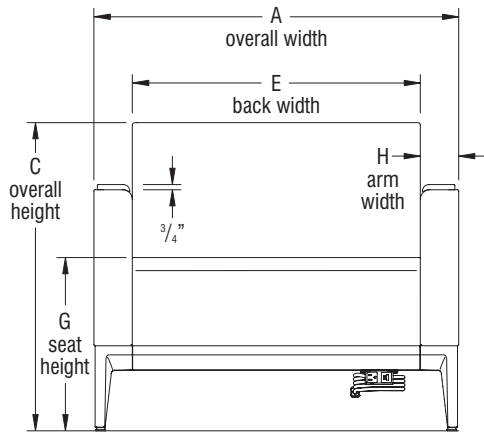


**Bariatric Lounge
(front view)**

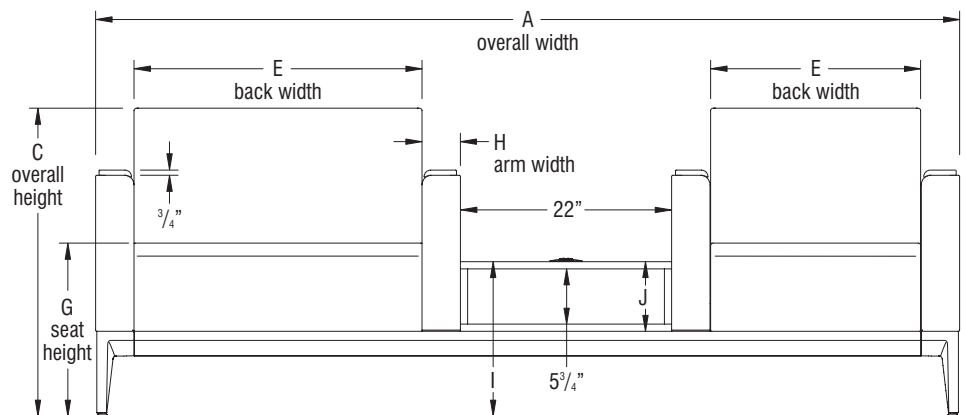


**Standard & Bariatric Lounge with
Raised Table (front view)**

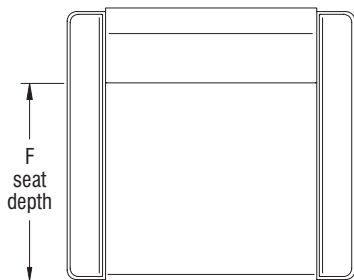

(top view)

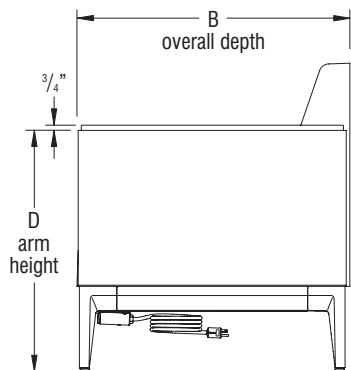

(side view)

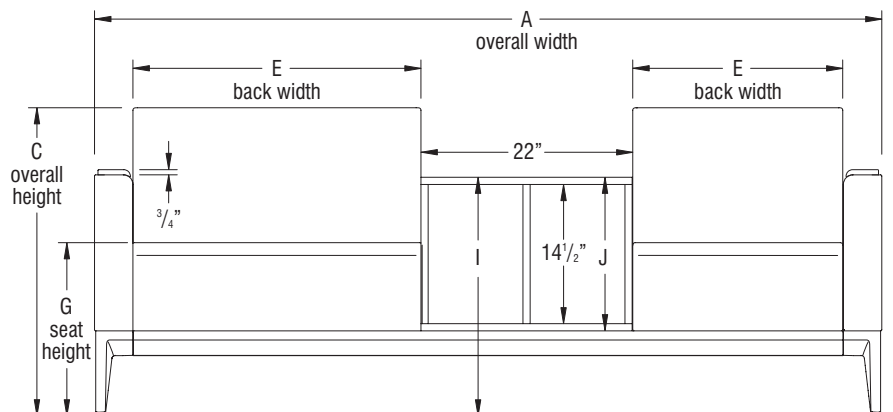

**Standard & Bariatric Lounge with
Working-Height Table (front view)**

DIMENSIONS



Zoetry Lounge Seating with Privacy Screens

Zoetry Lounge Overall Dimensions										
Model/Feature	A Overall Width	B Overall Depth	C Overall Height	D Arm Height	E Back Width	F Seat Depth	G Seat Height	H Arm Width	I Table Height Above Finish Floor	J Table Height Above Seat Frame
Standard Lounges	Reference Appropriate Chart Below	30 ⁷ / ₄ "	50"	25"	22"	20 ¹ / ₂ "	18"	4"	N/A	N/A
Bariatric Lounges	Reference Appropriate Chart Below	30 ⁷ / ₄ "	50"	25"	30"	20 ¹ / ₂ "	18"	4"	N/A	N/A
Lounge In-Line Flat Tables	22"	27 ⁷ / ₈ "	9 ¹ / ₂ "	N/A	N/A	N/A	N/A	N/A	9 ⁵ / ₈ "	3 ³ / ₄ "
Lounge In-Line Raised Tables	22"	27 ⁷ / ₈ "	16"	N/A	N/A	N/A	N/A	N/A	16 ¹ / ₈ "	7 ¹ / ₄ "
Lounge In-Line Working-Height Tables	22"	27 ⁷ / ₈ "	25"	N/A	N/A	N/A	N/A	N/A	24 ⁷ / ₈ "	16"

Zoetry Standard Lounge Overall Width	
Model	A Overall Width
ZYPNC	34"
ZYPNCC	56"
ZYPNCCC	78"
ZYPACRC	86"
ZYPACTC	86"
ZYPACSC	86"
ZYPNCWC	78"
ZYPACTCL	86"


Zoetry Standard Lounge Overall Width (cont.)	
Model	A Overall Width
ZYPACTCR	86"
ZYPACSCCL	86"
ZYPACSCR	86"

Zoetry Bariatric Lounge Seating Overall Width	
Model	A Overall Width
ZYPNB	42"
ZYPNBB	72"

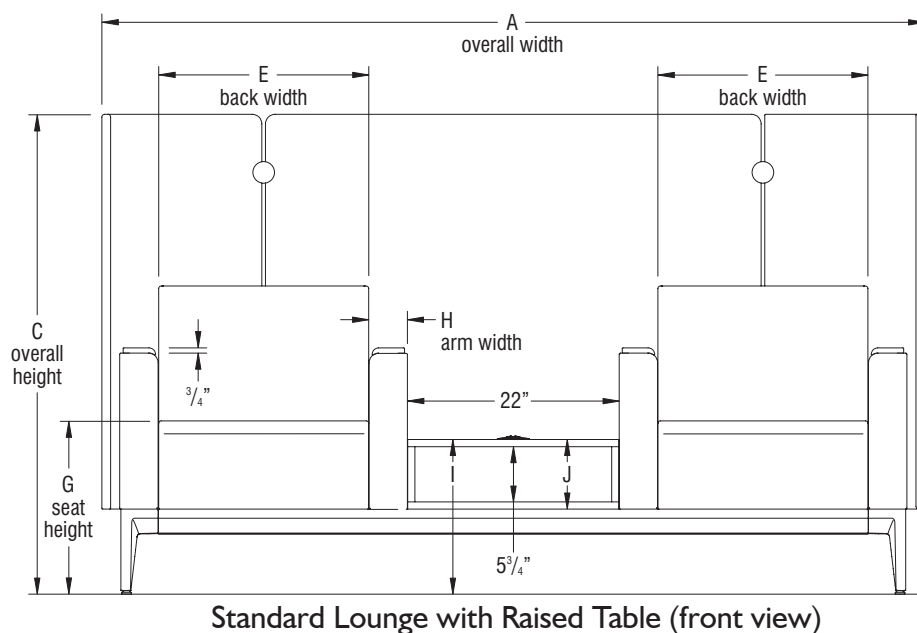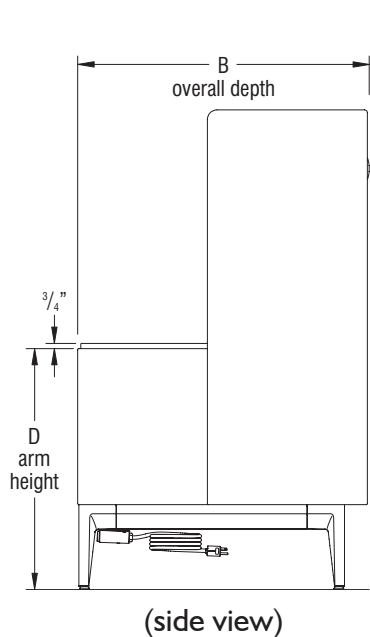


DIMENSIONS


Zoetry Lounge Seating with Privacy Screens (cont.)

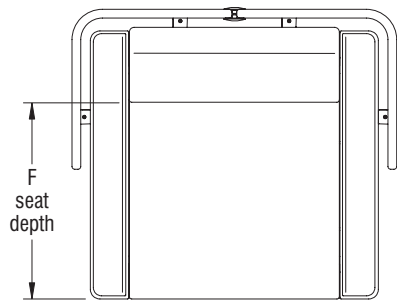


(top view)

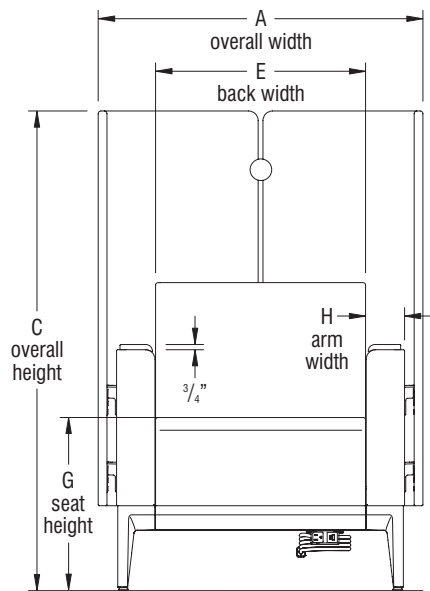


Standard Lounge
(front view)

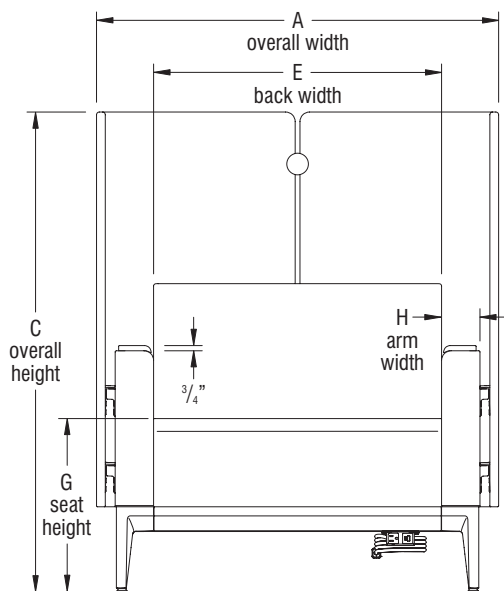

Bariatric Lounge (front view)

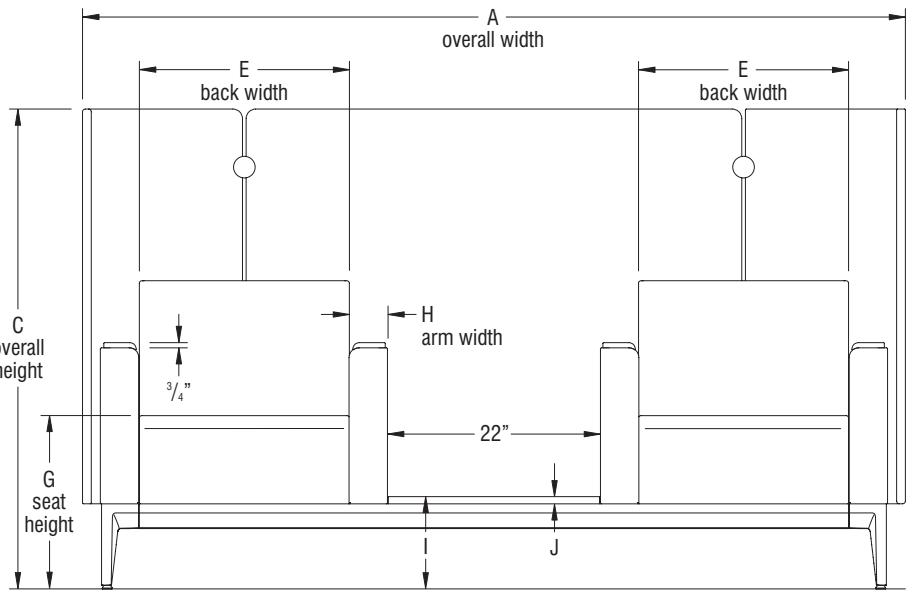

Standard Lounge with
Flat Table (front view)

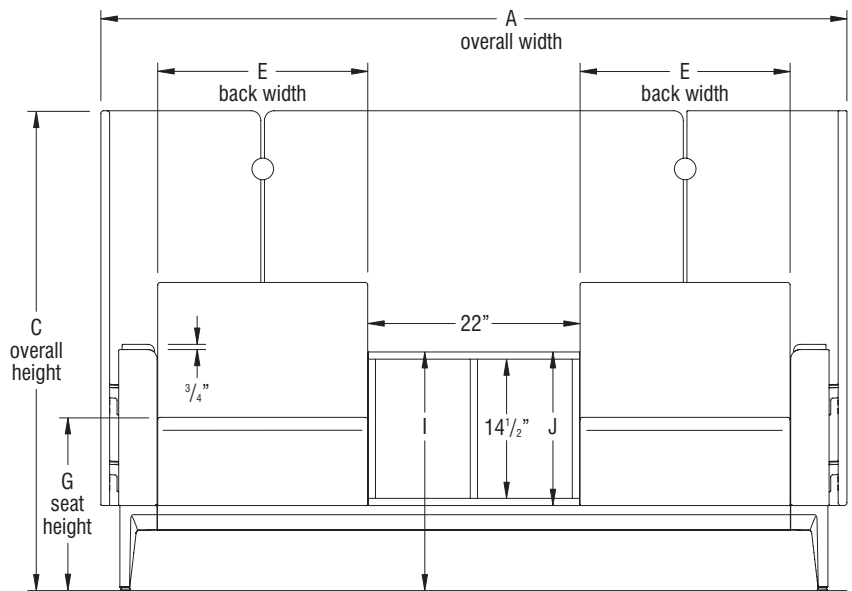


Standard Lounge with
Working-Height Table (front view)


DIMENSIONS

Zoetry Benches


Zoetry Benches Overall Dimensions								
Model/Feature	A Overall Width	B Overall Depth	C Overall Height	D Arm Height	E Seat Width	F Seat Depth	G Seat Height	H Arm Width
ZYBNCC	52"	21 1/4"	25"	25"	22"	21 1/4"	18"	4"
ZYBNBB	68"	21 1/4"	25"	25"	30 1/4"	21 1/4"	18"	4"
ZYBNCCC	74"	21 1/4"	25"	25"	22"	21 1/4"	18"	4"
ZYBXCC	52"	21 1/4"	18"	N/A	22"	21 1/4"	18"	N/A
ZYBXBB	68"	21 1/4"	18"	N/A	30 1/4"	21 1/4"	18"	N/A
ZYBXCCC	74"	21 1/4"	18"	N/A	22"	21 1/4"	18"	N/A

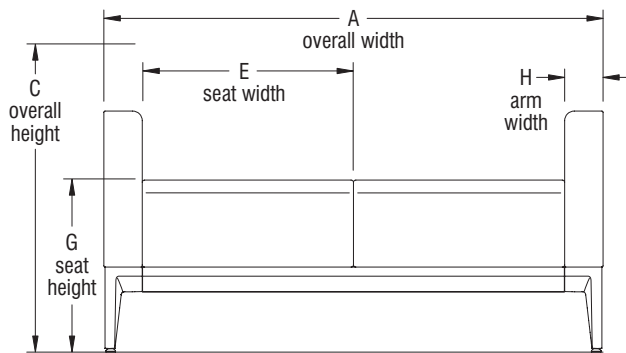


Standard Bench with Arms
(front view)

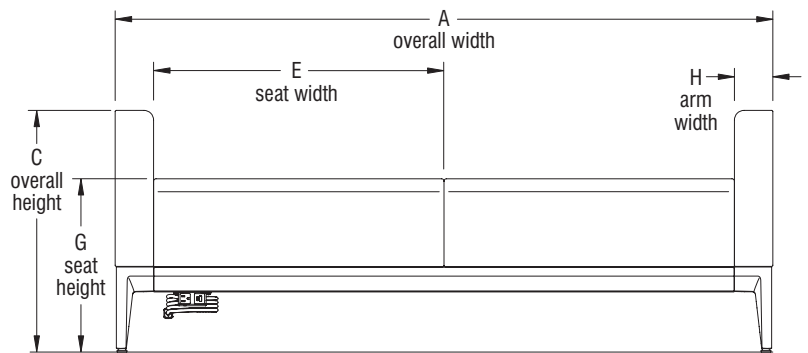


Bariatric Bench with Arms
(front view)

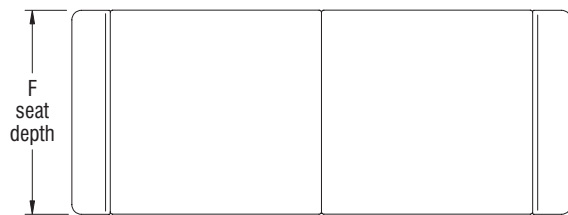


Standard Bench with Arms
(top view)

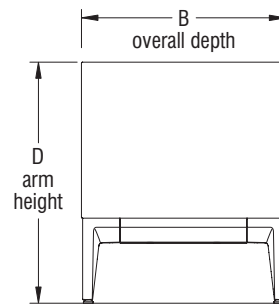


Bench with Arms
(side view)

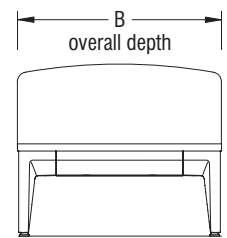

Bench without Arms
(side view)

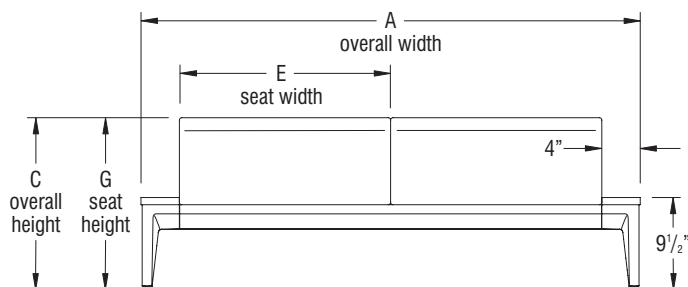


Standard Bench without Arms
(top view)

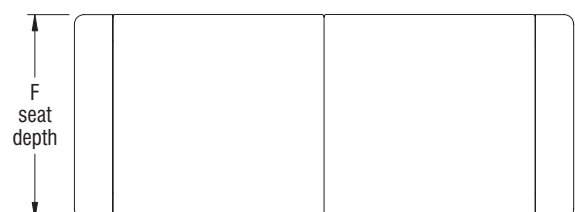

Standard Bench without Arms
(top view)







DIMENSIONS

Zoetry Lounge Seating with Swivel Tablet

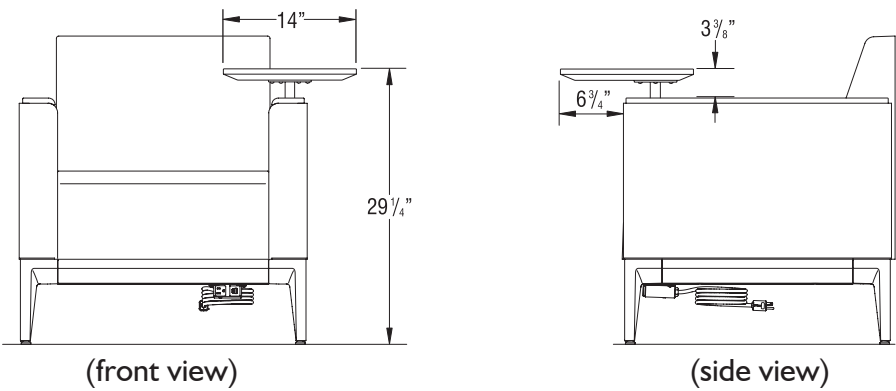


Zoetry Freestanding Occasional Tables

Zoetry Freestanding Occasional Tables Overall Dimensions			
Model/Feature	A Overall Width	B Overall Depth	C Overall Height
ZYT2222T	22 1/4"	22 1/4"	15"
ZYT2222S	22 1/4"	22 1/4"	15"
ZYT2244T	44"	22 1/4"	15"
ZYT2244S	44"	22 1/4"	15"
ZYT3030T	30"	30"	15"
ZYT3030S	30"	30"	15"
ZYT3636T	36 1/4"	36 1/4"	15"
ZYT3636S	36 1/4"	36 1/4"	15"

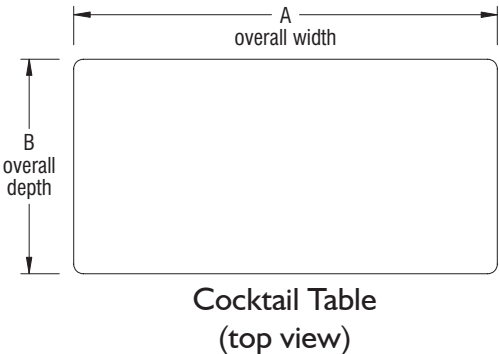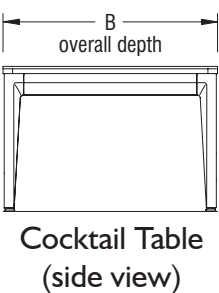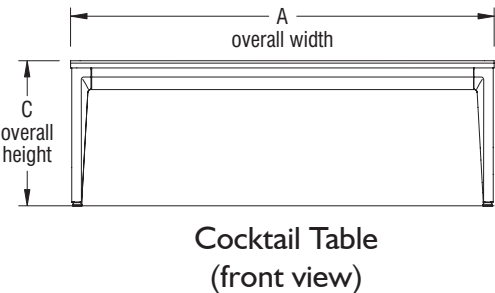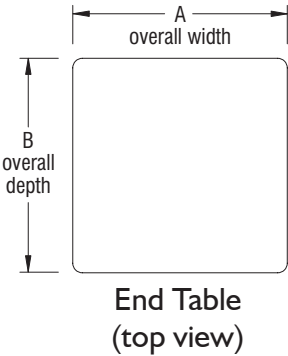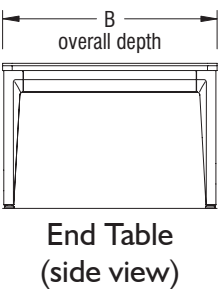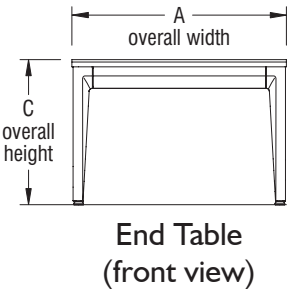


STATEMENT OF LINE


Zoetry Guest Seating

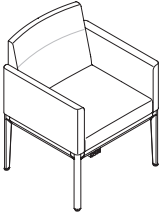


Guest Chair
ZYGNC

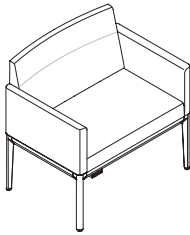


Bariatric Guest Chair
ZYGNB

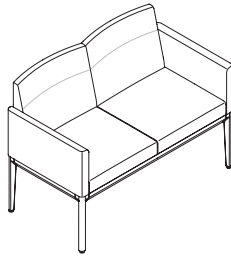


Guest Loveseat
ZYGNCC

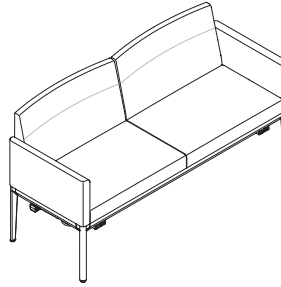


Bariatric Guest Loveseat
ZYGNBB

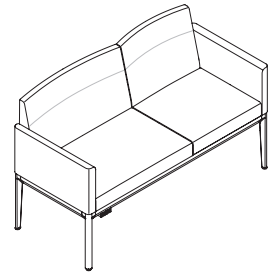


Guest Loveseat
Bariatric Left/Standard Right
ZYGNBC

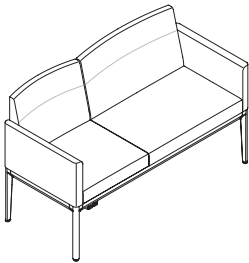


Guest Loveseat
Standard Left/Bariatric Right
ZYGNCB

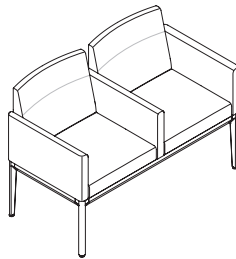


Tandem Guest Loveseat
ZYGACC

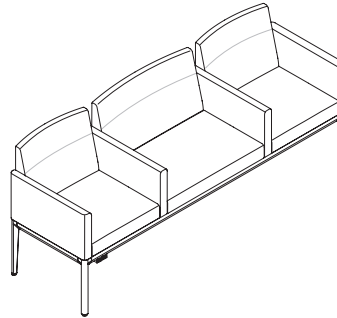


Tandem Guest Sofa
Standard/Bariatric/Standard
ZYGACBC

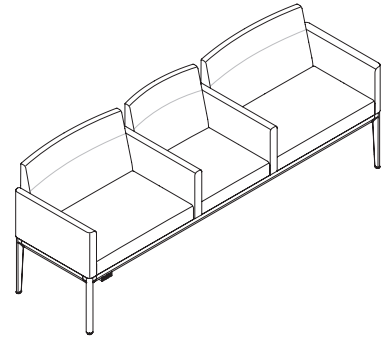


Tandem Guest Sofa
Bariatric/Standard/Bariatric
ZYGABCB

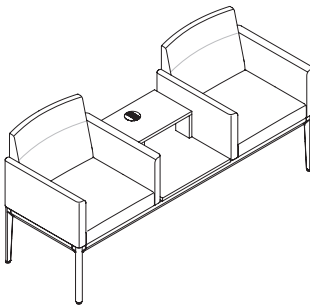


Tandem Guest
Standard/Raised Table/Standard
ZYGACRC

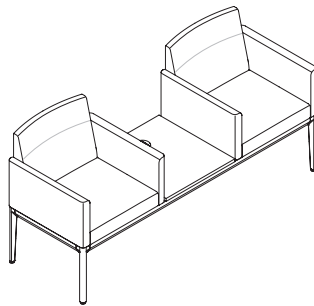


Tandem Guest
Standard/Flat Table/Standard
ZYGACTC
ZYGACSC

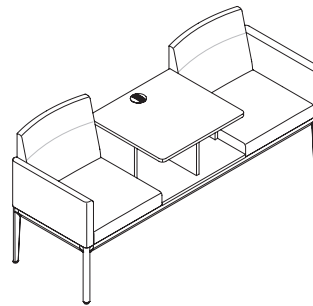


Guest Sofa
Standard/Working-Height Table/Standard
ZYGNCWC

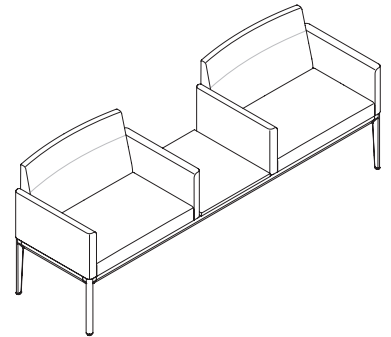


Tandem Guest Sofa Bariatric/Table/Bariatric
ZYGABTB
ZYGABSB

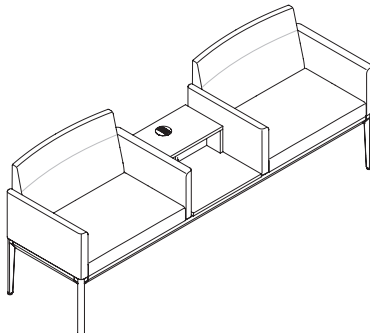

Tandem Guest Sofa
Bariatric/Raised Table/Bariatric
ZYGABRB

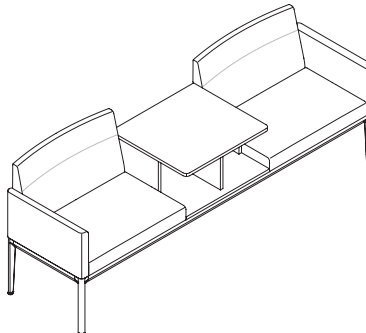


Guest Sofa
Bariatric/Working-Height Table/Bariatric
ZYGNBWB

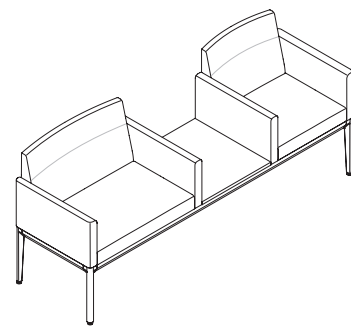


Tandem Guest Sofa
Bariatric/Table/Standard
ZYGABTC
ZYGABSC

STATEMENT OF LINE


Zoetry Guest Seating (cont.)

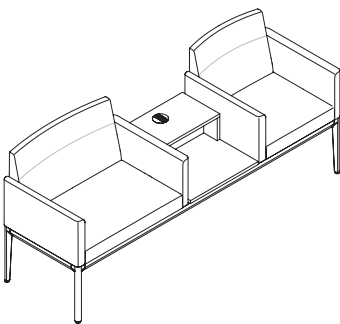


Tandem Guest Sofa
Bariatric/Raised Table/Standard
ZYGABRC

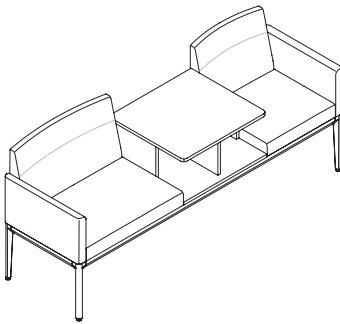


Guest Sofa
Bariatric/Working-Height Table/Standard
ZYGNBWC

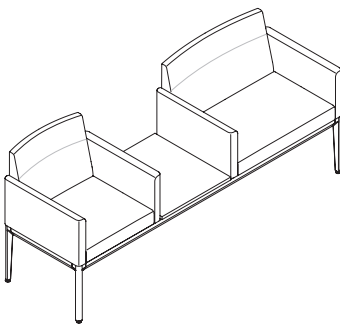


Tandem Guest Sofa
Standard/Table/Bariatric
ZYGACTB
ZYGACSB

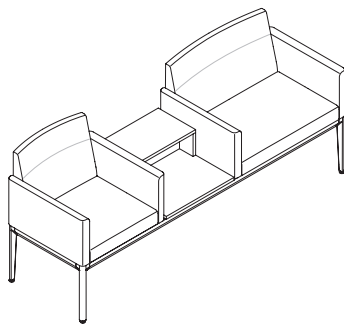


Tandem Guest Sofa
Standard/Raised Table/Bariatric
ZYGACRB

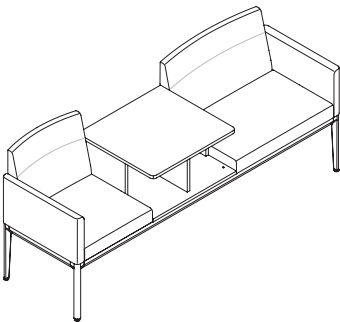


Guest Sofa
Standard/Working-Height Table/Bariatric
ZYGNCWB

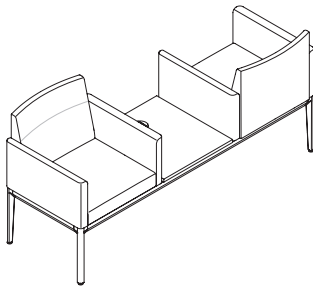


Guest Opposing Orientation
Standard/Table/Standard
ZYGACTCL
ZYGACSCCL

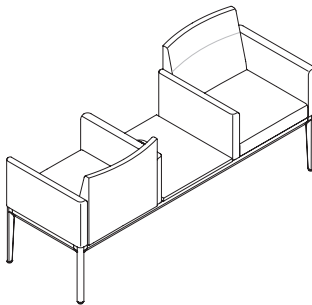


Guest Opposing Orientation
Standard/Table/Standard
ZYGACTCR
ZYGACSCR

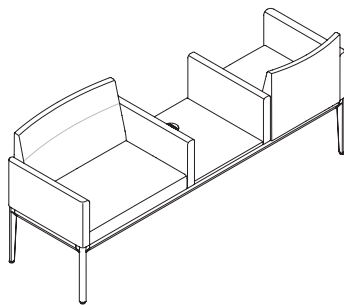


Guest Opposing Orientation
Bariatric/Table/Standard
ZYGABTCL
ZYGABSCL

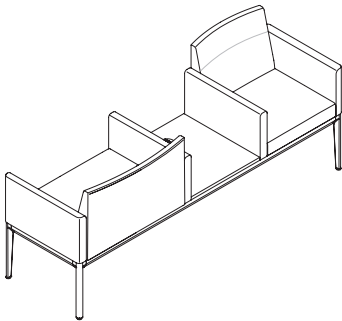

Guest Opposing Orientation
Bariatric/Table/Standard
ZYGABTCR
ZYGABSCR

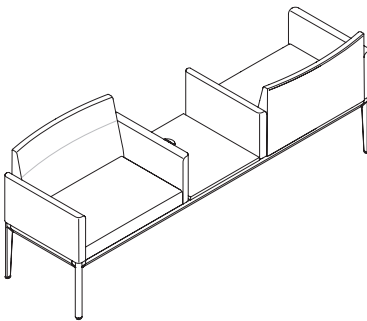


Guest Opposing Orientation
Bariatric/Table/Bariatric
ZYGABTBL
ZYGABSBL

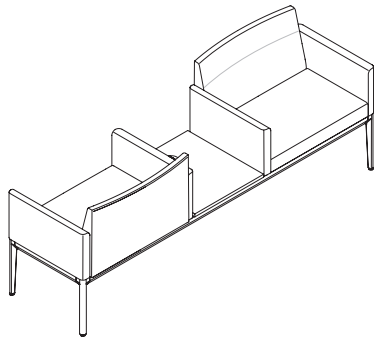


Guest Opposing Orientation
Bariatric/Table/Bariatric
ZYGABTBR
ZYGABSBR

STATEMENT OF LINE


Zoetry Lounge Seating

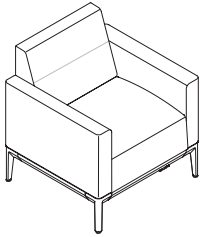


Lounge Chair
ZYLNC

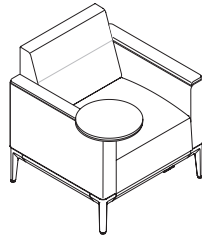


Lounge Chair with
Removable Swivel Tablet
(left-side facing)
ZYLNCTLRA

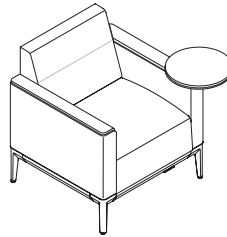


Lounge Chair with
Removable Swivel Tablet
(right-side facing)
ZYLNCTRRA

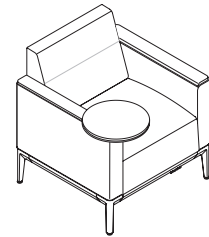


Lounge Chair with
Non-Removable Swivel Tablet
(left-side facing)
ZYLNCTLNR

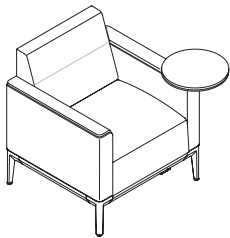


Lounge Chair with
Non-Removable Swivel Tablet
(right-side facing)
ZYLNCTRNR

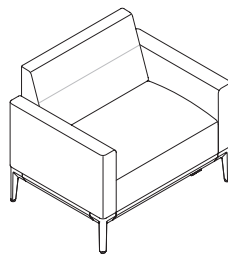


Bariatric Lounge Chair
ZYLNB

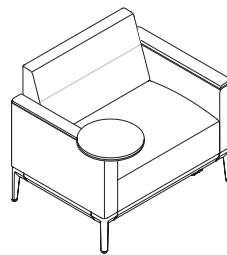


Bariatric Lounge Chair with
Removable Swivel Tablet
(left-side facing)
ZYLNBTLRA

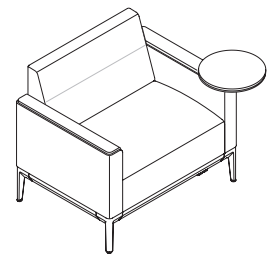


Bariatric Lounge Chair with
Removable Swivel Tablet
(right-side facing)
ZYLNBTRRA

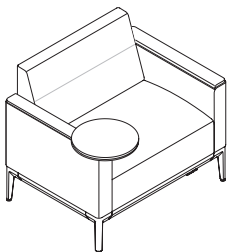


Bariatric Lounge Chair with
Non-Removable Swivel Tablet
(left-side facing)
ZYLNBTLNR

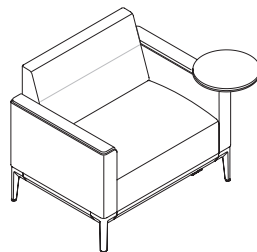


Bariatric Lounge Chair with
Non-Removable Swivel Tablet
(right-side facing)
ZYLNBTRNR

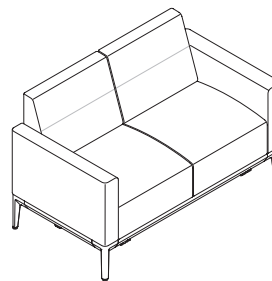


Lounge Loveseat
ZYLNC

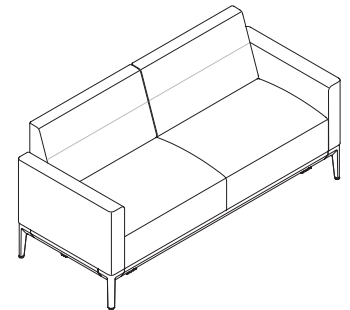


Bariatric Lounge Loveseat
ZYLNB

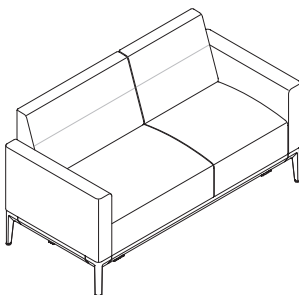


Lounge Loveseat
Bariatric Left/Standard Right
ZYLNBC

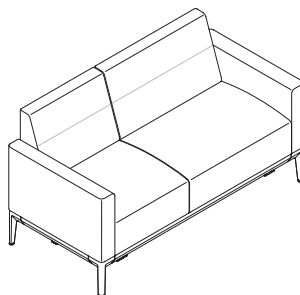

Lounge Loveseat
Standard Left/Bariatric Right
ZYLNCB

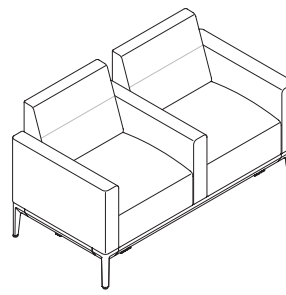


Tandem Lounge Loveseat
ZYLACC

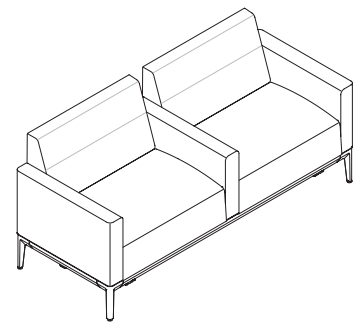


Tandem Bariatric Lounge Loveseat
ZYLABB

STATEMENT OF LINE


Zoetry Lounge Seating (cont.)

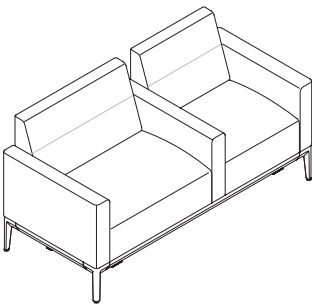


Tandem Lounge Loveseat
Bariatric Left/Standard Right
ZYLABC

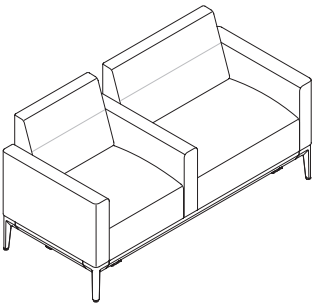


Tandem Lounge Loveseat
Standard Left/Bariatric Right
ZYLACB

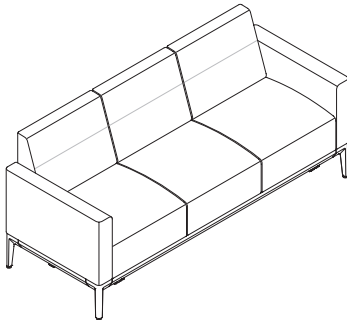


Lounge Sofa
ZYLNCCC

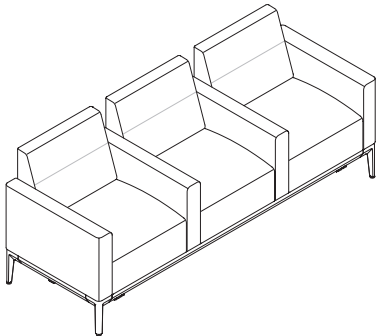


Tandem Lounge Sofa
ZYLACCC

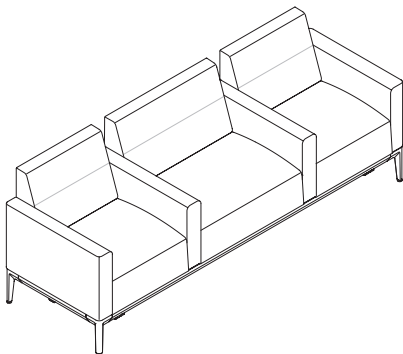


Tandem Lounge Sofa
Standard/Bariatric/Standard
ZYLACBC

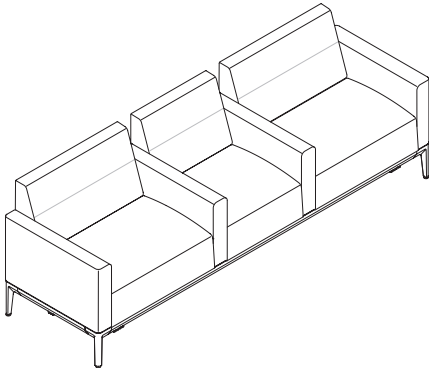


Tandem Lounge Sofa
Bariatric/Standard/Bariatric
ZYLACBB

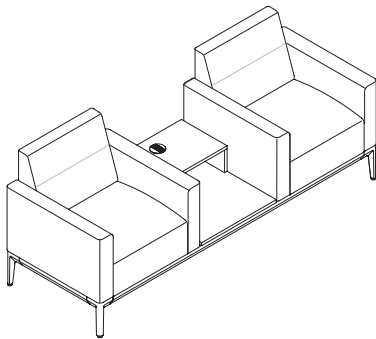


Tandem Lounge Sofa
Standard/Raised Table/Standard
ZYLACRC

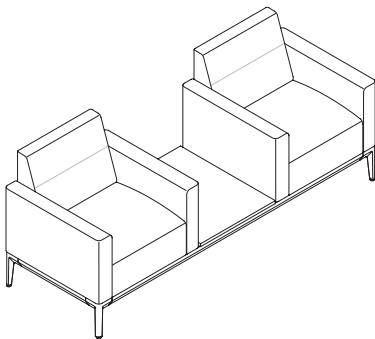

Tandem Lounge
Standard/Flat Table/Standard
ZYLACTC
ZYLACSC

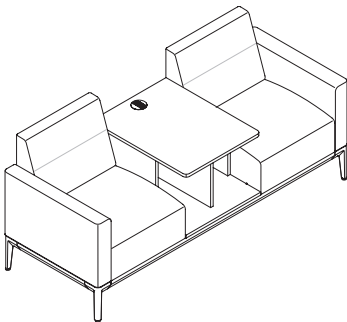


Lounge Sofa
Standard/Working-Height Table/Standard
ZYLNCWC

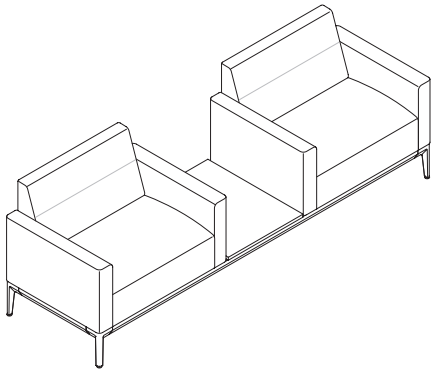


Tandem Lounge Sofa
Bariatric/Table/Bariatric
ZYLABTB
ZYLABSB

STATEMENT OF LINE


Zoetry Lounge Seating (cont.)

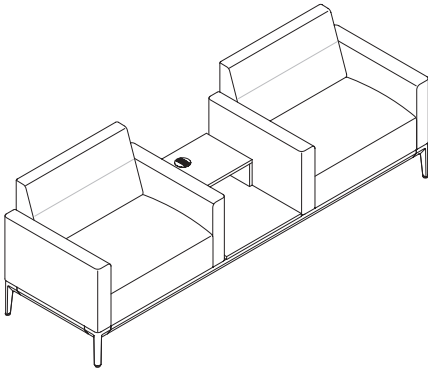


Tandem Lounge Sofa
Bariatric/Raised Table/Bariatric
ZYLABRB

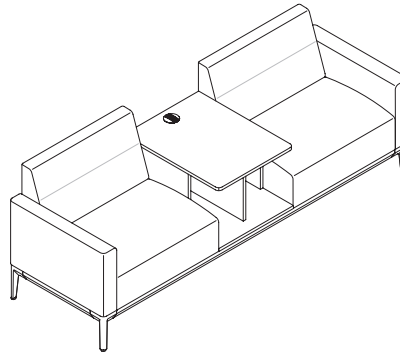


Lounge Sofa
Bariatric/Working-Height Table/Bariatric
ZYLNBWB

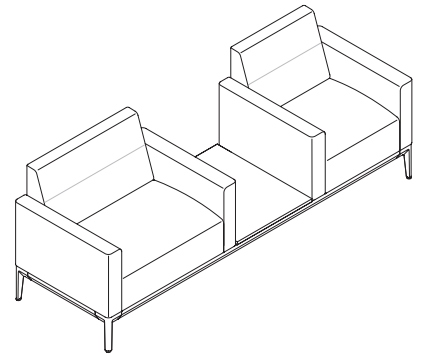


Tandem Lounge Sofa
Bariatric/Table/Standard
ZYLABTC
ZYLABSC

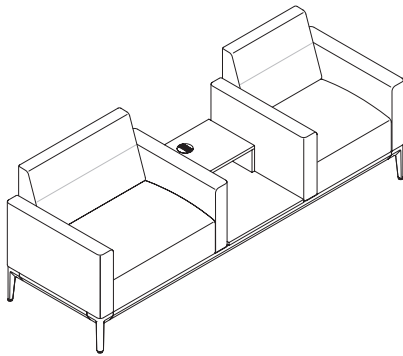


Tandem Lounge Sofa
Bariatric/Raised Table/Standard
ZYLABRC

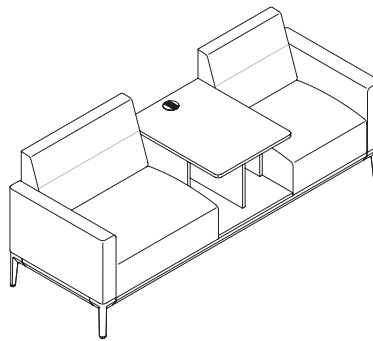


Lounge Sofa
Bariatric/Working-Height Table/Standard
ZYLNBWC

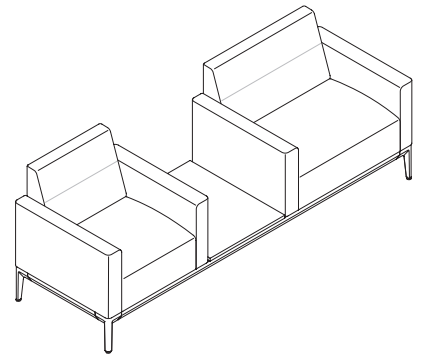


Tandem Lounge Sofa Standard/Table/Bariatric
ZYLACTB
ZYLACSB

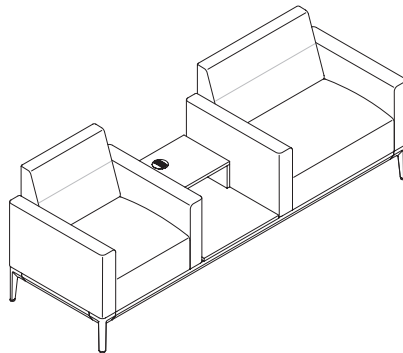

Tandem Lounge Sofa
Standard/Raised Table/Bariatric
ZYLACRB

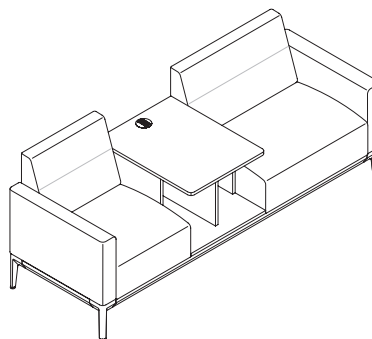


Lounge Sofa
Standard/Working-Height Table/Bariatric
ZYLNCWB

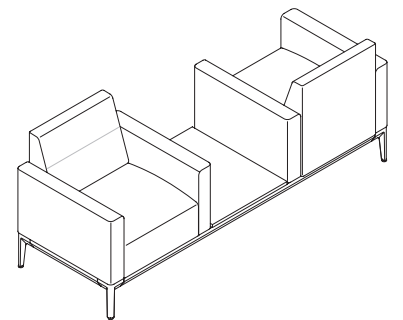


Lounge Opposing Orientation
Standard/Table/Standard (Left)
ZYLACTCL
ZYLACSL

STATEMENT OF LINE


Zoetry Lounge Seating (cont.)

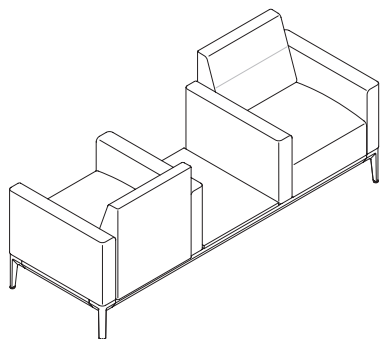


Lounge Opposing Orientation
Standard/Table/Standard (Right)
ZYLACTCR
ZYLACSCR

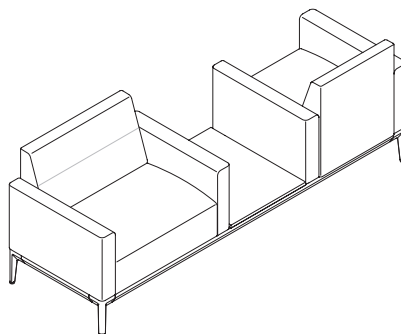


Lounge Opposing Orientation
Bariatric/Table/Standard (Left)
ZYLBTCL
ZYLABSCL

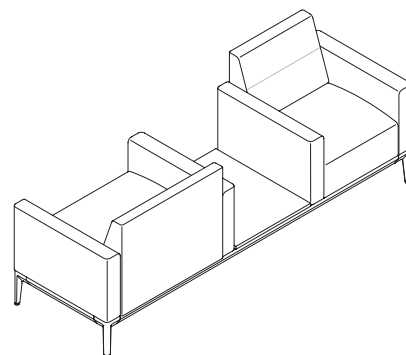

Lounge Opposing Orientation
Bariatric/Table/Standard (Right)
ZYLBTCR
ZYLABSCR

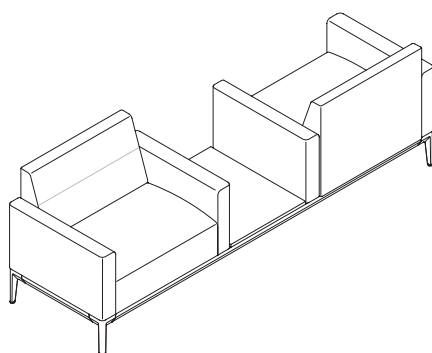


Lounge Opposing Orientation
Bariatric/Table/Bariatric (Left)
ZYLBTBL
ZYLABSBL

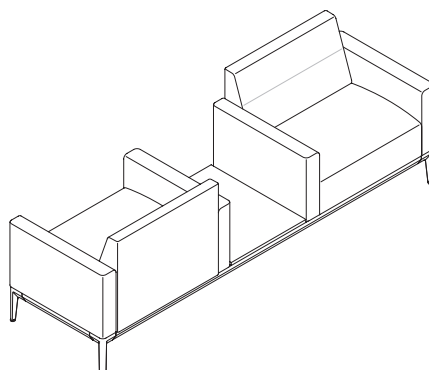


Lounge Opposing Orientation
Bariatric/Table/Bariatric (Right)
ZYLBTBR
ZYLABSBR

STATEMENT OF LINE


Zoetry Lounge Seating with Privacy Screens

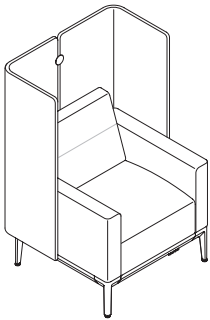


Lounge Chair (Privacy)
ZYPNC

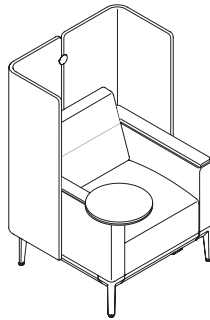


Lounge Chair (Privacy)
with Removable Swivel Tablet
(left-side facing)
ZYPNCTLRA

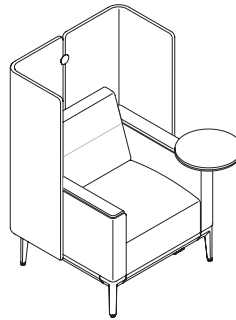


Lounge Chair (Privacy)
with Removable Swivel Tablet
(right-side facing)
ZYPNCTRRA

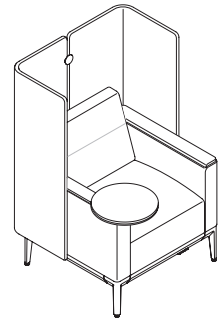


Lounge Chair (Privacy) with
Non-Removable Swivel Tablet
(left-side facing)
ZYPNCTLNR

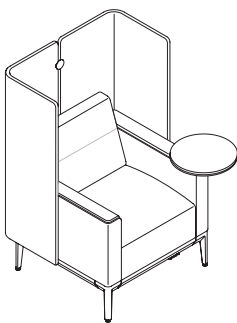


Lounge Chair (Privacy) with
Non-Removable Swivel Tablet
(right-side facing)
ZYPNCTRNR

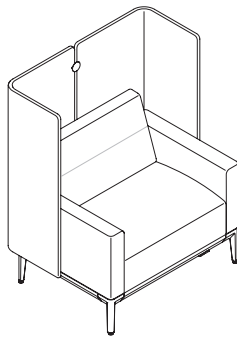


Bariatric Lounge Chair (Privacy)
ZYPNB

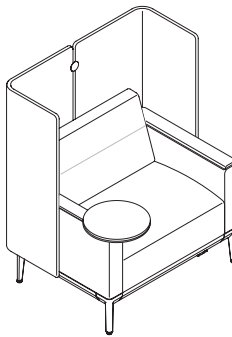


Bariatric Lounge Chair (Privacy)
with Removable Swivel Tablet
(left-side facing)
ZYPNBTLRA

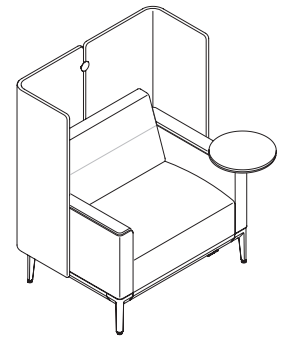


Bariatric Lounge Chair (Privacy)
with Removable Swivel Tablet
(right-side facing)
ZYPNBTRRA

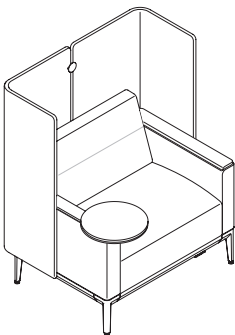


Bariatric Lounge Chair (Privacy) with
Non-Removable Swivel Tablet
(left-side facing)
ZYPNBTLNR

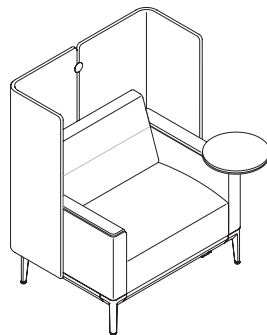

Bariatric Lounge Chair (Privacy) with
Non-Removable Swivel Tablet
(right-side facing)
ZYPNBTRNR

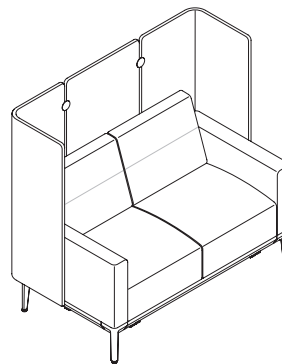


Lounge Loveseat (Privacy)
ZYPNCC

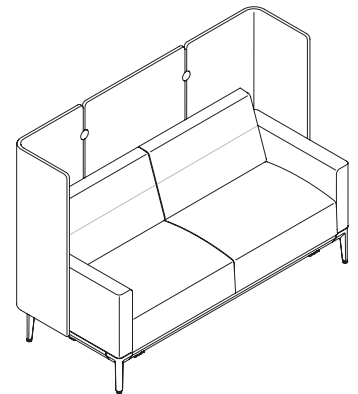


Bariatric Lounge Loveseat (Privacy)
ZYPNB

STATEMENT OF LINE


Zoetry Lounge Seating with Privacy Screens (cont.)

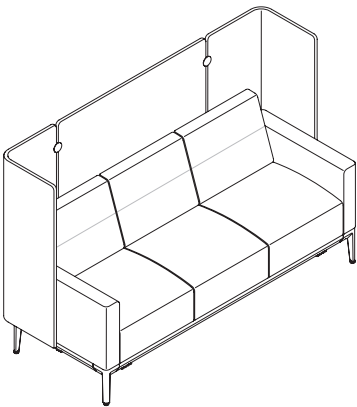


Lounge Sofa (Privacy)
ZYPNCCC

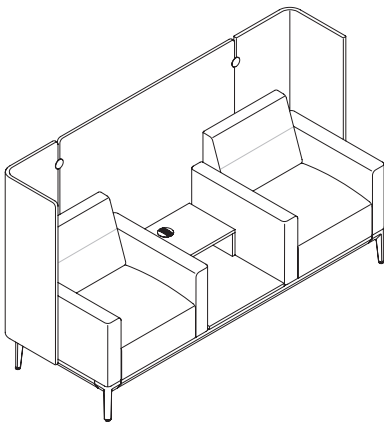


Tandem Lounge
Standard/Raised Table/Standard (Privacy)
ZYPACRC

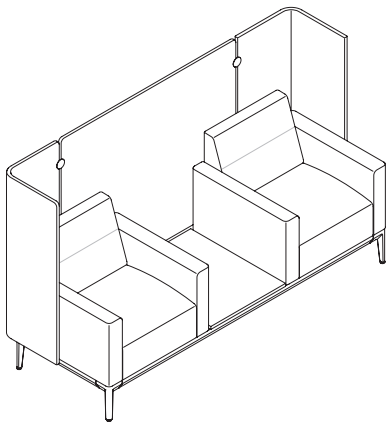


Tandem Lounges
Standard/Flat Table/Standard (Privacy)
ZYPACTC
ZYPACSC

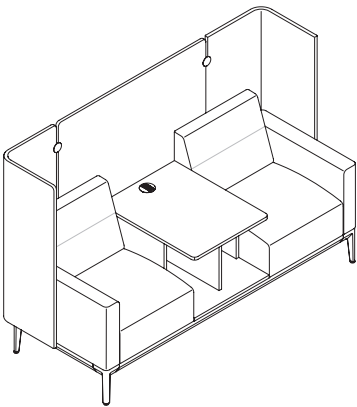

Lounge Sofa Standard/
Working-Height Table/Standard (Privacy)
ZYPNCWC

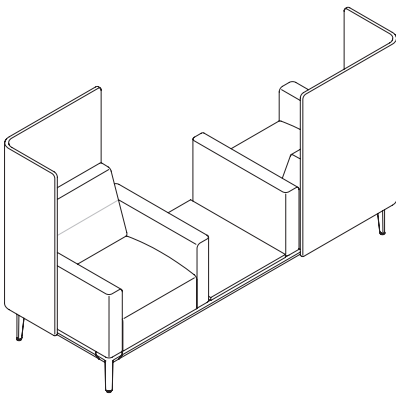


Lounge Opposing Orientation
Standard/Table/Standard (Privacy)
ZYPACTCL
ZYPACSL

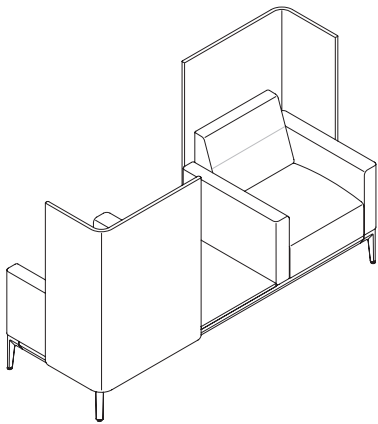


Lounge Opposing Orientation
Standard/Table/Standard (Privacy)
ZYPACTCR
ZYPACSCR

STATEMENT OF LINE


Zoetry Benches

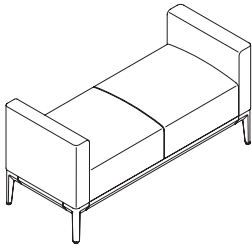


Bench with Arms
Two Standard Seats
ZYBNCC

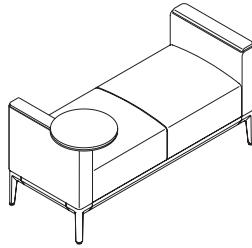


Bench with Arms
Two Standard Seats
with Removable Swivel Tablet
(left-side facing)
ZYBNCCTLRA

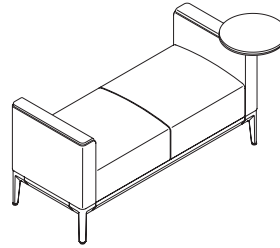


Bench with Arms
Two Standard Seats
with Removable Swivel Tablet
(right-side facing)
ZYBNCCTTRA

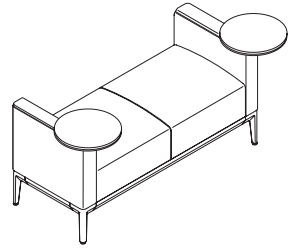


Bench with Arms
Two Standard Seats
with Two Removable Swivel Tablets
ZYBNCCTBRA

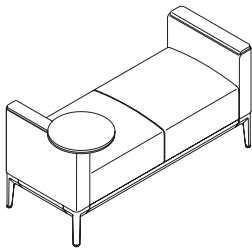


Bench with Arms
Two Standard Seats
with Non-Removable Swivel Tablet
(left-side facing)
ZYBNCCTLNR

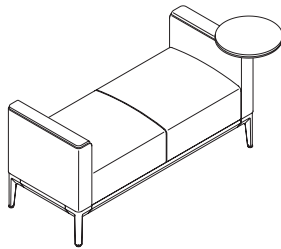


Bench with Arms
Two Standard Seats
with Non-Removable Swivel Tablet
(right-side facing)
ZYBNCCTRNR

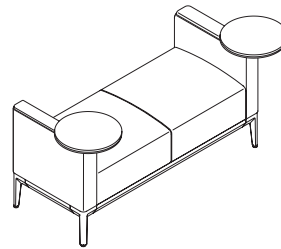


Bench with Arms
Two Standard Seats
with Two Non-Removable
Swivel Tablets
ZYBNCCTBNR

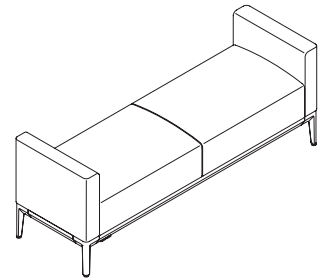


Bench with Arms
Two Bariatric Seats
ZYBNBB

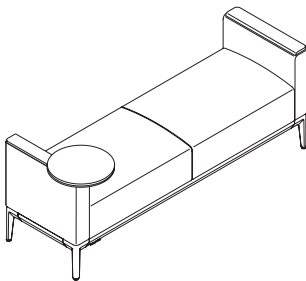


Bench with Arms
Two Bariatric Seats
with Removable Swivel Tablet
(left-side facing)
ZYBNBBTLRA

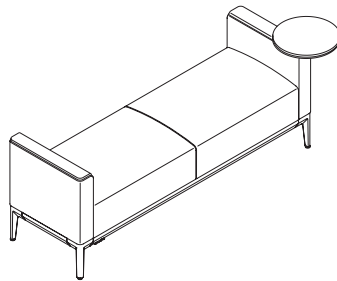


Bench with Arms
Two Bariatric Seats
with Removable Swivel Tablet
(right-side facing)
ZYBNBBTRRA

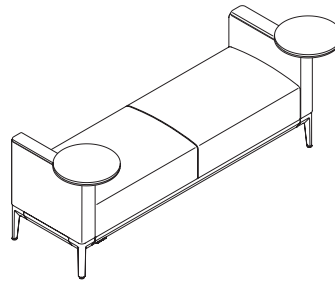


Bench with Arms
Two Bariatric Seats
with Two Removable Swivel Tablets
ZYBNBBTBRA

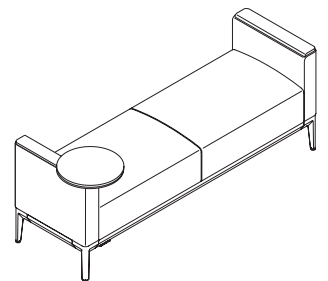


Bench with Arms
Two Bariatric Seats
with Non-Removable Swivel Tablet
(left-side facing)
ZYBNBBTLNR

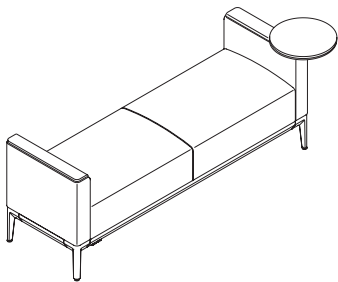


Bench with Arms
Two Bariatric Seats
with Non-Removable Swivel Tablet
(right-side facing)
ZYBNBBTRNR

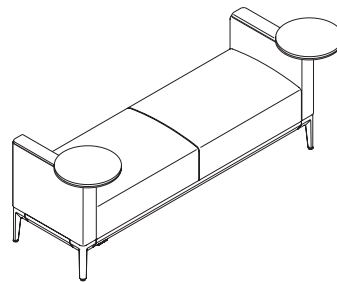

Bench with Arms
Two Bariatric Seats
with Two Non-Removable
Swivel Tablets
ZYBNBBTBNR

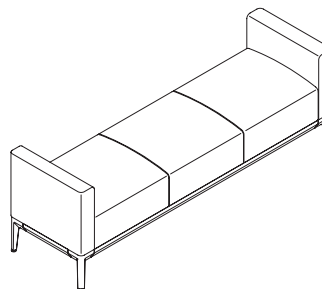


Bench with Arms
Three Standard Seats
ZYBNCCC

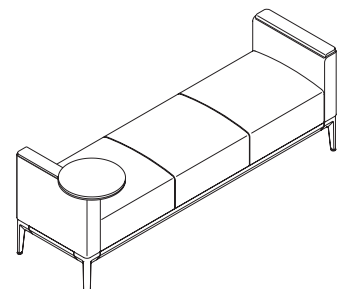


Bench with Arms
Three Standard Seats
with Removable Swivel Tablet
(left-side facing)
ZYBNCCCTLRA

STATEMENT OF LINE


Zoetry Benches (cont.)

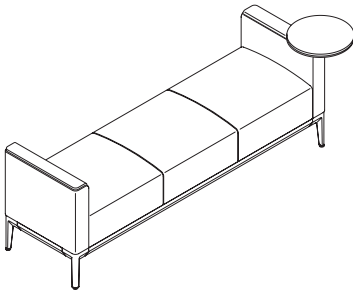


Bench with Arms
Three Standard Seats
with Removable Swivel Tablet
(right-side facing)
ZYNCCCTTRA

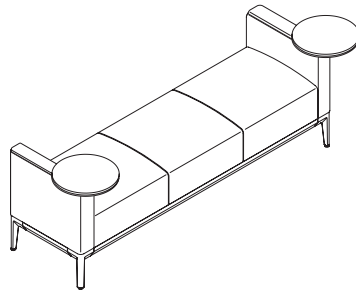


Bench with Arms
Three Standard Seats
with Two Removable Swivel Tablets
ZYNCCCTBRA

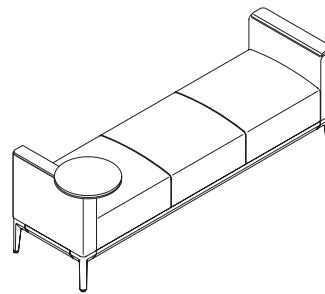


Bench with Arms
Three Standard Seats
with Non-Removable Swivel Tablet
(left-side facing)
ZYNCCCTI NR

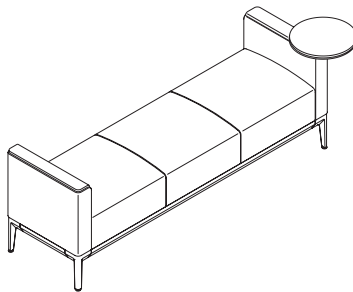


Bench with Arms
Three Standard Seats
with Non-Removable Swivel Tablet
(right-side facing)
ZYNCCCTRNR

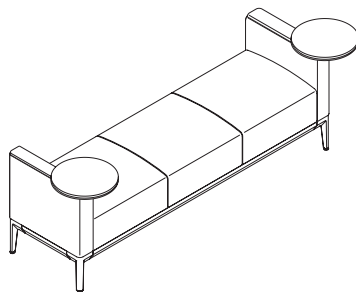


Bench with Arms
Three Standard Seats
with Two Non-Removable Swivel Tablets
ZYNCCCTBNR

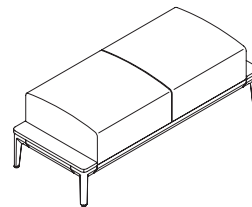

Bench
Two Standard Seats
ZYBXCC

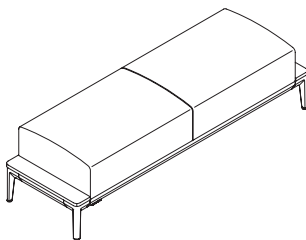


Bench
Two Bariatric Seats
ZYXBB

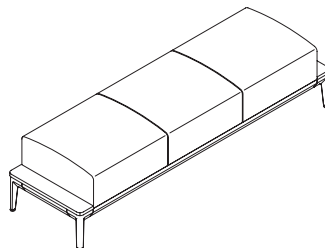


Bench
Three Standard Seats
ZYXCCC


Zoetry Freestanding Occasional Tables

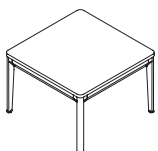


End Table 22" x 22"
ZYT2222S
ZYT2222T

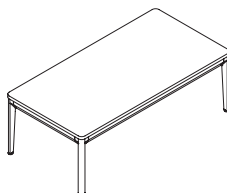

Cocktail Table 22" x 44"
ZYT2244S
ZYT2244T

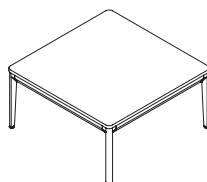

Cocktail Table 30" x 30"
ZYT3030S
ZYT3030T

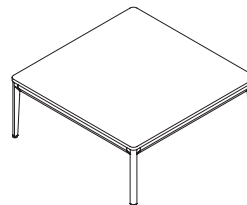

Cocktail Table 36" x 36"
ZYT3636S
ZYT3636T

CODE COMPLIANCE

