
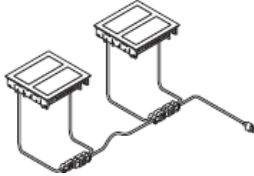


### Top Specification:

Power unit fits with tops of this size:


- Range of top width: 180" - 192"
- Number of bases: 3 Bases
- 10' Power infeed cord provides sufficient length to route through end or mid base. If additional infeed cord length is required to reach building outlet, Mid Location Infeed instructions are provided.
- Top Power two location cutout code CG2E

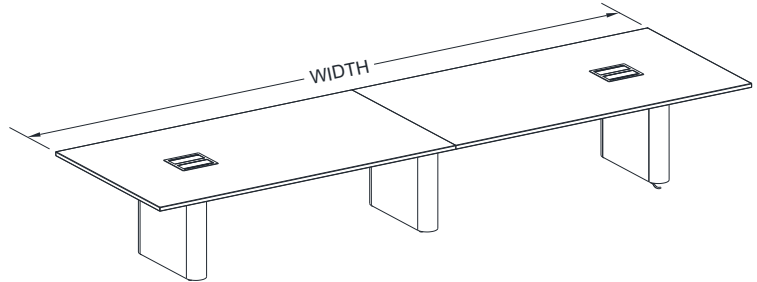


Ellora Double 9PCG82K2ECC Pattern 2-unit kit

### Kit Content: item (quantity)


- Ellora Double power units (2)
- 72" - Jumper (2)
- Power infeed - 15 amp plug (1)
- Splitter - grey (2)
- Splitter - black (1)
- Cable mounting clips (20)
- #6 x 5/8" mounting screws (30)

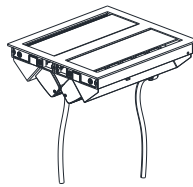

Ellora Double Power Unit

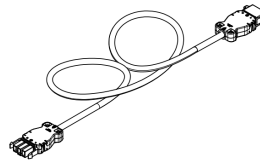


Jumper

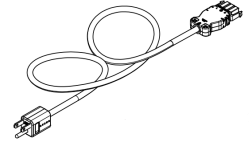


Power Infeed

### Tools Required:

- #2 Phillips Head 
- Drill 

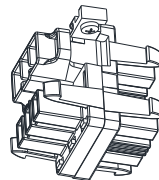

Splitter

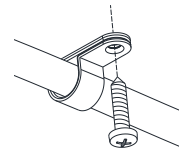


Cable Mounting Clip




Mounting Screw

### Connection Type

NOTE: Splitter must be used to connect cords

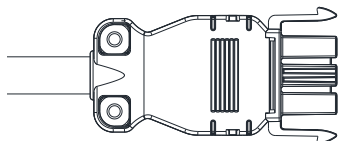


Male Connection

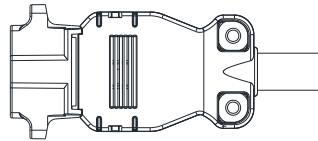


Female Connection

### Splitter

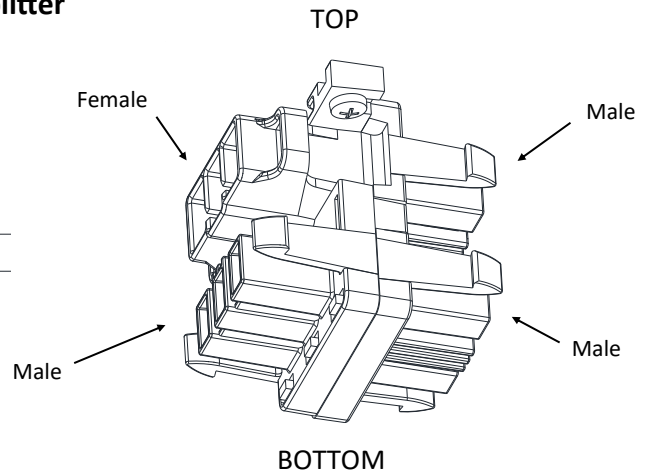


## Step 1 - Ellora Double installation to top


1. Attach 1 clip, at each end of unit base with short leg of clip sliding into recess.
2. Route Ellora Double unit connection cords through top cutouts as power unit is lowered into opening. As unit is pushed into the opening the clips will grip the top material wall.
3. Select adapter or blank cover for unit open window.  
The 12-pack data adapter kit has been provided with unit to support a variety of connection options.

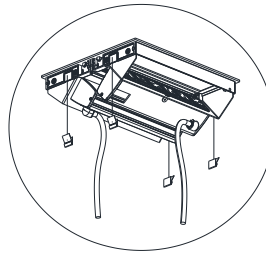

Detail 1

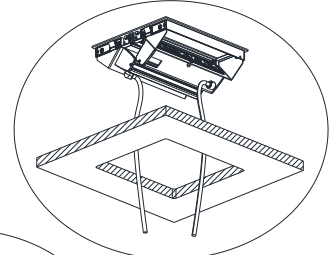

Detail 2

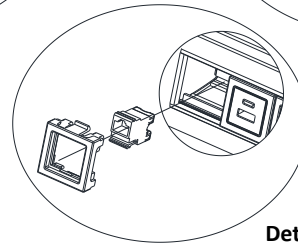

Detail 3

## Ellora Double - Power Connection - End Location Infeed



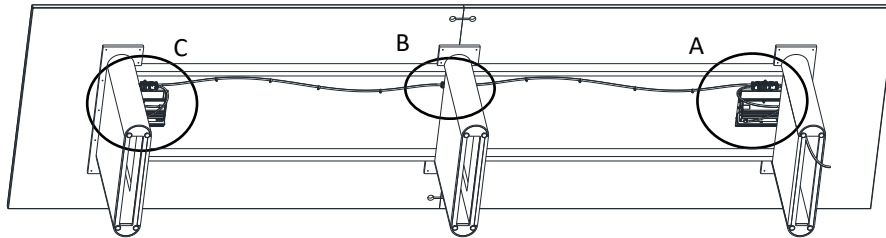



Table Diagram

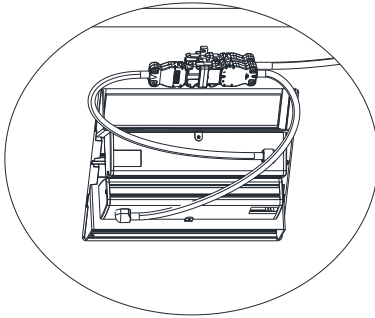

Detail C

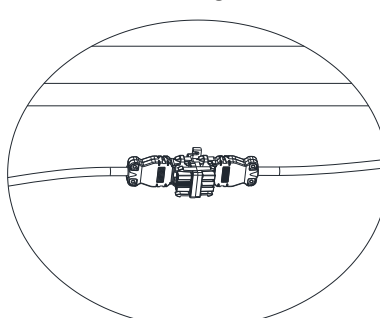

Detail B

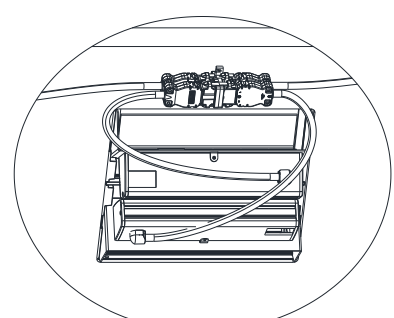


Detail A

## Step 2 - Connecting Ellora Double unit to power - End Location Infeed

1. Insert infeed male connector into splitter top female connection.
2. Insert 72" jumper female connector onto splitter top male connection.
3. Insert unit female connectors onto splitter bottom male connections.


Detail A

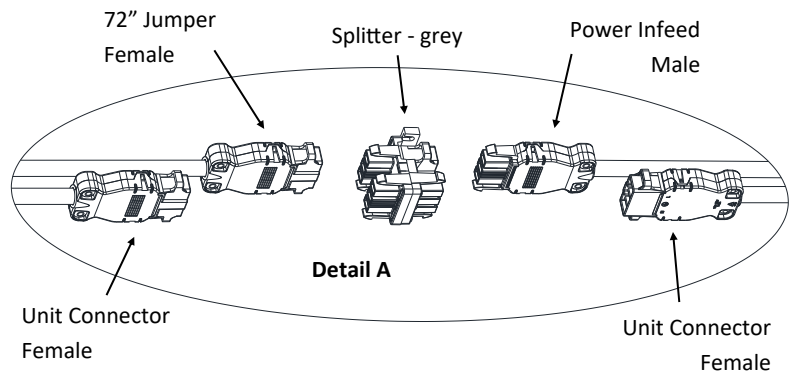

Detail A

### Step 3 - Connecting Ellora Double unit to power


1. Insert first 72" jumper male connector into splitter top female connection.
2. Insert second 72" jumper female connector onto splitter top male connection.

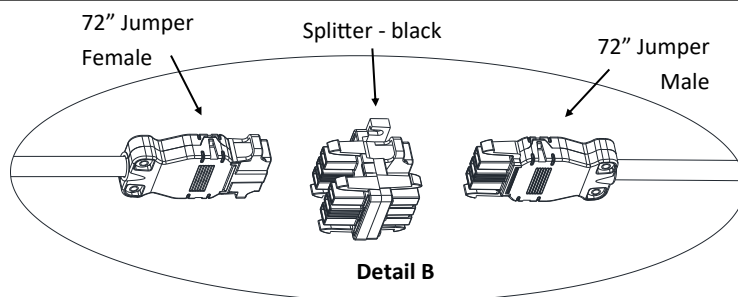

Detail B


### Step 4 - Connecting Ellora Double unit to power

1. Insert 60" jumper male connector into splitter top female connection.
2. Insert unit female connectors onto splitter bottom male connections.

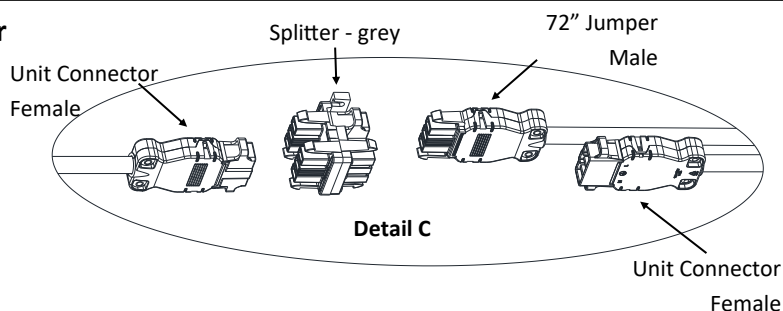

Detail C

### Ellora Double - Power Connection - Mid Location Infeed

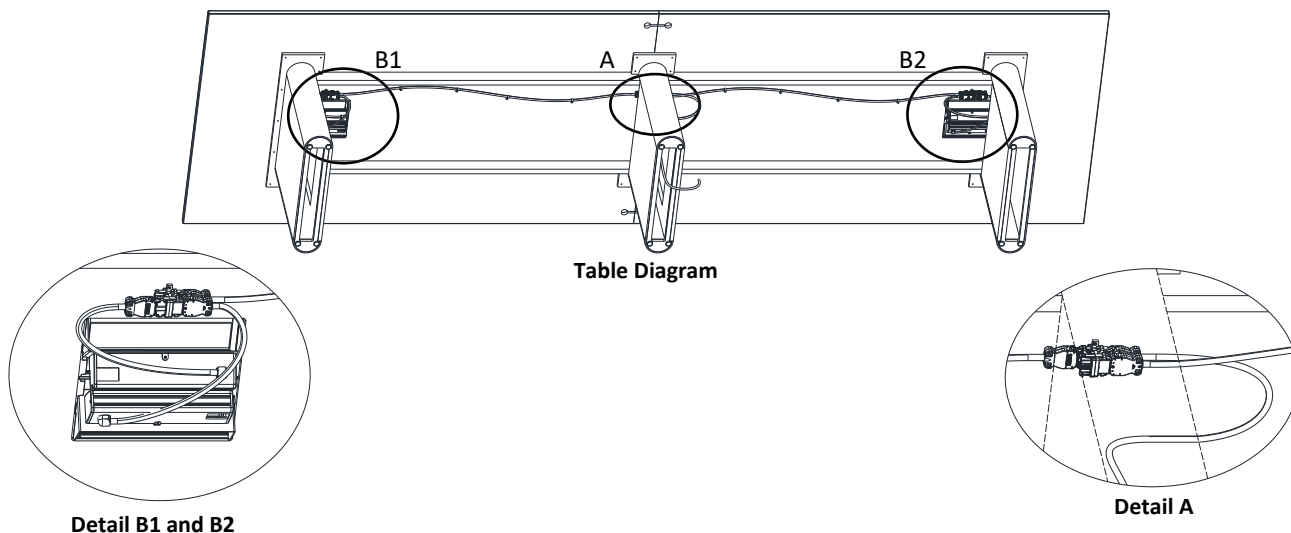


Detail B1 and B2

Detail A

### Step 2 - Connecting Ellora Double unit to power

1. Insert infeed male connector into splitter top female connection.
2. Insert first 72" jumper female connector onto splitter top male connection
3. Insert second 72" jumper female connector onto splitter male connection below infeed.

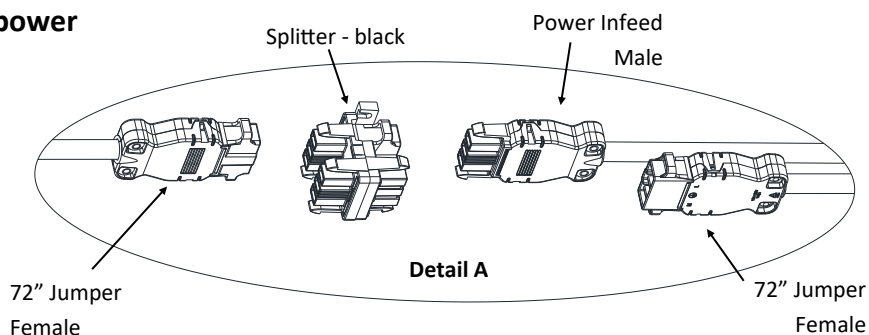


Detail A

### Step 3 - Connecting Ellora Double unit to power



1. Insert 72" jumper male connector into splitter top female connection.
2. Insert unit female connectors onto splitter bottom male connections.

Detail B1 and B2

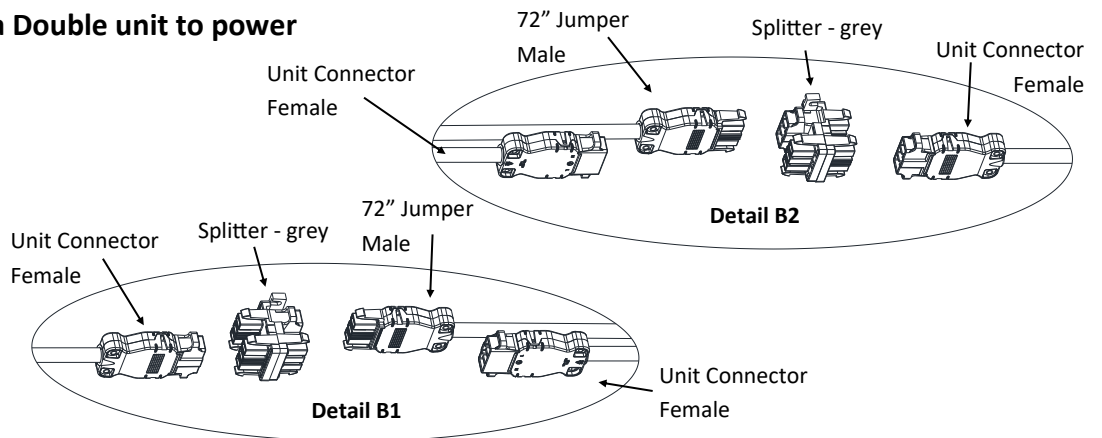

### Securing Connections and Cables

2. Position splitters to allow cables to route under top freely and install (2) #6 x 5/8" mounting screws to secure, do not over tighten as could damage splitter.
3. Install cable mounting clips along cables spacing no more than 18" apart with #6 x 5/8" mounting screws to secure unit and jumper cables.

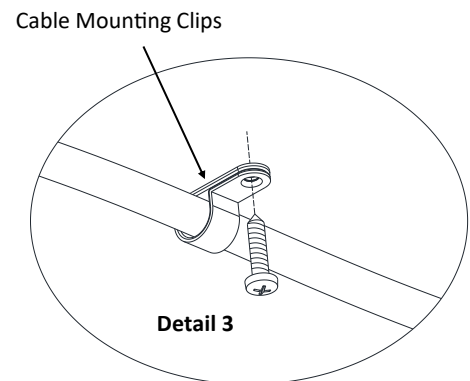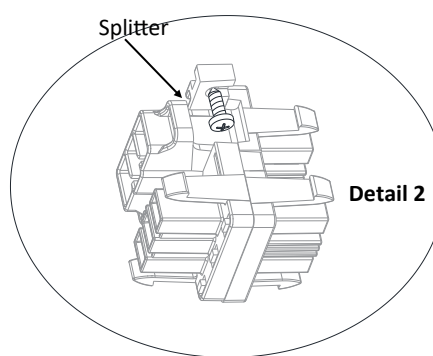

### Power Infeed Connection

1. Use cable clips to route the cord through the channel to the floor outlet. Secure excess cord in the vertical channel or to the table with clips.
2. Plug power infeed into building power source and check unit outlets to verify power.

